

User Manual

ADAM-6200 Series

Intelligent Ethernet I/O Module



KOLBINGER - PCQT - +43 2239 3160

AT-2384 Breitenfurt/Vienna, Hauptstrasse 93, office@kolbinger.at , www.pcqt.at

Copyright

The documentation and the software included with this product are copyrighted 2013 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Product Warranty

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For outof-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

- 1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
- 2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
- 3. If your product is diagnosed as defective, obtain an RMA (return merchandize authorization) number from your dealer. This allows us to process your return more quickly.
- 4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
- 5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Part No. 2003620001 Printed in Taiwan Edition 2 July 2015

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from Advantech. Please contact your local supplier for ordering information.

FCC Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Technical Support and Assistance

- 1. Visit the Advantech web site at www.advantech.com/support where you can find the latest information about the product.
- 2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Safety Instructions

- 1. Read these safety instructions carefully.
- 2. Keep this User Manual for later reference.
- 3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- 4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
- 5. Keep this equipment away from humidity.
- 6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
- 7. The openings on the enclosure are for air convection. Protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- 8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- 9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- 10. All cautions and warnings on the equipment should be noted.
- 11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
- 12. Never pour any liquid into an opening. This may cause fire or electrical shock.
- 13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
- 14. If one of the following situations arises, get the equipment checked by service personnel:
- The power cord or plug is damaged.
- Liquid has penetrated into the equipment.
- The equipment has been exposed to moisture.
- The equipment does not work well, or you cannot get it to work according to the user's manual.
- The equipment has been dropped and damaged.
- The equipment has obvious signs of breakage.
- 15. DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 60° C (140° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.
- 16. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.
- 17. The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Contents

Chapter	1	Product Overview	1
	1.1	Introduction	2
	1.2	Feature Highlights	3
		1.2.1 Easier Installation and Deployment	3
		1.2.2 Integrated automation application with IT technologies	5
		1.2.3 Excellent I/O application	5
		1.2.4 Effective Management	5
	1.3	ADAM-6200 Series Family	6
	1.4	Mechanical Design and Dimensions	7
	1.5	Switch	8
	1.6	LED Definition	8
	1.7	Certification and Safety Standard	9
	1.0 1.0	Flouuci Label	10 11
	1.10	Package Information	11
Chapter	2	Product Specifications	13
•	2.1	Conoral Specification	1.4
	2.1	Analog Input Module (ADAM-6217)	14 15
	2.2	2.2.1 Application Wiring	
		2.2.1 Application Willing	15 16
		2.2.2 Switch Setting	
	23	Analog Output Module (ADAM-6224)	
	2.0	2 3 1 Application Wiring	
		2.3.2 Pin Assignment	18
	24	Digital Input/Output Modules (ADAM-6250/6251/6256)	18
	2.7	2 4 1 Application Wiring	
		2.4.2 Pin Assignment	21
		2.4.2 Switch Setting	23
	25	Relay Output Modules (ADAM-6260/6266)	
	2.0	2.5.1 Application Wiring	25
		2.5.2 Pin Assignment	26
		2.5.3 Switch Setting	
Chapter	3	Hardware Installation	29
-	3.1	Interface Introduction	30
	3.2	Mounting	
	-	3.2.1 Panel Mounting	
		Figure 3.1 Bracket Dimension	
		Figure 3.2 Assembly with Bracket	
		3.2.2 DIN-Rail Mounting.	
		Figure 3.3 Assembly With Din Rail Adapter	32
		Figure 3.4 ADAM Module Mounted On A Rail	32
	3.3	Wiring & Connections	33
		3.3.1 Power Supply Wiring	33
		3.3.2 I/O Units	33
		3.3.3 Daisy Chain Connection	34

Chapter

ADAM	NET Utility (software)	38
Conne	ection	38
Config	ure ADAM-6200 with ADAM.NET Utility	39
4.3.1	Operation Framework	40
4.3.2	General Configuration	50
4.3.3	I/O Configuration	57
4.3.4	Peer to Peer	80
4.3.5	GCL	85
4.3.6	Remotely Monitoring and Control via Web Server	119

Appendix A 1.1 \mathbf{I}

A.1

B.1

C.1 C.2

4.1 4.2 4.3

U	NOOD	us ma	pping	lable	•••••	123
---	------	-------	-------	-------	-------	-----

I/O Mo	dbus Mapping Table	124
A.1.1	Modbus Function Code Introduction	124
A.1.2	ADAM-6217 8-ch Isolated Analog Input Module	124
A.1.3	ADAM-6224 4-ch Isolated Analog Output Module	129
A.1.4	ADAM-6250 15-ch Digital Input/Output Module	131
A.1.5	ADAM-6251 16-ch Digital Input Module	134
A.1.6	ADAM-6256 16-ch Digital Output Module	137
A.1.7	ADAM-6260 6-ch Relay Output Module	140

A.1.8 ADAM-6266 4-ch Relay Output Module with 4-ch DI 141

ADAM-6200 ASCII Commands...... 145 Appendix B

ASCII	Commands for ADAM-6200 modules	146
B.1.1	System Command Set	146
B.1.2	Analog Input Command Set	151
B.1.3	Analog Input Range code	160
B.1.4	Analog Input Alarm Command Set	160
B.1.5	Analog Output Command Set	169
B.1.6	Analog Output Range code	174
B.1.7	Digital Input/Output Command Set	174

Appendix C REST for ADAM-6200......179

Introdu	iction	180
REST	Resources for ADAM	180
C.2.1	Analog Input	180
C.2.2	Analog Output	182
C.2.3	Digital Input	185
C.2.4	Digital Output	186



Product Overview

1.1 Introduction

The ADAM-6200 series is a new ADAM Ethernet I/O family and includes analog I/O, digital I/O and relay modules. Not limited to equipment with robust I/O functions, Advantech gets Ethernet switch involved in hardware design to make user easily deploy ADAM module with daisy chain connection and the connection is protected by auto-bypass when power outage occurs.Users are also able to monitor and control ADAM-6200 modules remotely by smart phone or pad in field maintenance. Advantech believes that, with new design and strong capabilities, ADAM-6200 can be a well-integrated I/O solution in Ethernet control system.



1.2 Feature Highlights

1.2.1 Easier Installation and Deployment

Daisy Chain connection with auto-bypass protection

ADAM-6200 module has built in Ethernet switches to allow daisy chain connections in an Ethernet network, making it easier to deploy, and helping improve scalability. The two Ethernet ports are fully compliant with IEEE 802.3u 10/100Mbpst through standard RJ-45 connectors

Although daisy chain topology brings attractive benefits for users, it still comes with the risk that once any device in the daisy-chain network suffers power outage, it will cause the disconnection of all devices downstream..



Note! Auto-bypass protection



To prevent this critical issue from happening, Advantech especially refined the hardware design of ADAM-6200 so that it can rapidly recover the network connection in about 2.5 seconds, and endure for 4 days after module power outage. Therefore, the damage will be greatly minimized.

Group Configuration

In certain application scenarios, it's necessary to set multiple modules with the same settings because these modules are doing the same tasks on different sites. Users have to set configurations of module one after another before on-site deployment. After the modules are installed and the system is running, it will still require repetitive effort to carry out firmware updates.

The ADAM-6200 series modules are equipped with group configuration capability to reduce the repetitive effort and quickly finish the multiple module setups, including firmware upgrades, configuration and HTML 5 files, at one time. Users can start the implementation of modules faster as the time for configuration is tremendously reduced.



1.2.2 Integrated automation application with IT technologies

Remote Monitoring and Control with Smart Phone/Pad

Previously, due to different communication modes and data formats, it wasn't easy to implement automation control and monitor in an IT-based infrastructure. Users need to build up a data converter to transform I/O data stream from SCADA system to IT database/management system.

The ADAM-6200 series module integrates the latest Web language (HTML 5) and Web-based software style (REST) with basic authentication for users to remotely acquire I/O data in any Web service of smart device without routing from SCADA system, for example, user can use Web browser of smart phone to remotely access I/O module via HTTP. Furthermore, it also can be implemented in Web API by REST access instruction.



HTML 5

Hyper Text Markup Language (HTML) is popularly used to program the content of Web page over the Internet. The fifth version (HTML 5) is the latest revision which enhances its syntax structure and additionally mixes multiple Web technologies like CSS, Java Script to implement more Web service, API, interactive applications in mobile communications.

1.2.3 Excellent I/O application

- Graphical Control Logic (GCL)
- Peer-to-Peer function
- User-defined Modbus address

1.2.4 Effective Management

- User Access Control
- Configuration file backup
- Reset to factory default

1.3 ADAM-6200 Series Family

Category	Model	Description
	ADAM-6217	8-ch Isolated Analog Input Modbus TCP Module
Analog I/O	ADAM-6224	4-ch Isolated Analog Output Modbus TCP Module
	ADAM-6250	15-ch Isolated Digital I/O Modbus TCP Module
Digital I/O	ADAM-6251	16-ch Isolated Digital Input Modbus TCP Module
	ADAM-6256	16-ch Isolated Digital Output Modbus TCP Module
Polov	ADAM-6260	6-ch Relay Output Modbus TCP Module
Relay	ADAM-6266	4-ch Relay Output Modbus TCP Module with 4-ch DI

Chapter 1 Product Overview

1.4 Mechanical Design and Dimensions



1.5 Switch

It's non-functional now, but reserved for future use.



1.6 LED Definition

LED	Color	Indication	Behavior	
	Green (Status)	0.5 second ON 0.5 second OFF	Module is normally at work.	
Status/Com	· · /	Always 10 sec ON	When user enable LOCATE function.	
	Yellow (Com)	Blink	When TX/RX data in transmission.	
	Green	ON	Ethernet is connected.	
Link/Speed 1	ColorIndicationGreen (Status)0.5 second 0.5 second 0.5 second Always of ONYellow (Com)BlinkGreen (Link 1)ONGreen (Link 2)ONGreen (Link 2)ONGreen (Link 2)ONGreen (Link 2)ONGreen (Link 2)ONGreen 	Blink	When TX/RX is in transmission	
	Yellow (Speed 1)	ON	ec When user enable LOCATE function. When TX/RX data in transmission. Ethernet is connected. When TX/RX is in transmission ON: Ethernet speed is at 100 Mbps OFF: Ethernet speed is less than 100 Mbps Ethernet is connected. When TX/RX is in transmission ON: Ethernet speed is less than 100 Mbps Ethernet is connected. When TX/RX is in transmission ON: Ethernet speed is at 100 Mbps OFF: Ethernet speed is less than 100 Mbps OFF: Ethernet speed is less than 100 Mbps	
	Green	ON	Ethernet is connected.	
Link/Speed 2	(Link 2)	Blink	When TX/RX is in transmission	
·	Yellow (Speed 2)	ON	ON: Ethernet speed is at 100 Mbps OFF: Ethernet speed is less than 100 Mbps	
DI	Green	ON / OFF	Logic 1 / Logic 0	
DO	Orange	ON / OFF	Logic 1 / Logic 0	
RL	Orange	ON / OFF	Logic 1 / Logic 0	

1.7 Certification and Safety Standard

- FCC
 - FCC 47 CFR PART 15 (Class A)
 - IC ICES-003
- CE
 - EN 55011 / 55022 (Class A)
 - EN 61000-6-4
 - EN 61000-3-2
 - EN 61000-3-3
 - EN 55024
 - EN 61000-6-2
 - IEC 61000-4-2
 - IEC 61000-4-3
 - IEC 61000-4-4
 - IEC 61000-4-5
 - IEC 61000-4-6
 - IEC 61000-4-8
 - IEC 61000-4-11
 - RoHS
- China RoHS
- WEEE

1.8 Product Label





1.9 Front Name Plate



1.10 Package Information

The package of ADAM-6200 series module will contain the following items.

Please check and feel free to contact us if any part missing or damaged after purchasing ADAM-6200 product.

- ADAM-6200 module (assembled with DIN Rail)
- Product CD
- Panel mounting bracket
- Start-up manual
- China RoHS declaration

ADAM-6200 User Manual



Product Specifications

2.1 General Specification

Item	Description
Ethernet	2-port 10/100 Base-TX (for Daisy chain)
Protocol	Modbus TCP, TCP/IP, UDP, HTTP, DHCP
LED Indication	ADAM-6217: Status/Com, Link/Speed ADAM-6224: Status/Com, Link/Speed ADAM-6250: Status/Com, Link/Speed, 8x DI, 7x DO ADAM-6251: Status/Com, Link/Speed, 16x DI ADAM-6256: Status/Com, Link/Speed, 16x DO ADAM-6260: Status/Com, Link/Speed, 6x RL ADAM-6266: Status/Com, Link/Speed, 4x RL, 4x DI
Connector	Plug-in 5P/15P screw terminal blocks. Accepts wire size #14~22 AWG ,stripped length: 5 mm
Power Input	10 - 30 V _{DC} (24 V _{DC} standard)
Watchdog Timer	System (1.6 second) and Communication (Programmable)
Dimension	110 x 60 x 27 mm
Protection	Built-in TVS/ESD protection Power Reversal protection Over Voltage protection: +/- 35 V _{DC} Isolation protection: 2500 V _{DC}
Power consumption	ADAM-6217: 3.5W @24 V_{DC} ADAM-6224: 6.0W @24 V_{DC} ADAM-6250: 3.0W @24 V_{DC} ADAM-6251: 2.7W @24 V_{DC} ADAM-6256: 3.2W @24 V_{DC} ADAM-6260: 4.5W @24 V_{DC}
Operating temperature	-10 ~ 70°C (14 ~ 158°F)
Storage temperature	-20 ~ 80°C (-4 ~ 176°F)
Operating Humidity	20 ~ 95% RH (Non-condensing)
Storage Humidity	0 ~ 95% RH (Non-condensing)
Feature Highlights	Daisy chain connection with auto-bypass protection. Remote monitoring and control with smart phone/pad. Group configuration capability for multiple module setup. Flexible user-defined Modbus address. Intelligent control ability by Peer-to-peer and GCL function Multiple protocol support: Modbus TCP, TCP/IP, UDP, HTTP, DHCP Web language support: XML, HTML 5, Java Script System configuration backup User Access Control

2.2 Analog Input Module (ADAM-6217)

Analog Input	Description
Channel	8 (Differential)
Voltage Input Range	±150 mV, ±500 mV, ±1 V, ±5 V, ±10 V
Current Input Range	±20 mA, 0 ~ 20 mA, 4 ~ 20 mA
Input Impedance	> 10 MΩ (Voltage) 120 Ω (Current)
Accuracy	±0.1% of FSR (Voltage) ±0.2% of FSR (Current)
Resolution	16-bit
Sampling Rate (Total)	10 samples/second
CMR @ 50/60 Hz	92 dB
NMR @ 50/60 Hz	60 dB
Span Drift	±30 ppm/°C
Zero Drift	±6 µV/°C
Common-Mode Voltage	200 V _{DC}
Other Functions	Independent Channel Range Type Independent Channel Enable Function Current Input Open-wired Detect Function Analog Input High/Low Alarm Function Historical Max/Min Value, Average Value



Warning! 1. The maximum input voltage range is +/- 10V. In order to avoid causing system errors and damaging the ADAM module, make sure the input voltage is within +/- 11V.

> 2. The default setting of switch is voltage. To prevent system damage, make sure the switch and input signal are consistent.

2.2.1 Application Wiring



2.2.2 Pin Assignment:



2.2.3 Switch Setting



Switch	SW1		SW2		SW3		SW4			
Position	1	2	1	2	1	2	1	2		
Channel	Ch1	Ch0	Ch3	Ch2	Ch5	Ch4	Ch7	Ch6		
ON	Curre	nt Mode	1		-					
OFF	Voltag	Voltage Mode (Default)								

2.3 Analog Output Module (ADAM-6224)

Analog Output	Description
Channel	4
Voltage Output Range	±5 V, ±10 V, 0~5 V, 0~10 V
Current Output Range	0 ~ 20 mA, 4 ~ 20 mA
Driving Load	Voltage: Min. 2kΩ Current: Max. 500 Ω
Output Impedance	2.1 Ω
Accuracy	0.3% of FSR (Voltage) at 25°C 0.5% of FSR (Current) at 25°C
Resolution	12-bit
Output settling Time	20 µs
Programmable Output Slope	0.125 – 128 mA/sec 0.0625 – 64 V/sec
Other Functions	Independent Channel Range Type Current Output Open-wired Detect Function Startup Value Setting Communication Safety Value Setting Digital Input Trigger Analog Output Function
Digital Input	Description

Channel	4
Dry Contact	Logic 0: Open Logic 1: Closed to Iso.GND
Other Functions	Support DI Filter Support Inverted DI Status Support Trigger to Startup or Safety Value

2.3.1 Application Wiring



2.3.2 Pin Assignment



2.4 Digital Input/Output Modules (ADAM-6250/6251/ 6256)

Digital Input	Description
Channel	ADAM-6250: 8 ADAM-6251: 16
Dry Contact	Logic 0: Open Logic 1: Closed to DGND
Wet Contact	Logic 0: 0 ~ 3 V_{DC} or 0 ~ -3 V_{DC} Logic 1: 10 ~ 30 V_{DC} or -10 ~ -30 V_{DC}
Input Impedance	5.2 kΩ (wet contact)
Transition Time	0.2 ms
Frequency Input Range	0.1 ~ 3kHz
Counter Input	3kHz (32-bit+1-bit overflow)
Other Functions	Keep/Discard Counter value when power off Support Inverted DI status

Digital Output	Description
Channel	ADAM-6250: 7 (Sink Type) ADAM-6256: 16 (Sink Type)
Output Voltage Range	10 ~ 30 V _{DC}
Normal Output Current	100 mA (per channel)
Pulse Output	Up to 5kHz
Delay Output	High-to-Low and Low-to-High

2.4.1 Application Wiring

Isolated Digital Input (6250/6251) Dry Contact



Isolated Digital Output

ADAM-6250





2.4.2 Pin Assignment

ADAM-6250



ADAM-6251







2.4.3 Switch Setting

ADAM-6250



Switch	SW1					SW2			
Position	1	2	3	4	1	2	3	4	
DI Channel	Ch3	Ch2	Ch1	Ch0	Ch7	Ch6	Ch5	Ch4	
ON	Dry C	ontact (Default)						
OFF	Wet c	ontact							

ADAM-6251



Switch	SW1					SW2			
Position	1	2	3	4	1	2	3	4	
DI Channel	Ch3	Ch2	Ch1	Ch0	Ch7	Ch6	Ch5	Ch4	
Switch	SW3				SW4				
Position	1	2	3	4	1	2	3	4	
DI Channel	Ch11	Ch10	Ch9	Ch8	Ch15	Ch14	Ch13	Ch12	
ON	Dry Contact (Default)								
OFF	Wet contact								

2.5 Relay Output Modules (ADAM-6260/6266)

Relay Output	Description
Channel	ADAM-6260: 5 Form C and 1 Form A ADAM-6266: 4 Form C
Contact Rating	250 V _{AC} @ 5A 30 V _{DC} @ 5 A
Max. Switching Voltage	400 V _{AC} 300 V _{DC}
Max. Breaking Capacity	1250 VA
Frequency of Operation	360 operations/hour with load 72,000 operations/hour without load
Set/Reset Time	8 ms/8 ms
Mechanical Endurance	> 15 x 10 ⁶ operations
Isolation between Contact:	1000 V _{rms}
Contact Resistance	< 30 mΩ
Insulation Resistance	> 10 GΩ @ 500 V _{DC}

Digital Input	Description
Channel	ADAM-6266: 4
Dry Contact	Logic 0: Open Logic 1: Closed to DI COM
Wet Contact	Logic 0: 0 ~ 3 V _{DC} or 0 ~ -3 V _{DC} Logic 1: 10 ~ 30 V _{DC} or -10 ~ -30 V _{DC}
Input Impedance	5.2 kΩ (wet contact)
Transition Time	0.2 ms
Frequency Input Range	0.1 ~ 3kHz
Counter Input	3kHz (32-bit+1-bit overflow)
Other Functions	Keep/Discard Counter Value when power off Support Inverted DI Status

2.5.1 Application Wiring

Isolated Digital Input Dry Contact



Wet Contact



Isolated Relay Output



2.5.2 Pin Assignment







2.5.3 Switch Setting



Switch	SW2				
Position	1	2	3	4	
DI Channel	Ch0	Ch1	Ch2	Ch3	
ON	Dry Contact (Default)				
OFF	Wet c	ontact			

ADAM-6200 User Manual



Hardware Installation

3.1 Interface Introduction


3.2 Mounting

ADAM-6200 modules are designed as compact units and are allowed to be installed in the field site under the following methods.

3.2.1 Panel Mounting

Each ADAM-6200 Module is packed with a plastic panel mounting bracket. User can refer the bracket dimension and assembling figure to configure an optimal placement in a panel or cabinet.



Figure 3.1 Bracket Dimension



Figure 3.2 Assembly with Bracket

3.2.2 DIN-Rail Mounting

The ADAM-6200 module can also be fixed to the cabinet by using mounting rails. You need to assemble the DIN rail adapter to ADAM-6200 module with flathead screwdriver as below. When the module is mounted on a rail, you may also consider using end brackets at each end of the rail to keep the module from sliding horizontally along the rail.



Figure 3.3 Assembly With Din Rail Adapter



Figure 3.4 ADAM Module Mounted On A Rail

3.3 Wiring & Connections

This section introduces basic information on wiring the power supply, I/O units, and Ethernet connection.

3.3.1 Power Supply Wiring

The system of ADAM-6200 is designed for a standard industrial unregulated 24 V_{DC} power supply. For further application, it can also accept +10 to +30 V_{DC} of power input, 200mV peak to peak of power ripple, and the immediate ripple voltage should be maintained between +10 and +30 V_{DC} .

Screw terminals +Vs and -Vs are for power supply wiring





The wires used should be at least 2 mm.



3.3.2 I/O Units

The system uses a plug-in screw terminal block for the interface between I/O modules and field devices. The following information must be considered when connecting electrical devices to I/O modules.

- 1. The terminal block accepts wires from 0.5 mm to 2.5 mm.
- 2. Always use a continuous length of wire. Do not combine wires.
- 3. Use the shortest possible wire length.
- 4. Use wire trays for routing where possible.
- 5. Avoid running wires near high-energy wiring.
- 6. Avoid running input wiring in close proximity to output wiring.
- 7. Avoid creating sharp bends in the wires.

3.3.3 Daisy Chain Connection

In early stage of industrial automation field, most users used to deploy their automation environment as serial communication RS-422/RS-485 interface. The typical connection mode with RS-422/RS-485 is field connection. That presents each device can be connected one after one in one line.

Since each ADAM-6200 module has already built in Ethernet switch, user can easily connect each ADAM-6200 module with standard Ethernet cable as following roughly diagram shows.



The benefits of Daisy chain topology

- Easily expands the module in existing deployment.
- Helps improve flexibility of I/O deployment, save wiring cost and space.
- Auto-bypass provides reliable communication networking.



- 1. The average latency from one module to another: 15 20 μs:

2.

Typically, the maximum cabling distance of each 100BASE-TX network segment is 100 meters. Based on this limitation, the maximum total connection length of daisy chain wiring should also be 100m when auto-bypass protection active. See the following figure as an example, the distance from the first to the second module is 50m, so is the second to third. When the power fails on second (middle) module, the auto-bypass will activate to bridge the network connection. The total distance from first to the third will become 100m, that means the total network segment is close to its limit.



Furthermore, due to the characteristics of signal transmission, the continuous auto-bypass nodes should be less than two, so that the network communication in the daisy chain will work.



3. The purpose of the auto-bypass protection is to help users minimize the damage caused by a module power outage. Note that when a power outage occurs on ADAM-6200 modules, there is around a 2.5 second buffer time for internally switching to the autopass circuit. This means that Ethernet packets can't reach the other devices in the daisy-chain for around 2.5 seconds. The valid connection duration after the auto-bypass function is enabled is at most around four days, otherwise, the Ethernet communication will be interrupted until power is restored.

ADAM-6200 User Manual



System Configuration

4.1 ADAM.NET Utility (software)

ADAM.NET Utility, which is designed with graphical operation interface, is aimed to offer users directly configure, control ADAM module, and monitor the real-time status of remote ADAM module via Ethernet or Wireless connection.

You can find ADAM.NET utility and user manual from ADAM product CD. To keep you informed with latest update, you also can check it from the following download link on Advantech website.

http://support.advantech.com.tw/Support/DownloadSRDetail.aspx?SR_ID=1-2AKUDB

Note! Before installing ADAM.NET Utility, you need to install .NET Framework 2.0 or higher version.



- System requirement
 - Microsoft Windows XP/7
 - At least 32 MB RAM
 - 20 MB of hard disk space available
 - VGA color or higher resolution monitor
 - 2x or higher speed CD-ROM
 - Mouse or other pointing devices
 - 10/100 Mbps or higher Ethernet Card

4.2 Connection

- 1. Plug DC power source in +Vs, -Vs pin of ADAM module and turn the power on.
- 2. Connect your computer to Ethernet port (either 1 or 2) of ADAM module with RJ-45 cross-over Ethernet cable. (see below figure.)



Chapter 4 System Configuration

4.3 Configure ADAM-6200 with ADAM.NET Utility

After you've finished the connection between ADAM-6200 module and Host PC, you can use ADAM.NET utility to configure.

1. Install ADAM.NET Utility in your computer. (After successfully installation, there will be a shortcut generated on the screen)



2. Double click the shortcut icon, and then you will see the main operation window as below.

Adverter & deer (Americ SIET LIKER, (MC-	221/4-51-5-2.05.00 (014)
Advantech Adam/Apax .NET Utility (Win	12) Version 2.05.00 (B14)
File Tools Setup Help	
🕒 🗟 🤊 🐮 🗲 🐌 🖿 🖤 👘	
Effernet 172.18.3.67 Others Fevorite Group ADAMASOU_S510Series Wireless Sensor Networks	Information Support Module: ADAM-4000 Series ADAM-4011 ADAM-4011D ADAM-4012 ADAM-4015 ADAM-4015 ADAM-4017 ADAM-4017 ADAM-4018 ADAM-4018 ADAM-4019 ADAM-4018 ADAM-4018 ADAM-4019 ADAM-4018 ADAM-4018 ADAM-4019 ADAM-4018 ADAM-4018 ADAM-4019 ADAM-4018 ADAM-4021 ADAM-4024 ADAM-4021 ADAM-40221 ADAM-4053 ADAM-4053 ADAM-4052 ADAM-4060 ADAM-4055 ADAM-40563 ADAM-4060 ADAM-4054 ADAM-40563 ADAM-4060 ADAM-4054 ADAM-40568 ADAM-4060 ADAM-4054 ADAM-40568 ADAM-5000 ADAM-4059 ADAM-4521 ADAM-500004805 ADAM-4586 ADAM-50004805 ADAM-50004805 ADAM-50004805 ADAM-50004805 ADAM-50004805 ADAM-50004805 ADAM-50004805 ADAM-50004805 ADAM-50004805 ADAM-50004805 ADAM-50004060
ADAIVI/APAA	

3. Click Search Module icon in Toolbar. You will see all online modules in the left Module Tree screen and an unconfigured new module, whose default password is 00000000, will appear on the Others section as below. Now you can define the network mode of the module in the beginning. After that, you will be able to perform other settings.



The default password is 0000000

Serial Ethemet 172.18.3.122 172.18.3.40-[ADAM-6217] 172.18.3.230-[WA-A6066] 172.18.3.230-[WA-A6050] 172.18.3.232-[WA-A6050] 172.18.3.232-[WA-A6050] 172.18.3.232-[WA-A6052] 172.18.3.237-[WA-A6018] 172.18.3.237-[WA-A6018] 172.18.3.237-[WA-A6017] Others Others Others ADAM4500_5510Series Wireless Sensor Networks	Setting -Network setting: MAC address : IP address : Subnet Address : Default gateway :	00-D0-C9-FF-FF-3B 10.0.0.1 255.0.0.0 0.0.0	Apply change Configured © Static © DHCP
--	--	---	---

4.3.1 Operation Framework

The operation window mainly contains 4 areas, including Menu, Toolbar, Module Tree screen and Main Operation screen.

📉 Advantech Adam/Apax .NET Utility (Win3:	2) Version 2.05.00 (B14)	
File Tools Setup Help	Menu	
	Foolbar	
Buernet 172.18.3.67 O Others Provorite Group ADAM4500_5510Series Wireless Sensor Networks Module Tree screen	Information Support Module: ADAM-4000 Series ADAM-4011 ADAM-4011D ADAM-4011 ADAM-4011F ADAM-4017 ADAM-4018 ADAM-4017 ADAM-4018 ADAM-4019 ADAM-4018 ADAM-4019 ADAM-4011 ADAM-4019 ADAM-4011 ADAM-4019 ADAM-4011 ADAM-4019 ADAM-4011 ADAM-4019 ADAM-4051 ADAM-4022 ADAM-4052 ADAM-4033 ADAM-4055 ADAM-4060 ADAM-405680 ADAM-4060 ADAM-4053 ADAM-4060 ADAM-405680 ADAM-4080 ADAM-4059 ADAM-4080 ADAM-4058 ADAM-4080 ADAM-4059 ADAM-4080 ADAM-4058 ADAM-5000 ADAM-4059 ADAM-5000 ADAM-4059 ADAM-50000E Adam is a trademark of Advantech Co,. Ltd.	Main Operation screen

4.3.1.1 Menu

a. File

Open Favorite Group

You can import the favorite configuration group file (.XML) from your computer.

Save Favorite Group You can save the favorite group configuration group as XML file to your computer.

Auto-Initial Group

If you want to have the same favorite group configuration when you exit ADAM.NET utility and launch it again, you need to check this option.

Exit

Exit ADAM.NET Utility.

b. Tools

Search Device

Search all the ADAM modules you connected in local Ethernet.

Add Devices to Group

It's used to add ADAM modules to your favorite group. After activating search function, all online modules will show on Module Tree Screen area. Now you can enable this function to select the device you want to add in the Module Tree Screen.

Group Configuration

Group Configuration is on ADAM-6200 series module. It can help you efficiently configure or maintain massive ADAM modules with the same configuration file or firmware upgrade at one time in the local network. The following steps will instruct you how to operate it.

Case 1. If you want to upgrade your module's firmware.

- 1. Select Firmware.
- 2. Select I/O module
- 3. Click Browse button to import the firmware file from your computer.
- 4. Choose which module you're going to change its setting and enter password.
- 5. Click Apply button to activate it, and then you will see the operating progress on the Status area.





 	100000	

🚯 Group Configuration					×
Configuration Option Firmware C Configuration					
Select I/O module Source Browse					
Status	Model	MAC Address	Device Name	IP Address	Password
	ADAM-6250	00-D0-C9-FF-FF-D5	ADAM-6250	10.0.2.50	10000010
Select all module Refresh					
				Apply	Exit

Note!



Please do not remove the power of your module when group configuration function is processing. Otherwise, the module system will probably crash. **Case 2**. If you want to duplicate your module's configuration to others.

(Before launching it, you need to export the configuration file to your computer in advance)

- 1. Select Configuration.
- 2. Select I/O module
- 3. Click Browse button to import the configuration file from your computer.
- 4. Choose which module you're going to change its setting and enter password.
- 5. Click Apply button to activate it, and then you will see the operating progress on the Status area.

🐞 Group Configuration						×
Configuration Option C Firmware (Configuration						
Select I/O module Source ADAM-6250 Source Module Online :						
Status	Model	MAC Address	Device Name	IP Address	Password	Apply Config. IP
F 💶	ADAM-6250	00-D0-C9-FF-FF-AF	ADAM-6250	172.18.3.108		
	ADAM-6250	00-D0-C9-FF-FF-0B	ADAM-6250_T	172.18.3.150		
Select all module						
	gir Kenesi					
					Арр	ly Exit

Note!

Do not remove the power of your module when group configuration function is processing. Otherwise, the module system will probably crash.

Terminal for Command Testing

ADAM-6200 series module support ASCII command and Modbus/TCP as communication protocol, so you can launch the terminal to directly communicate with ADAM-6200 series module by these two protocols.

🖳 Adam Comma	nder		×
Device IP: Connect timeout:	100.0.17 •	Adam Type	Connect
Send timeout: Receive timeout: Scan interval:	2000 ms 1000 ms 1000 ms	 Adam-5000 Adam-6000 Adam-6200 Apax-5000 Coupler 	
Advantech ASCII Command:	MODBUS		Continuously
Response: History:			Send Send UDP/TCP UDP TCP

Advantech ASCII	MODBUS	
Command:		🔲 Continuously
Response:		Send
History:		Send UDP/TCP C UDP © TCP

	1		1		
Device ID:	1 :	Address	Value		
MODBUS type:	,	00001	U 0 0		
01: Coil status	•	00004	0		
Address:	1 .	00005 00006 00007	0 0		
Length:	8 +	00008	U		
Number of polls:	0				
Valid response:	0				
Stopped		,		Start	

Double click the address can modify the value of coil or register:

🔄 Write coil		
Device ID:	1 .	Update
Address:	1 ÷	
Value:	0 .	

💿 Write register		×
Device ID:	1 ÷	Update
Address:	1 ÷	
Value:	32767 ÷	

Print Screen

You can save current ADAM.NET Utility screen into an image file by this option.

Monitor Stream/Event Data

This function will indicate real-time I/O data status of one module on your preset host computers/servers. (The Host IP address and data update schedule can be configured in the Stream tab of Status display area.)

Data type: 💿 Stream		
IP address: 10.0.0.17	 Port: 5168	Stop
Receiving Data		
$\begin{array}{l} \mbox{At 18:17:52 Count:1} \\ \mbox{At 18:17:52 Count:2} \\ \mbox{At 18:17:52 Count:3} \\ \mbox{At 18:17:52 Count:5} \\ \mbox{At 18:17:52 Count:6} \\ \mbox{At 18:17:53 Count:6} \\ \mbox{At 18:17:53 Count:7} \\ \mbox{At 18:17:53 Count:10} \\ \mbox{At 18:17:53 Count:10} \\ \mbox{At 18:17:53 Count:11} \\ \mbox{At 18:17:53 Count:12} \\ \mbox{At 18:17:53 Count:12} \\ \mbox{At 18:17:53 Count:13} \\ \mbox{At 18:17:53 Count:14} \\ \mbox{At 18:17:53 Count:15} \\ \mbox{At 18:17:53 Count:16} \\ \mbox{At 18:17:53 Count:17} \\ \mbox{At 18:17:53 Count:16} \\ \mbox{At 18:17:53 Count:17} \\ \mbox{At 18:17:53 Count:18} \\ \mbox{At 18:17:53 Count:19} \\ \mbox{At 18:17:53 Count:20} \\ \mbox{At 18:17:53 Count:21} \\ \mbox{At 18:17:53 Count:22} \\ \mbox{At 18:17:53 Count:22} \\ \mbox{At 18:17:53 Count:23} \\ \mbox{At 18:17:53 Count:24} \\ \mbox{At 18:17:54 Count:25} \\ \mbox{At 18:17:54 Count:26} \\ $	 HOST [10.0.0.17] AI[0]: Data=0x7FFF, Max=0x800F, Min=0x8002 AI[1]: Data=0x7FF8, Max=0x8019, Min=0x8008 AI[2]: Data=0x7FF8, Max=0x8019, Min=0x8005 AI[3]: Data=0x7FF8, Max=0x8012, Min=0x800C AI[4]: Data=0x7FFF, Max=0x800C, Min=0x8002 AI[5]: Data=0x7FF5, Max=0x8015, Min=0x800F AI[6]: Data=0x7FF5, Max=0x8015, Min=0x8008 AI[7]: Data=0x7FFB, Max=0x8012, Min=0x8008 Ave=0x8001 	

Monitor Peer-to-Peer (Event Trigger) This function will indicate the Peer-to-Peer status and historical message when it enabled.

Monitor GCL IO Data Message

This function will indicate GCL I/O data status when it enabled.

🖃 GCL IO Data and Message	×
Port (Default:5168): 5168	Stop
History Message D6:20:27 Start listening At 18:20:27 IP:10.0.0.17 SeqNum:55 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:56 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:59 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:59 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:59 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:69 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:61 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:62 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:62 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:62 Rule:1 Output1 OpVal At 18:20:28 IP:10.0.0.17 SeqNum:63 Rule:1 Output1 OpVal At 18:20:29 IP:10.0.0.17 SeqNum:67 Rule:1 Output1 OpVal At 18:20:29 IP:10.0.0.17 SeqNum:72 Rule:1 Output1 OpVal At 18:20:29 IP:10.0.0.17 SeqNum:73 Rule:1 Output1 OpVal At 1	Data Information IO Data AT: Dx?FED , 0x?FED , 0x?FED , 0x?FED , 0x?FED , 0x?FED , 0x?FED , DC: Dx00000000 Message Demo of GCL remote message
	/

c. Setup

Favorite Group

You can configure your favorite group including add one new device, modify or delete one current device, sort current devices and diagnose connection to one device.

Refresh Serial and Ethernet

ADAM.NET utility will refresh the serial and LAN network connection situation.

Add COM Ports

This option is used to add serial COM ports in ADAM.NET Utility. You won't need to use this option for ADAM-6000/6100/6200 modules.

Show TreeView

Check this option to display the Module Tree Screen area.

Allow Calibration

Check this option to allow calibration function enabled on AI/O module.

d. Help

Check Up-to-Date on the Web

It will automatically connect to support and download page of Advantech website when it enabled. You can find and download the latest version of ADAM utility there.

About Adam.NET Utility The surrout version of ADAM NET Utility is installed on your compute

The current version of ADAM.NET Utility is installed on your computer.

4.3.1.2 Toolbar

There are 8 graphical icons for common used options of Menu on the toolbar.



Definition (from left to right)

- 1. Open favorite group
- 2. Save favorite group
- 3. Search Modules
- 4. Add Devices to Group
- 5. Terminal for Command Testing
- 6. Group Configuration
- 7. Monitor Data Stream/Event
- 8. Print Screen

4.3.1.3 Module Tree Screen

The Module Tree Screen locates on the left part of ADAM.NET utility operation window. There are four categories in this area:

Serial

All serial I/O Modules (ADAM-4000 and ADAM-5000 RS-485 serial modules) connected to the host PC will be listed in this category.

Ethernet

All Ethernet I/O Modules (ADAM-6000, ADAM-6100, ADAM-6200 and ADAM-5000 TCP modules) connected to the host PC will be listed in this category.

Favorite Group

You can define which devices listed in the three categories above into your personal favorite group. This will make you easier to find your interested modules. Right click on the ADAM device item under the Favorite Group item and you can select Add New Group to create a new group. After you create your own group, right click on your group and Add New Device into your group. You can also select Diagnose connection to check the communication.

ADAM-4500_5510 Series

This is a DOS interface utility for remote controllers such as ADAM-4500 and ADAM-5510 series.

Wireless Sensor Networks

All wireless I/O Modules (ADAM-2000 modules) connected to the host PC, through wireless gateway, will be listed in this category.

4.3.1.4 Main Operation Screen

Main Operation Screen located on the right side of utility includes I/O status display and function setting. You can select different items in Module Tree Screen, and then Main Operation Screen will change dependently. You can do all configurations and test in this area.

In Information page (after clicking Ethernet), you can configure Connection/Send/ Receive/Scan Timeout. The supervisor password is a shortcut to let you enter a password at one time which's applied for certain modules, so you don't need to enter the same password for each module when you check it.

🔀 Advantech Adam/Apax .NET Utility (Win32)	Version 2.05.00 (B14)				
File Tools Setup Help					
🕒 🔄 🔍 📲 🍠 🏇 🕨 💼 💷					
Serial Serial 172.18.3.154-[ADAM-6256] 172.18.3.154-[ADAM-6256] 172.18.3.154-[ADAM-6217] 46 6217 GCL 172.18.3.230-[WA-A6066] 172.18.3.232-[WA-A6060] 172.18.3.232-[WA-A6051] 172.18.3.234-[WA-A6051] 172.18.3.235-[WA-A6024-1] 172.18.3.236-[WA-A6012] 172.18.3.26-[WA-A6012] 172.18.2.26-[WA-A6012] 172.18.2.206-[Information Host name: Adapter: Connection timeout: Send timeout: Scan interval: Supervisor password: Support Module : [APAX-5070 APA [ADAM-5000 Series] ADAM-5000 Series] «Wired Series» ADAM-60015 ADJ ADAM-60015 ADJ ADAM-60015 ADJ ADAM-6000 ADJ [ADAM-6100 Series]	NE000832 172.18.3.67 2000 ms 2000 ms 1000 ms 1000 ms x x <td>ADAM-6022 ADAM-6052</td> <td>Apply</td> <td></td>	ADAM-6022 ADAM-6052	Apply	

4.3.2 General Configuration

4.3.2.1 Information

It indicates basic information of ADAM-6200 module.

nformatio	on Network S	tream Administration Firmware Peer to Peer/Event Access	s Control Modbus Address
Firmware	Version: A1	1.00 B02	Locate Enable
Device N	ame:	DAM-6250	Åpply
Device D	Description:		ADAM Web Page -
Descript	ion		
Slot	Module	Description	
	0200	APAN-0220 12-01 Robated (USIN 110 Indoffie	

Firmware Version

Indicates the current Firmware version of ADAM-6200 module.

Device Name

Means model name of ADAM-6200 module. You also can rename it for recognition if required.

Device Description

You can add comments on this module for recognition.

Locate

It can help user search ADAM module with light sign. (Status LED will be constantly on for 10 sec when it enabled.)

ADAM Web Page

It allows users to access Web page of ADAM module by QR code application software (APP) on smart phone/pad.



For all AI/O modules, its AIO firmware version will also show in this page.

μa

AIO Firmware Versiion: A1.02

4.3.2.2 Network

You can set up required network connection on this page.

Information Network Str	ann 1 é Iministration 1	Firmware Dear to Bear/Fire	nt Access Control Modbus Address
-Network Setting	ean Acummentanou	Linumate Leel ID Leelving	
Metwork Setting			
MAC Address:	00-D0-C9-FF-FF-3B		Apply
IP Address:	172.18.3.104		
Subnet Address:	255 255 255 0		IP Mode
Default Catavara			C Static © DHCP
Deraur Gateway:	172.18.3.254		
Host Idle (Timeout):	720	second (s)	
	120		Note: The Host Idle' will affect TCP connection. Please make sure the value is applicable.
Application Network Settin	ug		
Datastream Target Port (De	efault:5168):	5168 Apply	
P2P/GCL Target/Local Poi	t (Default:1025):	1025 Annly	
		mppi)	
✓ Network Diagnostic (D)	efault:On)	Apply	

Network Setting

You can select the Connection mode as DHCP or Static IP and configure the MAC address, IP address, Subnet address, Default gateway and Host Idle (timeout).

Port Setting

You can set up the network port for DataStream and P2P/GCL function.

- 1. Static IP mode is set 10.0.0.1 as default.
- 2. Network Diagnostic (Default: ON) ADAM module will actively monitor and diagnose the Ethernet switch periodically when it's enabled. However, if you have no need to use Ethernet ports for communication, please notice to disable this function.

Module Ethernet Protocol and Port					
TCP Modbus	TCP	502			
Download	TCP	5450			
Config. Upload	TCP	5452			
Web Server	TCP	80			
Search Engine	UDP	5048			
ASCII CMD	UDP	1025			
P2P/GCL	UDP	1025	Configurable		
Data Stream	UDP	5168			
GCL remote Message	UDP	5168			

4.3.2.3 Stream

ADAM-6200 modules can actively send its data to multiple hosts periodically. It is called Data Stream. In this tab, you can define IP address of the hosts receiving the data transferred by ADAM-6200 modules, as well as the period how often ADAM-6200 modules will send data to the hosts.

Information Network Stream	Administration Firmware Pee	er to Peer/Event Acce	ss Control Mo	dbus Address
Hosts to receive data ———		Data Streaming A	.dam-5000/TCP	Event Trigger
0. 255.255.255.255	Apply	Sending Interva	l: (50ms ~ 10 ho	urs)
□ 1. 255.255.255.255	Apply	Hours:	0	(0~10)
□ 2. 255.255.255.255	Apply	Minutes:	0	(0~59)
3. 255.255.255.255	Apply	Second:	0	(0~59)
4 . 255.255.255.255	Apply	Millisecond:	100	(0~999)
5. 255.255.255.255	Apply			
☐ 6. 255.255.255.255	Apply			
7. 255.255.255.255	Apply			Apply change

Host IP address

There're up to 8 sets of Host IP address for you to run data streaming.

Data Streaming

It used to set up the data streaming schedule.



Set the period by Data Streaming tab at right for ADAM-6200 streaming function. ADAM-5000/TCP Event Trigger tab is for ADAM-5000.

Chapter 4 System Configuration

4.3.2.4 Administration

The administration page includes Password, reset, and restart function.

Information Network Stream Administration Firmware Peer to Peer/Event Access Control Modbus Address	
Password Setting	ן ר
Old password: Apply change	
New password: Reset password	
Verify password:	
Reset to Factory Defaults	
Apply	
System Restart	
Apply	

Password

You can enter the password on this page to keep the module from losing unknown control.



The default password is 00000000

		-	1	
LE		=		
l b		=		
14	_	_		
1-	_	_		

Reset to factory default

The system configuration of ADAM-6200 module will be clear and restored to factory default when it enabled.

Restart the module

The system of ADAM-6200 module will reboot when it enabled.

4.3.2.5 Firmware

On this page, you can import and export your configuration file and upgrade firmware.

Information	Network Stream Administration Firmware Peer to Peer/Event Access Control Modbus A	1ddress
File Import		
Туре:	Firmware File	
File:		Browse
		Download
-File Export		
Туре:	Configuration File	
File:		Save as
		Upload

File Import

There are four file types including firmware, JAR, HTML, Modbus information (described as below) for you to import from the host PC.

Firmware -

It means system firmware, you can easily perform firmware upgrade on this page, but for AI/O module, it will additionally need to involve AI/O firmware if changed.

JAR file -

It's used for the extended application on the Webpage.

HTML file -

It's used for the extended application on the Webpage.

Module information -

It presents the configuration file of module in Utility.



- 2. Which Web browser supports HTML 5: IE 9, Chrome, Firefox.
- Please do not remove the power of your module when group con-3. figuration function is processing. Otherwise, the module system will probably crash.

File Export

Alternatively, you also can export configuration file to your host PC.

Chapter 4 System Configuration

4.3.2.6 Peer to Peer / Event

It will be described in following sections.

Information Network Stream Adr	ninistration Firmware	Peer to Peer/Event A	ccess Control Modbus A	.ddress
C Basic C Advanced	Disable		Apply	
Basic (One to One)				
Period time: 3	econd (s)			
Enable Change of State 📃 🕻	C.O.S.)			
Source		Destination		
IP: 172.18.3.104		IP:		
Modify channel enable 🛛 🗖				
Channel	Ena	ble		
		Petroph Save	Lood Apply list	
		Vettear 28A6	Loan Apply list	

4.3.2.7 Access Control

For avoiding from unauthorized access, you can manage which host PC or device has been permitted to remotely control ADAM-6200 module by IP or MAC Address.

- 1. Select which type you're going to configure.
- 2. Enter the IP or MAC address of Host controller.

Information Network Stream Administration Firmware Peer to Peer/Event	Access Control Modbus Address
Controlled By	
	Refresh Apply
Security IP/MAC Setting	
Enable/Disable	
0. 255 255 255	Apply Apply all
□ 1. 255 255 255 255	Apply
2. 255 255 255	Apply
3. 255 255 255	Apply
4. 255 255 255	Apply
5 . 255 255 255	Apply
6 . 255 255 255	Apply
7. 255 255 255	Apply

4.3.2.8 User-defined Modbus Address

In order to provide user with more flexible and scalable in deploying ADAM module, ADAM-6200 module remove the limitation of Modbus address setting and make it configurable as user's actual need. Basically, there're two kinds of Modbus address section (0X and 4X) for you to configure each function item.

For example, the below screenshot is Modbus address setting page of ADAM-6250.

DI status 08 0001 ▶ Counter frequency 16 0 DO status 07 0017 Pulse output low level width 14 0 Counter switch 08 0033 Pulse output high level width 14 0 Clear counter 08 0041 Set absolute pulse 14 0 DI latch status 08 0057 DI status 01 0 ØCL flag 01 0 01 0 0			Dusc	Item	Length	Bas
DO status070017Counter switch080033Clear counter080041Clear overflow080049DI latch status080057U status0101OD status0101OD status0101OD status0101OD status0101OD status0101OD status0101OD status0101	DI status	08	0001	Counter frequency	16	000
Counter switch080033Clear counter080041Clear overflow080049DI latch status080057DI status0101GCL flag01	DO status	07	0017	Pulse output low level width	14	001
Clear counter 08 0041 14 0 Clear overflow 08 0049 Set incremental pulse 14 0 DI latch status 08 0057 DI status 01 0 GCL flag 01 01 0 01 0	Counter switch	08	0033	Pulse output high level width	14	003
Clear overflow 08 0049 Set incremental pulse 14 0 DI latch status 08 0057 DI status 01 0 GCL flag 01 0 0 0 0	Clear counter	08	0041	Set absolute pulse	14	004
DI latch status 08 0057 DI status 01 01 0 DO status 01 0 GCL flag 01 01 0	Clear overflow	08	0049	Set incremental pulse	14	005
DO status 01 0 GCL flag 01 0	DI latch status	08	0057	DI status	01	030
GCL flag 01 (DO status	01	030
				GCL flag	01	030

4.3.3 I/O Configuration

After the introduction of ADAM-6200 general configuration in previous section, you're realized how to operate with several key functions in your application. Furthermore, you will learn the way to set up all I/O channel configuration in details such as channel range, calibration and alarm.

You can select one of ADAM-6200 module you want to configure and spread its channel list by entering the password in the Module Tree screen. As below figure, it will be divided into three parts, I/O channel overview, advanced channel setting and GCL function setting.



I/O channel overview

You will see all I/O channel status and output enable setting.

Advanced channel setting

You will be able to specifically configure single channel for details.

GCL function setting

It will be introduced in the following section.

4.3.3.1 ADAM-6217

Analog	Input	Channel	Overview
Analog	mpuι	Channel	Overview

AI								Locate	Enable
Hide Se	etting Pane	l							
–Input R Channe Range	lange el : 0 : +/- 10	• V	Apply		Integratio Auto Burnout- Value	on Time -	Apply		Auto
Channel I Channel	Informatio	n	in al Matter Ameri						
Channel	E Rushle	Average sem	nig Moubus (riese.	nt) Modbus (Ma	ax) Modbu	us (Min)			
	Enable	Channel 0	Value 0.000 V	nt) Moddus (Ma Descripti Enable : -	ax) Modbu ion +/- 10 V	15 (Min)			
	Enable	Channel 0 1	ng Mousus (riese Value 0.000 V 0.000 V	nt) Mod.bus (Ma Descripti Enable : - Enable : -	xx) Modbu ion +/- 10 V +/- 10 V	15 (Min)			
		Channel Channel 1 2	Value 0.000 V 0.000 V 0.000 V	nt) Mod bus (Ma Descripti Enable : - Enable : - Enable : -	xx) Modbu ion +/- 10 V +/- 10 V +/- 10 V	15 (Min)			
	Enable	Channel Channel 1 2 3	Value 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V	nt) Modbus (Ma Descripti Enable : - Enable : - Enable : - Enable : -	xx) Modbu ion +/- 10 V +/- 10 V +/- 10 V +/- 10 V	15 (Min)			
	Enable	Channel Channel 1 2 3 4	Value 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V	nt) Modbus (Ma Descripti Enable : - Enable : - Enable : - Enable : - Enable : -	xx) Modbu ion +/- 10 V +/- 10 V +/- 10 V +/- 10 V +/- 10 V	15 (Min)			
	Enable Enable F	Channel Channel 1 2 3 4 5	Value 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V	nt) Modbus (Aa Descripti Enable :- Enable :- Enable :- Enable :- Enable :- Enable :-	xx) Modbu ion +/- 10 V +/- 10 V +/- 10 V +/- 10 V +/- 10 V +/- 10 V	18 (Min)			
	Enable Enable V V V V V V V	Channel Channel Channel C	Value 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V	nt) Modbus (Ma Descripti Enable :- Enable :- Enable :- Enable :- Enable :- Enable :- Enable :-	xx) Modbu ion +/- 10 V +/- 10 V +/- 10 V +/- 10 V +/- 10 V +/- 10 V +/- 10 V	(Min)			
	Enable V V V V V V V V	Channel 0 1 2 3 4 5 6 7	Value 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V 0.000 V	nt) Modeus (Ma Descripti Enable :- Enable :- Enable :- Enable :- Enable :- Enable :- Enable :-	ex) Modbu ion +/- 10 V +/- 10 V				

Locate

It can help user search ADAM module with light sign. (Status LED will be on for 10 sec when it enabled.)

Hide Setting Panel

The details of channel setting will be hidden when you check on the Hide Setting Panel checkbox.

Trend Log

When you click the trend log button, you will see the real time input channel status (after I/O configuration is done) in pop-up window. In which, you also can check, operate, even save the log as your actual need.

🔄 Adam.NET TrendLog for Adam6	5217		X
5.00		5.00	Channel setting
			🔽 ch0
			🔽 chi
			🔽 ch2
0.00		0.00	🔽 ch3
—Max&Min —		—Max&Min —	🔽 ch4
Max		Max	🔽 ch5
Min		Min	🔽 chố
			🔽 ch7
-5.00		-5.00	
C.N.: Y -400 -3	-200 -100		BufferSize
•			36000
Show History Clear History S	Save History Clear Graph	StepSize: 1 🛨	PollingInterval
C:Residual Capacity	y is 💠 59373.5 Mb(free) / 102400.0 Mb(total))	
Current file length is	s: 0 Bytes	Start	Apply
Save to file			

Input Range

You can select input channel and its voltage/current range and click Apply button to take effect.

Calibration

It's for sure that each module is well calibrated when it's in manufacturing process. However, in certain applications, user may need to redo the calibration with their device. If you want to enable this, please go to Setup menu and click Allow Calibration first, then click Auto button to open the calibration page. The calibration process will automatically run without any input signal in around 20 seconds, after that, please click apply button to finish the process.

📅 ADAM-6217 Auto calibration					
Press 'Apply' button to do the calibration!					
Apply					

Integration Time

In order to remove the DC noise from the power supply, there are two kinds of frequency built-in analog input modules to filter it. You can select and apply this feature here as your request.

Burnout

Presently, it's only support for 4 - 20mA input range. If you select up scale, you will see the value FFFF in Modbus address when open circuit happens. Otherwise, it will show 0000 as down scale.

Channel Information

- Overview
 - It presents which channel is enabled and its current input value.
- Average setting

You can decide which channel will be selected to perform average calculation and it will show on right side

– Modbus (Present)

You can see current analog input value in decimal, hexadecimal, engineer unit, and description for all related Modbus address.

- Modbus (Max)

You can see historical maximum analog input value presented as decimal, hexadecimal, and engineer unit for all related Modbus address. If you need to recalculate the past maximum value, please click the reset button for each channel to clear the record.

Modbus (Min)

You can see historical minimum analog input value presented as decimal, hexadecimal, and engineer unit for all related Modbus address. If you need to recalculate the past minimum value, please click the reset button for each channel to clear the record.

Advanced channel setting

In advanced channel setting, you can easily monitor the present input value/range of each channel, and separately configure the details of channel such as high/low alarm mode, limit and so on.

ADAM-6217 Channel[U] alarm setting:						
Input value: 0.0001 V	Input range: +/- 5 V					
High alarm Low alarm	1					
Alarm mode:	Disable	Apply mode				
Alarm limit:	0 V	Apply limit				
Alarm status:	\bigcirc	Clear latch				

Alarm Setting

When the analog input value is higher than the high alarm value, or lower than the low alarm value, the alarm condition will be valid. Then the alarm status register will be pulled to logic high and **alarm status** LED will be lit up on the main screen of utility.

There are three alarm modes. You can select the alarm mode by the Alarm mode combo box for the low alarm and high alarm respectively and enter the value as **Alarm limit**.

- 1. Disable: Alarm is disabled.
- 2. Latch: Once the alarm condition is valid, the alarm status will be activated to logic high level and will keep the value and alarm LED will also on unless the alarm is clear by clicking the Clear latch button.
- 3. Momentary: The alarm status will dynamically change according to the alarm condition occurs. When the alarm status is set as logic high, it means alarm condition is valid. Otherwise, the alarm status register will be logic low. Alarm status LED will be on/off so.

4.3.3.2 ADAM-6224

Digital	Input	Channel	Overview
Digital	mpuι	Channel	Overview

ADAM-6224 (MODBUS)					Lo	cate Enable
☐ Hide Setting Panel						
Channel : 0	•]	Setting			
Normal	•	• Apply	Invert s	gnal		
DI status : Minimum low signal width 10 ÷ 0.1 ms						Angle [
Address	Туре	Channel	Mode	Value	DI Mode	
▶ 00001	DI	0	BOOL	False	Normal	
00002	DI	1	BOOL	False	Normal	
00003	DI	2	BOOL	False	Normal	
00004	DI	3	BOOL	False	Normal	

Locate

It can help user search ADAM module with light sign. (Status LED will be on for 10 sec when it enabled.)

Hide Setting Panel

The details of channel setting will be hidden when you check on the Hide Setting Panel checkbox.

DI mode

a. Normal

When DI channel receives input signal, AO will send the value you defined.

- b. True trigger to startup value When the received logic result of DI is true, AO will send the startup value you defined.
- c. False trigger to startup value When the received logic result of DI is false, AO will send the startup value you defined.
- d. True trigger to safety value When the received logic result of DI is true, AO will send the safety value you defined.
- e. False trigger to safety value When the received logic result of DI is false, AO will send the safety value you defined.

Invert signal

It will invert the logic state of input signal. In another words, when no signal pulse come into DI channel, the DI status will be logic high ("1")

DI status LED

When DI channel is activated, it will light up.

Digital filter

It contains minimum high signal width and minimum low signal width (1-65535) for filtering the noise.

Channel Information

The information including address, type, channel, mode, value, and DI mode will show on the screen.

ADAM-6	DAM-6224 (MODBUS) Locate Enable									
DI E	I Hide Setting Panel									
	e setuig i a	101								
Out	put Range –						Set Value			
Ch	annel : 🛛	D		•			Channel :	0		
Ra	Range : 0~5 V • Apply Value : 0.000									
Sle	w Rate : 🗍	Immedi	ate cha	nge 🔻	Apply	1				
_Sai	Safety Function Calibration 0 5 □ Enable Set ∀alue Trim Zero Trim Span ○ Output © Startup Set							5		
-Chan	nel Informa	tion —								
	Address	Туре	Ch	Value[Dec]	Value[Hex]	Value[Eng]	Range	Startup Value	Safety Value	Slew Rate
<u>۲</u>	40001	AO	0	0	0000	0.0000	0~5 V	0.0000	Disable	Immediate change
	40002	AO	1	0	0000	0.0000	0~5 V	0.0000	Disable	Immediate change
	40003	AO	2	0	0000	0.0000	0~5 V	0.0000	Disable	Immediate change
	40004	AO	3	0	0000	0.0000	0~5 V	0.0000	Disable	Immediate change

Analog Output Channel Overview

Output Range

You can select input channel and its voltage/current range and click Apply button to take effect.

Calibration

It's for sure that each module is well calibrated when it's in manufacturing process. However, in certain applications, user may need to redo the calibration with their device. If you want to enable this, please go to Setup menu and click Allow Calibration first.

1. Trim Zero - It's used to help user calibrate the low limit of output range by entering the value.

Step 1. Click the Trim Zero button after enabled Allow Calibration.

Step 2. The output signal will be delivered as the lowest level, for example, if you select +/- 10V range, you will get around -10V.

Step 3. Please check if the voltage/current meter connected to the module is right to the lowest level. If not, please adjust "Counts to trim" to correct the output value indicated on the meter. After calibrating to correct value, please click Apply button to take it effect.

Step 4. Click OK button to finish the process.

💦 AO Cali	oration : Zero	- ,	×
Meter attac	hes to: Channe	1 0	
Calibration	value: -5.0 V		
Counts to t	rim: 0	÷	Apply
	(0~10	00)	OK
Adjust by Press 'Apj	increasing / decreasing ply' button to do the cal	; "Counts to trim" , ibration!	

2. Trim Span - It's used to help user calibrate the high limit of output range by entering the value.

Step 1. Click the Trim Span button after enabled Allow Calibration.

Step 2. The output signal will be delivered as the highest level, for example, if you select +/- 10V range, you will get around 10V.

Step 3. Please check if the voltage/current meter connected to the module is right to the highest level. If not, please adjust "Counts to trim" to correct the output value indicated on the meter. After calibrating to correct value, please click Apply button to take it effect.

Step 4. Click OK button to finish the process.

AO Calibration : Sp	ban	X
Meter attaches to:	Channel 0	
Calibration value:	5.0 V	
Counts to trim:	4095 ÷	Apply
	(4000 ~ 4095)	ОК
Adjust by increasing / Press 'Apply' button to	decreasing "Counts to trim" , do the calibration!	

Slew Rate

It defines how long the AO value changes according to the type of output range.

Set Value

You can set value by scrolling the meter bar.

Safety function

You can define the safety value after it's enabled.

Channel Information

The information including address, type, channel, value [Decimal], value [Hexadecimal], value [Engineering], output range, startup value, safety value, and slew rate will show on the screen.

4.3.3.3 ADAM-6250

Digital Input Channel Overview



Locate

It can help user search ADAM module with light sign. (Status LED will be on for 10 sec when it enabled.)

Channel Setting

You can see value of all digital input channels by related LED display in this tab. Besides, you also can control values of all digital output channels by related button. The LED next to the button will display current value of that digital output channel.

The Fail Safe Value (FSV) of communication WDT

If FSV checkbox is enabled, it presents the module will set the output channel to logic high when WDT timeout. There are two application as below. After all, click the Apply FSV button to take it effect.

a. Communication WDT

When the module hasn't received any TCP network packet from client too long, such as SCADA or Web browser. That means if the waiting time is greater than host idle time, the module will automatically set the safety value to output.

b. P2P/GCL WDT

When the module hasn't received P2P/GCL network packets too long, that means the waiting time is greater than idle time you entered, the module will automatically send the safety value to host PC if you've enabled this function.

Modbus

It indicates the overview of the status (value) of its corresponding Modbus address, channel and mode.
Advanced channel setting

1. DI configuration

In ADAM-6250 advanced channel setting, you can configure the details of input signal such as enable/disable invert signal, digital filter based on different DI mode and meanwhile, you also can check DI status of each channel. There are five kinds of DI mode including DI, Counter, Low to High Latch, High to Low Latch, and Frequency.

DI mode

- a. Invert signal It will invert the logic state of input signal. In another words, when no signal pulse come into DI channel, the DI status will be logic high ("1")
- b. Digital filter It contains minimum high signal width and minimum low signal width (1-65535) for filtering the noise.
- c. DI status It will light up when logic high.

DI mode:	DI	Apply to all Apply mode
Setting:	🔲 Invert signal	Apply to all Apply this
	Enable digital filter Minimum low signal width	1 0.1 ms
	(1~65535) Minimum high signal width (1~65535)	1 0.1 ms
DI status:	•	

ADAM-6250 DI[0] setting:

Counter mode

When you choose Counter mode, one counter will count the pulse number of the digital signal from the selected channel, and then record the count number in the register. At the bottom of the screen as below, present count value of the selected channel is displayed by the Counter value text box. You can start or stop the counter to count by clicking the Star/Stop button next to the Counter value text box. You also can reset the counter (the value in the register will be initialized to zero) by clicking the Clear button.

- a. Invert signal It will invert the logic state of input signal. In another words, when no signal pulse come into DI channel, the DI status will be logic high ("1")
- b. Keep last value when power off It can store the last counter value in the register when the module power off.
- c. Digital filter It contains minimum high signal width and minimum low signal width (1-65535) for filtering the noise.
- d. Counter value It will continuously display the present counter value unless it's stopped.

ADAM-6250 DI[0] setti	ing:	
DI mode:	Counter	Apply to all Apply mode
Setting:	🔲 Invert signal	Apply to all Apply this
	🔲 Keep last value when power off	
	🔲 Enable digital filter	
	Minimum low signal width (1~65535)	1 <u>-</u> 0.1 ms
	Minimum high signal width (1 ~ 65535)	1 - 0.1 ms
Counter value:	0 times	Stop Clear

Chapter 4 System Configuration

Low to High Latch mode

When you choose Low to High Latch mode, once the digital input channel detects logic level changes from low to high, the logic status will be keep as logic high. The logic status will remain the logic high, until you clear latch manually. Then the logic status will back to logic low. The logic status can be seen by the Latch status LED display. If you want to clear latch, you can do it by clicking the Clear latch button. As for Invert signal setting, it's the same as mentioned above.

ADAM-6250 DI[0]	setting:	
DI mode:	Low to high latch	Apply to all Apply mode
Setting:	🔲 Invert signal	Apply to all Apply this
Latch status:	Clear latch	

High to Low Latch mode

When you choose High to Low Latch mode, once the digital input channel detects logic level changes from high to low, the logic status will be keep as logic High. The logic status will remain the logic High, until you clear latch manually. Then the logic status will back to logic Low. The logic status can be seen by the Latch status LED display. If you want to clear latch, you can do it by clicking the Clear latch button. As for Invert signal setting, it's the same as mentioned above.

ADAM-6250 DI[0]	setting:		
DI mode:	High to low latch	Apply to all	Apply mode
Setting:	🔲 Invert signal	Apply to all	Apply this
		1	
Latch status:	Clear latch		

Frequency mode

When you choose Frequency mode, ADAM-6200 digital module will calculate the frequency value of the digital input signal from the selected channel and the frequency value will be displayed by the Frequency value text box.

ADAM-6250 DI[0] &	tting:			
DI mode:	Frequency	•	Apply to all	Apply mode
Frequency value:	0.00 Hz	Hz		

5. DO configuration

In ADAM-6250 advanced channel setting, you can configure the details of output signal such as signal width, frequency, duty cycle based on different DO mode and meanwhile, you also can check DO status of each channel.

There are four kinds of DO mode including DO, Pulse out, Low to high delay, and High to low delay.

DO mode

When you choose DO mode, you can control the digital output value of the selected channel by the DO button. The current digital output value will be shown by the DO status LED display.

ADAM-6250 DO[0] setting:			
DO mode:	DO	•	Apply to all	Apply mode
DO status:)		

Pulse Output mode

The pulse output is the same as PWR. After you choose the Pulse output mode, the selected digital output channel can generate continuous pulse train or finite pulses.

- a. Signal width It contains Low signal width and High signal width (unit: 0.1ms) for configuration
- b. Output frequency -It will automatically indicate by the setting of Low/High signal width.
- c. Duty cycle It will automatically indicate by the setting of Low/High signal width.
- d. Pulse output You can select Continuous to generate continuous pulse train or Fixed total to define how many pulse you want to send.

ADAM-6250 DO[0] setting:			
DO mode:	Pulse output	•	Apply to all	Apply mode
Setting:				Apply change
	Low signal width (1~65535)	1	÷ 0.1 ms	Apply to all
	High signal width (1~65535)	1	÷ 0.1 ms	
	Output frequency		Hz	
	Duty cycle		%	
Pulse output:	🔿 Continue	Fixed total	100	Start Stop

Low to high delay

It means there will be certain time delay when the output value changes from logic low to logic high as below. You can define how much Delay time of a pulse as your need, and also control DO status by clicking DO button.



At the moment that you write logic low to the digital output channel

ADAM-6250 DO[0] setting:					
DO mode:	Low to high delay	•	Apply to all	Apply mode	
Setting:	Delay time	0	0.1 ms	Apply change	
				Apply to all	
DO 11					
DO status:					

High to low delay

It means there will be certain time delay when the output value changes from logic high to logic low as below. You can define how much Delay time of a pulse as your need, and also control DO status by clicking DO button.



4.3.3.4 ADAM-6251

DIO	DI 6	
		DI 12
DI 1	DI 7	DI 13
DI 2	DI 8	DI 14
DI 3	DI 9	DI 15
DI 4	DI 10	
DI 5	DI 11	
		I di gede telegened.

Digital Input Channel Overview

Locate

It can help user search ADAM module with light sign. (Status LED will be on for 10 sec when it enabled.)

Channel Setting

You can see value of all digital input channels by related LED display in this tab. Besides, you also can control values of all digital output channels by related button. The LED next to the button will display current value of that digital output channel.

Modbus

It indicates the overview of the status (value) of its corresponding Modbus address, channel and mode.

Advanced channel setting

Please refer to the DI operating statement of ADAM-6250.

4.3.3.5 ADAM-6256

Digital Output Channel Overview



Locate

It can help user search ADAM module with light sign. (Status LED will be on for 10 sec when it enabled.)

Channel Setting

You can see value of all digital output channels by related LED display in this tab. Besides, you also can control values of all digital output channels by related button. The LED next to the button will display current value of that digital output channel.

The Fail Safe Value (FSV) of communication WDT

If FSV checkbox is enabled, it presents the module will set the output channel to logic high when WDT timeout. there are two application as below. After all, click the Apply FSV button to take it effect.

a. Communication WDT

When the module hasn't received any TCP network packet from client too long, such as SCADA or Web browser. That means if the waiting time is greater than host idle time, the module will automatically set the safety value to output.

b. P2P/GCL WDT

When the module hasn't received P2P/GCL network packets too long, that means the waiting time is greater than idle time you entered, the module will automatically send the safety value to host PC if you've enabled this function.

Modbus

It indicates the overview of the status (value) of its corresponding Modbus address, channel and mode.

Advanced channel setting

Please refer to the DO operating statement of ADAM-6250.

4.3.3.6 ADAM-6260

Digital Output Channel Overview



Locate

It can help user search ADAM module with light sign. (Status LED will be on for 10 sec when it enabled.)

Channel Setting

You can see value of all digital output channels by related LED display in this tab. Besides, you also can control values of all digital output channels by related button. The LED next to the button will display current value of that digital output channel.

The Fail Safe Value (FSV) of communication WDT

If FSV checkbox is enabled, it presents the module will set the output channel to logic high when WDT timeout. There are two application as below. After all, click the Apply FSV button to take it effect.

a. Communication WDT

When the module hasn't received any TCP network packet from client too long, such as SCADA or Web browser. That means if the waiting time is greater than host idle time, the module will automatically set the safety value to output.

b. P2P/GCL WDT

When the module hasn't received P2P/GCL network packets too long, that means the waiting time is greater than idle time you entered, the module will automatically send the safety value to host PC if you've enabled this function.

Modbus

It indicates the overview of the status (value) of its corresponding Modbus address, channel and mode.

Advanced channel setting

Please refer to the DO operating statement of ADAM-6250.

4.3.3.7 ADAM-6266

Digital Output Channel Overview

ADAM-6266 4 isolated	ADAM-6266 4 isolated DI / 4 relay output module					Enable
Channel setting Modbus						
DIO		D0 2	FSV			
DI 1		DO 3	FSV			
DI 2						
DI 3						
DO 0	FSV					
DO 1	FSV					
The Fail Safe Value Each DO will switch	(FSV) of commut to its FSV if the	ication WDT. module's WDT is	enabled and it get:	s triggered.		
FSV checked Logic High State, FSV unchecked Logic Low State.					Apply	r FSV

Locate

It can help user search ADAM module with light sign. (Status LED will be on for 10 sec when it enabled.)

Channel Setting

You can see value of all digital input channels by related LED display in this tab. Besides, you also can control values of all digital output channels by related button. The LED next to the button will display current value of that digital output channel.

The Fail Safe Value (FSV) of communication WDT

If FSV checkbox is enabled, it presents the module will set the output channel to logic high when WDT timeout. There are two application as below. After all, click the Apply FSV button to take it effect.

a. Communication WDT

When the module hasn't received network packets too long, that means the waiting time is greater than idle time you entered, the module will automatically send the safety value to host PC if you've enabled this function.

b. P2P/GCL WDT

When the module hasn't received P2P/GCL network packets too long, that means the waiting time is greater than idle time you entered, the module will automatically send the safety value to host PC if you've enabled this function.

Modbus

It indicates the overview of the status (value) of its corresponding Modbus address, channel and mode.

Advanced channel setting

Please refer to the DI/O operating statement of ADAM-6250.

4.3.4 Peer to Peer

When you want to send a signal from one module to another module, Peer-to-Peer is a perfect solution. With Peer-to-Peer function enabled, ADAM-6200 modules can actively update its input value to other devices such as PC or another ADAM-6200 module. One typical application is operating with a pair of ADAM-6200 modules. The value of input channel on one module will be automatically updated to output channel on another module.

The data will be transferred automatically as long as the connection between the two ADAM-6200 modules is already built. No controller is needed to take care of the communication. ADAM-6200 modules feature two types of Peer-to-Peer function:



- 1. Please use Ethernet Switch between a pair of Peer-to-Peer modules. Do not use an Ethernet hub. This can prevent data packet collision.
- 2. Peer-to-Peer (Event) and GCL function can't run at the same time.

4.3.4.1 Basic Mode

In basic mode, it's defined as one-way data transmission. That means only one target device to receive the data transferred from one ADAM-6200 module. You can configure the IP address of target device (Destination) and which channel you're going to send data to its mapping channel.



Information Network Stream Administration Firm	ware Peer to Peer/Event Access Control Modbus Address
Mode	
	Apply
Basic (One to One)	
Period time: 5 * second (s)	
Enable Change of State 📃 (C.O.S.)	
Source IP: 172.18.3.104	Destination IP: 255.255.255
Modify channel enable	
Channel	Enable
▶ 0	
1	
2	
3	
4	_
	Refresh Save Load Apply list

1. Period Time Function:

The value of the input channel will be updated to the target devices with the defined period.

2. Period Time Function + C.O.S (Change of Status) Function

The value of the input channel will still be updated to the target devices with the defined period. Moreover, when C.O.S happens (the change of the analog input value is greater than specific deviation or digital input status changes), the value of the input channel will also update to the target devices immediately.

devices immediately.



- 1. There will be uncertainty for network communication. Sometimes there might be packet lost when event occurs. This is the reason we Period Time function +C.O.S. function (no C.O.S. function only). When event occurs, even if the packet is lost, the data will be sent again when the next period reaches. This can help to make the system more reliable.
- 2. For preventing input noise also been send as digital input signal, we suggest to activate DI filter function if C.O.S (Change of Status) function enabled.
- 3. *How to use Peer-to-Peer function to implement Event Trigger?* In many applications, the data will only be sent to a host computer when specific event happens. Typical event is that the digital or analog signal changes. To implement this kind of application, ADAM-6200 modules enabled with Peer-to-Peer function is a perfect solution. The target device of Peer-to-Peer can be a computer, simply by entering the IP of that computer into the Destination text box of Peer-to-Peer/Event configuration tab in ADAM.NET Utility. (The detail information about configuration is described below.) *Choose Basic mode and Period Time function + C.O.S. function as* communication method. There should be one program running on the host computer to receive the data, and we provide an example C program (VC++ 6.0) with ADAM-6200 module. Although the ADAM-6200 modules will send data to the host computer periodically (the reason is for communication security, see Note below), you can still distinguish the message is sent from Period Time function or C.O.S. function. The message contains which channel has changed. So if you find there is no change for all channels in the message information, then you can realize that there is no event happening.

Basic Mode Configuration

The Status Display of basic mode is shown above. You can define the target device by entering its IP address into the Destination text box in the Basic (One to One) area.

You can choose these two methods by click the Deviation Enable check box (for Al modules) or Enable Change of State check box (for digital modules). If this check box is not checked, the transfer method is Period Time function. The period to transfer data from source to destination is defined by the Period time numeric control in the Basic (One to One) area. If the check box is checked, the transfer method becomes Period Time function + C.O.S. function. You can define the deviation for analog input by the Deviation Rate numeric control (value is percentage unit and represent the change value divided by the total range). For Period Time function + C.O.S function, the data will be transferred from source to destination periodically. Besides, when the analog input value change is greater than what the Deviation Rate defined or the digital input channel value changes, the data will also update from source to destination automatically.

By default, all input channels of the source module will all be mapping to all output channels of the destination module. However, you can manually define which input channels are mapping to output channels, by clicking the Modify channel enable check box. When this check box is checked, you can select which input channels will be mapping to the corresponding output channels by click related Channel check box. In this example, only the value of input channels 0, 1, 2, 3 of the source module will update to the output channels 0, 1, 2, 3 of the destination module. After you have selected the channel, click the Apply list button to download this configuration to the source module. You can save current mapping relation into a configuration file in your computer by clicking the Save button. You also can load previous mapping configuration file by clicking the Load button. If you click the Refresh button, the current mapping configuration on the source module will be displayed in the Channel-Enable table.

4.3.4.2 Advanced Mode

In advanced mode, there will be multiple target devices to receive the data transferred from one ADAM-6200 module (Module A). You can define different target devices (by different IP address) to each channel of module A. For example, you can define the input channel 1 of Module A is mapping to the output channel 3 of Module B, while input channel 2 of Module A is mapping to the output channel 4 of Module C. So value of input channel 1 and 2 on Module A will automatically update to channel 3 on Module B and channel 4 on Module C, respectively. Please refer to the following figures for better understanding.



Information Network Stream Administration	n Firmware Peer to Peer/Event Access Control Modbus Address	
Mode	1	
C Basic C Advanced C	Disable Apply	
Advanced (One to Multi)		
Name: ADAM-6250		
IP: 172.18.3.104		
Source	Destination	
	Name:	
Finable Change of State (COS)		
Period=U => Disable P2P of the channel	Note: You must apply list to	
	module after configuration. Copy To	
Ch C.O.S. Peroid time Deviation	A	
0 No 5 255.255		
1 No 5 255.255 2 No 5 255.255		
3 No 5 255 255		
4 No 5 255.255		
5 No 5 255.255	v	
	Refresh Save Load Apply list	

Advanced Mode Configuration

When you choose the advanced mode, the Main Operation screen area is shown as above. With advanced mode, each channel on the source ADAM-6200 module can be mapping to channel on different target devices. You can configure the mapping relation using the two block areas Source and Destination in the Advanced (One to Multi) area.

The setup of the mapping relationship is shown as below:

- 1. Select the input channel by the **Channel** combo box in **Source**.
- 2. Use Period time numeric control, **Deviation enable (C.O.S)** checkbox (for analog modules) or **Change of state (C.O.S)** check box (for digital modules), and **Deviation Rate** numeric control in the Source area to define when to transfer the data for that channel. The configuration operation is similar to **Basic** mode.
- 3. Define the target device for that channel by entering its IP address into the IP text box in the **Destination** area. Choose the correct module name from the **Name** combo box, and choose the output channel to receive the data by the **Channel** combo box.
- 4. After you have completed all these configurations for this channel, click the **Config** to list button. You can see your configuration for that channel is displayed by the mapping table below the **Source** and **Destination** area.

Note!

- 1. The mapping setting is only restored in memory of your computer, and it will download to the target ADAM-6200 module after you click the **Apply list** button below the mapping table. It is not suggested to download the mapping configuration immediately if you only complete setting for one channel.
- 2. We suggest you to download all channels mapping configuration together at one time, instead of downloading one-channel setting many times. The reason is that this can save the times to use the flash memory on target module and help to extend the flash memory life.
- 3. Peer-to-Peer Data Transfer Performance For example, the data transfer time of a pair of ADAM-6250 will be less than 1.2 milliseconds.

Repeat the step 1 to step 4 for another input channel. Continuously repeat the configuration until you have configured all the input channels which you want to create the mapping relationship. Click the **Apply list** button to download all mapping configuration to the target module. You can save all configurations in the mapping table into a file by clicking the **Save** button. Or you can load previous configuration from a file by clicking the **Load** button. If you click the **Refresh** button, the real configuration on the source module will be uploaded to your computer and you can see it in the mapping table. In order to save setting time for the mapping configuration, you can copy one channel setting to other channels, and then only change what needs to change. You can do this by clicking the **Copy to** button, then a dialog window will pop-up as below image.

Channel:	0	-				Config
Copy to -						
Select a	11					
-						
Channel	Change of state	Peroid time	Map to IP	Map to channel	Map to Module	Deviation ra
0	Off	10	255.255	0	ADAM-6024	5
v 1	Off	0	255.255	6	ADAM-6024	5
72	Off	0	255.255	6	ADAM-6024	5
7 3	Off	0	255.255	6	ADAM-6024	5
1 4	Off	0	255.255	6	ADAM-6024	5
15	Off	0	255.255	6	ADAM-6024	5
16	Off	Π	255 255	б	ADAM-6024	5 🗸

Choose the channel which provides the setting for other channels by the **Channel** combo box at the top of the dialog window. Then select channels which you want to copy setting to by clicking the **Channel** checkbox in the **Copy to** area. Using as an example, setting of channel 0 will copy to channel 1, 2, and 3. If you want to copy the setting to all channels, click the **Select all** check box. After selecting the channels, click the **Config** button. Then you will find the setting of the channels you selected has been copied in the mapping table. After that, you can individually select the channel needed to modify and change the parameters. Therefore, you don't need to do all the configurations and you can concentrate on setting on the parameters needed to be modified.

4.3.5 GCL

4.3.5.1 Overview

In a traditional control and data acquisition system, there must be one controller to manage the system. Remote I/O modules like the ADAM-6200 modules, only acquire data from sensors, or generate signal to control other devices or equipment. There must be a computer (or a controller, such as PLC) responsible to get the data from the input modules, manipulate the data, execute logic operation and process depending on the input data, and generate output data to the output modules based on the logic decision.

The computer (or controller) and remote I/O modules form a complete control system within the same network. The complexity of logic operation and process depend on the application, and it is implemented by the program written on the computer (or controller). There are plenty of software applications to write programs. Examples are C language, Microsoft Visual Studio for computer, and Ladder language for PLC controller.

In many applications, the logic operation and process is not very difficult that it seems not so necessary to implement a computer or controller which are too powerful than needed. Now, ADAM-6200 modules feature logic operation and process ability by the new design --- **Graphic Logic Condition (GCL)**. This feature makes the ADAM-6200 modules become a smart I/O module that it can play as a standalone control system.

People can define the logic operation and process rules in the ADAM.NET Utility and download the rules to the ADAM-6200 modules. Then ADAM-6200 modules will execute the logic rules to process different action depending on the input conditions.

With GCL enabled, a computer (or a controller) can be removed from the control system since the ADAM-6200 modules can play as controller by themselves.

The configuration environment for GCL in ADAM.NET Utility is completely graphical, making it very easy and intuitive to complete the logic rule configuration. After completing the logic rule configuration and download, engineers can see the real-time execution situation and input value in ADAM.NET Utility on line. We will introduce these features in more detail by following content.



4.3.5.2 Configuration Environment

As previously mentioned, when you try to spread one of ADAM-6200 module, you will be allowed to check the channel setting and GCL function by entering correct password in the Module Tree screen.





You can configure all GCL related setting by clicking the GCL Configuration item list. For the two features Peer-to-Peer and GCL, only one of them can be enable at one time. If you enable Peer-to-Peer function before, when you click the GCL Configuration and launch the GCL configuration environment, you will find that it is disabled by default. Once you click the Program GCL button (refer to table below) to enable the GCL feature, the Peer-to-Peer function will be disabled.

The top icon definition in GCL Menu:

lcon	Function	Description
	Current Status	This icon shows current GCL status. The status repre- sented in the Icon cell is the Disable , Programming and Running mode (From top to button) Note: You cannot enable Peer-to-Peer/Data Stream function and GCL function at the same time. So if you want to enable GCL, Peer-to-Peer and Data Stream function will be disabled automatically.
RUN	Run GCL	Select the Running mode. If this mode is chosen, the LED below the button is lit.
PROG	Program GCL	Select the Programming mode. If this mode is cho- sen, the LED below the button is lit.
Disable	Disable GCL	Select the Disable mode. If this mode is chosen, the LED below the button is lit.
IP	IP Table Configuration	Click this button to configure IP table. IP table can used to define the destination for output. Only avail- able in the Programming mode.
33	Monitoring	Enable Online Monitoring. Only available in the Run- ning mode.
	Upload Project	Upload GCL configurations from ADAM-6200 module to computer. Only available in the Programming mode.
	Download Project	Download current GCL configurations to the ADAM- 6200 module. Only available in the Programming mode.
	Project Content	Click this button to show current GCL configurations. You can also save current configurations into a file, or load previous configuration from a specific file.

Logic rule configuration:

There are 16 logic rules available on one ADAM-6200 module, so you can see 16 logic rule icons here. Simply click the logic rule icon to configure that rule. For example, if you want to configure rule 12, just click the logic rule icon with text "Rule 12" below. The text background color of the selected logic rule icon will become green.

After the rule number selected, you need to check the **Enable Rule** checkbox to enable that logic rule and the color of that logic rule icon will become white. Also, you can write some description for that logic rule by clicking the button next to the **Note** text box.

There are four stages for one logic rule: **Input Condition**, **Logic**, **Execution** and **Output**. You can simply click the graphical icon to configure each stage and one related configuration window will pop up.



4.3.5.3 Basic Logic rule programming

Input Condition stage

The Input Condition stage is a logic condition decision for the input data.

The decision result will be logic True or False, sending to the Logic stage for logic operation. Take analog input mode as example, you can define the condition as if the analog input value is greater than a specific value (the limit). So when the input value becomes greater than the limit, the input stage will transfer True to the Logic stage. Otherwise, it will transfer False to the Logic stage.

When you click the Input Condition stage icon, you should see a dialog window similar as below. You can choose the input mode by the Mode combo box. The default mode is NoOperation, meaning there is no input condition. You can choose local analog input channel (AI), local digital input channel (DI), local counter input channel (DI_Counter), local frequency input channel (DI_Frequency), internal timer (Timer), internal flag (AuxFlag), local digital output channel (DO) and internal counter (Counter) as the input mode. After you choose the appropriate input mode and complete all related setting, click the OK button. That Input Condition stage icon will change its pattern to present the current condition. We will describe each mode in more detail below.

GCL Input Properties					
Tag: Adam6250.Rule1.Input1					
Mode:	No Operation				
Channel:	0				
Operation					
Туре:	ChannelValue 💌				
Scaling					
Input range:	Min (n1): Max (m1):				
Scale to:	Min (n2): Max (m2):				
Result = n2 + (input - n1) x [(m2 - n2) / (m1 - n1)]					
Condition:	True				
Value:	0				
Refresh	OK Cancel				

Mode	Description	Condition
No Operation	No operation	N/A
AI	Local AI channel value	>, =, <
DI	Local DI channel value	True, False
DI_Counter	Local counter input channel value	>, =, <
DI_Frequency	Local frequency input channel value	>, =, <
Timer	Local internal Timer value	>, =, <
AuxFlag	Local internal Flag value	True, False
DO	Local DO channel value	True, False
Counter	Local internal counter value	>, =, <

Local Analog Input Channel (AI)

- 1. After you choose AI as input mode, select the channel by the Channel combo box.
- 2. In the Operation area, you can define the input condition operation. Select the analog input type by the Type combo box. There are two input types you can choose for analog input: If you select Channel Value, the current value of the selected analog input channel is used as input for condition. If you select Deviation, the deviation (Dividing difference between present sample value and previous sample value by the total range value) of the selected analog input channel is used as input for condition.
- 3. Select the appropriate condition for that input channel by the Condition combo box and the Value text box. Refer to the examples in the table below to see how to define analog input condition:

Channel	Туре	Condition	Value	Description
0	Channel value	>=	5	If the value of analog channel 0 is more than or equal to 5, the condition result is logic True . Otherwise, the condition result is logic False .
2	Channel value	=	3.2	If the value of analog channel 2 equals to 3.2, the condition result is logic True . Otherwise, the condition result is logic False .
3	Channel value	<=	1.7	If the value of analog channel 3 is less than or equal to 1.7, the condition result is logic True . Otherwise, the condition result is logic False .
5	Deviation	N/A	20	If the deviation of analog channel 5 is greater than 20%, the condition result is logic True . Otherwise, the condition result is logic False .

The analog input will read voltage (or current) from the channel we specified.

Usually, the voltage (or current) value can represent the real-world physical unit value (we call it engineer unit value) and there is linear relationship between the voltage (or current) value and the engineer unit value. For example, the current and the engineer unit value have linear relationship as shown below:



ADAM-6200 analog input module features Scaling function to convert the voltage (or current) value to the engineer unit value. For example, that's say the condition is if the pressure value is more than or equal to 2.5 kg/cm2. Without scaling function, you need to convert the pressure value (2.5 kg/cm2) to the current value (8 mA). Then you enter the current value 8 mA in the Value text box of the Operation area to define the condition.

Actually, you don't need to transfer the pressure value to current value by yourself. You can enable the scaling function by clicking the Scaling checkbox in the Operation area. Then enter the minimum and maximum value for the engineer unit in the Min and Max text box of the Scale to item, to build relationship between the voltage (or current) value and the engineer unit value. For example here, you should enter 0 and 10 as the minimum and maximum pressure value. Since ADAM-6200 module can automatically transfer the pressure value to the current value, you just need to enter the pressure value, 2.5 kg/cm2, into the Value text box to define the condition. This functionality can help you to configure the condition more intuitively.

Local Digital Input Channel (DI)

After you choose DI as input mode, select the channel by the Channel combo box. The value of the selected digital input channel will directly be the input of condition. If the condition is set as True, when value of the selected DI channel is logic high, the condition result is logic True. Otherwise, if the condition is set as False, when the value of DI channel is logic low, the condition result is logic True.

Local Counter Input Channel (DI_Counter)

After you choose DI_Counter as input mode, select the channel by the Channel combo box. The count value of the selected counter input channel will directly be the input of condition. Like the Analog Input condition, select the appropriate condition for that input channel by the Condition combo box and the Value text box (unit: 0.1Hz). The condition will compare the value read from the counter input channel with the value set by the Value text box. If condition is satisfied, the condition result is logic

True. Otherwise, the condition result is logic False.

Local Frequency Input Channel (DI_Frequency)

After you choose DI_Frequency as input mode, select the channel by the Channel combo box. The frequency value of the frequency input channel will directly be the input of condition. Like the Counter Input condition, select the appropriate condition for that input channel by the Condition combo box and the Value text box. The condition will compare the frequency value read from the frequency input channel and the value set by the Value text box. If condition is satisfied, the condition result is logic True. Otherwise, the condition result is logic False.

Internal Timer (Timer)

There are 16 local timers on one ADAM-6200 module. After the timer is started, its value represents how long the time has passed. Here, you can read the timer value and use it as input condition. After you choose Timer as input mode, select appropriate timer by the Index combo box.(From timer 0 to timer 15) Then you can define the condition by the Condition combo box and the Value text box (unit: 0.01 second). Only when the condition is met, the condition result is logic High. For example, if you choose >= in the Condition combo box and type 500 in the Value text box, it means the condition result will remain logic Low until the timer value is greater 5 second (meaning 5 second is passed).

After 5 seconds is passed, the condition result will become logic High.

Internal Flag (AuxFlag)

There are 16 internal flags on one ADAM-6200 module. The data type of internal flag is digital, meaning its value is either logic True or logic False. You can read the internal flag value and use it as input condition. After you choose AuxFlag as input mode, select appropriate internal flag by the Index combo box. (From flag 0 to flag 15) Then you can define the condition by the Condition combo box. If you choose True in the Condition combo box, it means only when the internal flag value equals to logic True, the condition result is logic True. If you choose False in the Condition result is logic True. You can use internal flag to implement logic cascade or logic feedback. Refer to Section 7.4 for more detail about how to achieve this.

Local Digital Output Channel (DO)

After you choose DO as input mode, select the channel by the Channel combo box. The value of the selected digital output channel will directly be the input of condition. If you choose True in the Condition combo box, it means only when the value of the selected DO channel equals to logic True, the condition result is logic True. If you choose False in the Condition combo box, only when the value of the selected DO channel equals to logic True, the condition result is logic True. If you choose False in the Condition combo box, only when the value of the selected DO channel equals to logic False, the condition result is logic True.

Internal Counter (Counter)

There are 8 internal counters on ADAM-6200 module, you can read its value as input condition. After you choose Counter as input mode, select the counter index by the Channel combo box. (From counter 0 to counter 7). The count value of the selected internal counter will directly be the input of condition. Like the Frequency Input condition, select the appropriate condition for that counter by the Condition combo box and the Value text box. The condition will compare the value read from the internal counter and the value set by the Value text box. If condition is satisfied, the condition result is logic True. Otherwise, the condition result is logic False.

Logic Stage

When you click the Logic stage icon, you should see a dialog window as below.

GCL Logic Properties					
Tag: Adam6217.Rule1.Logic					
Operation —	Operation				
Туре:	AND		-		
Refresh	_	ок	Cancel		

For each logic rule, there will be at most three input conditions passing logic True or False values to the Logic stage here. You can choose four logic operations by the Type combo box: AND, OR, NAND, NOR. The logic operation will process the input logic values, and generate a logic result value to the next Execution stage. After you have selected the appropriate logic operation, click the OK button. The Logic stage icon will change its pattern to present the current logic operation.

In order to present how the four logic operations work, we use the truth table to describe. Here we take two input conditions as example. The letter "T" means logic True, while the letter "F" means logic False.

Logic	Input condition 1	Input condition 1	Outcome
	F	F	F
	F	Т	F
AND	Т	F	F
	Т	Т	Т
	F	F	F
	F	Т	Т
OK	Т	F	Т
	Т	Т	Т
	F	F	Т
	F	Т	Т
NAND	Т	F	Т
	Т	Т	F
	F	F	Т
	F	Т	F
	Т	F	F
	Т	Т	F

Execution Stage

When you click the Execution stage icon, you should see a dialog window as below. There are two possible execution setting you can choose by the Type combo box in the Operation area: Execution Period (Execution_Period) and Send to Next Rule (SendToNextRule). After you choose the appropriate execution setting, click the OK button. The Execution stage icon will change its pattern to present current execution setting condition. We will describe each type in more detail.

H GCL Condition Properties				
Tag: Adam6217.Rule1.Condition				
Operation —				
Туре:	Execution_Period			
Execution Period:	Customize			
Value:	0 (ms)			
Note: The execution period value should not be 0 (Full Speed) when output is in remote mode. It makes network traffic busy.				
Refresh	OK Cancel			

Execution Period (Execution_Period)

As we mentioned before, the Logic stage will transfer logic result value, logic True or logic False, to the Execution stage here. The Execution stage will pass this value to the Output stage after a specific period. Below are the steps to configure this period:

- 1. Select Execution_Period in the Type combo box.
- 2. Choose the appropriate period by the Execution Period combo box. You can select some pre-defined period from 1 ms to 60000 ms. You can also select Customize to define the period by yourself, then enter the period value by the Value text box (unit is ms).
- 3. Click the OK button to complete the configuration.

Note!

- 1. If you choose Full speed in the Execution Period combo box, the execution speed will be as fast as possible. There might be network communication traffic problem when the output is on another module, since the execution speed is too fast that too many network packets are transferred on the Ethernet.
- 2. When you want to use ADAM.NET Utility to configure one ADAM-6200 module which is already running its GCL rules, remember to stop the GCL logic rules first.

Send to Next Rule (SendToNextRule)

You can combine different logic rules into one single rule, which can help building more complex logic architecture. There are two methods to combine different logic rules: one way is using Send to Next Rule function here, another way is using Internal Flag. When you use Send to Next Rule function, you can set output of one logic rule being input of the next logic rule. Please note it can only combine two logic rules which are next to each other on the same module. If you want to combine different logic rules use internal flag for logic rule cascade. After you select SendToNextRule in the Type combo box, one of the output icons will become the next rule.



If you click the next logic rule icon, you will find one of the input condition become previous logic rule. Refer as below. Therefore, the logic result value from the previous logic rule (in this example, logic rule 1) will be one of logic input value of current logic rule (in this example, logic rule 2). This makes the two neighbor logic rules combined together. We call it Logic Cascade. Using this method for Logic Cascade, only the two neighbor logic rules can be combined together. If you want to combine two logic rules that are not next to each other, you need to use internal flag.



Output Stage

When you click the Output stage icon, you will see a pop-up window as below. There are three outputs for one logic rule. The logic result value from the Execution stage will be passed to the three outputs. And the three outputs will have different action depend on the logic result value.

GCL Output Properties					
Tag: Adam6217.Rule1.Output2					
Destination:	Local	IP table			
Operation Type:	No Operation	-			
Note: You can verify th	e destination device if it support	sGCL.			
,		Verify			
-Operation					
Target module:	<not assigned=""></not>	_			
True Action:	<not assigned=""></not>	-			
False Action:					
Channel:	0	-			
Value:	0				
Message:					
	(Device Description)				
Refresh	OK	Cancel			

You need to decide the target device for the output by the Destination combo box. You can choose Local, meaning the output is on the same module, or another remote module by its IP address. Select the appropriate IP address listed in the combo box. The IP addresses are defined in the IP table and you can click the IP Table button to configure. (The action of clicking the IP Table button here is just the same as click the IP Table Configuration button in the GCL Menu area.)

Note!



When your output destination is not Local, meaning there will be communication between the specific ADAM-6200 module to its target device, remember to use Ethernet switch to connect the ADAM-6200 module with its target device. Do not use an Ethernet hub. This can prevent data packet collision. After you decide the target device, then you can choose the output action by the Operation Type combo box. The default setting is No Operation, meaning there is no output action. You can choose analog output (AO), digital output (DO), counter channel setting (DI_counter), pulse output (DO_Pulse), local timer (Timer), local or remote internal flag (AuxFlag), remote message output (RemoteMessage) and local internal counter setting (Counter) as the output action.

After you have chosen the target device and output action, you can click the Verify button to check if the target device exists and supports GCL feature to execute the output action. (If you choose No Operation as output action, it will not check.) After you choose the appropriate output action and complete all related setting, click the OK button. That Output stage icon will change its pattern to present the current condition. We will describe each output action in more detail below.

Analog Output (AO)

Below are the steps to configure analog output:

- 1. Choose correct model name by the Target module combo box in the Operation area. If the Destination is Local, you don't need to choose the model name.
- 2. Choose the appropriate output range by the TargetRange combo.
- 3. Define which channel is responsible to generate output signal on the target device by the Channel combo box.
- 4. Define what value is generated by the Value text box. (The unit of the value depends on the range in the TargetRange combo box.)
- 5. Click the OK button to complete the configuration.



You can see the action description by the Action text box. When the logic result value passed from Execution stage is logic True, the selected analog output channel will generate the new value you defined. When the logic result value passed from Execution stage is logic False, the selected analog output channel will not change its output value.

Digital Output (DO)

Below are the steps to configure digital output:

- 1. Choose correct model name by the Target module combo box in the Operation area. If the Destination is Local, you don't need to choose the model name.
- 2. Define to generate True or False digital output signal for the true action (When the logic result value passed from Execution stage is logic True) by the True Action combo box.
- 3. The false action (When the logic result value passed from Execution stage is logic False) is displayed from the False Action text box and will automatically be set according to the true action. The false action will be opposite to the true action. For example, when you choose False in the True Action combo box, the False Action text box will automatically display True.
- 4. Define which channel is responsible to generate output signal on the target device by the Channel combo box.
- 5. Click the OK button to complete the configuration.

Counter Channel Setting (DI_Counter)

Below are the steps to configure counter channel setting:

- 1. Choose correct model name by the Target module combo box in the Operation area. If the Destination is Local, you don't need to choose the model name.
- 2. Define what action (start the counter by Start, or stop the counter by Stop, or reset the counter by Reset) will be taken for the true action (When the logic result value passed from Execution stage is logic True) by the True Action combo box.
- 3. The false action (When the logic result value passed from Execution stage is logic False) is displayed by the False Action text box and will automatically be set according to the true action. Define which counter channel is responsible to take the defined action by the Channel combo box.
- 4. Click the OK button to complete the configuration.

Pulse Output (DO_Pulse)

Below are the steps to configure pulse output:

- 1. Choose correct model name by the Target module combo box in the Operation area.
- 2. Define what action (continuous generate pulse train by Continue, stop pulse generation by Stop, or only generate finite number of pulse by Num of pulse) will be taken for the true action (When the logic result value passed from Execution stage is logic True) from the True Action combo box.
- 3. The false action (When the logic result value passed from Execution stage is logic False) is displayed by the False Action text box and will always be Keep current status, meaning there is no action change for the selected digital output channel.
- 4. Define which digital output channel is responsible to take the defined action (start or stop pulse generation) by the Channel combo box. 5. If you choose Num of pulse in the True Action combo box, type the number of pulse you want to generate in the Value text box.
- 5. Click the OK button to complete the configuration.

Local Timer (Timer)

There are 16 local timers on ADAM-6200 module. Here, you can define the timer action depending on the logic result value from the Execution stage. After you have chosen Timer in the Operation type combo box, select the interested timer by the Index combo box in the Operation area. (From timer 0 to timer 15) Then you can define the timer action by the Type combo box in the Operation area.

When you choose ON-Delay, the timer will start to count the time passed when the logic result value passed from the Execution stage is logic True, while the timer will stop counting and reset its value to zero when the logic result value is logic False. If you choose OFF-Delay, the true action and

false action will be opposite: the timer will start to count the time passed when the logic result value is logic False, while it will stop counting and rest its value to zero when the logic result value is logic True. The action description is displayed by the True/False act text box. After you have completed the setting, click the OK button.

Local or Remote Internal Flag (AuxFlag)

You can assign the logic result value from the Execution stage, to local or remote internal flag. Select the appropriate internal flag by the Index combo box. Define what value you want to assign to the internal flag for the true action (When the logic result value passed from Execution stage is logic True) by the True Action combo box. The false action (When the logic result value is logic False) is displayed by the False Action text box and will automatically be opposite to the value in the True Action. After you have completed the setting, click the OK button.

Remote Message Output (RemoteMessage)

We can send the Device Description (you can edit it by the Message text box in the Operation area) as message to the target device. When you have several logic rules which all will send message, we need to know the message received by the target device is sent by which logic rule. So, you can give the message a index, defined by the Value text box in the Operation area. Click OK to complete the configuration. So when logic result value passed from the Execution stage is true, the message will be sent to the target device. If the logic result is False, the message won't be sent out.

Local Internal Counter Setting (Counter)

Below are the steps to configure internal counter setting:

1. Define what action (increase one count to internal counter value by Positive edge trigger (F->T), or reset internal counter by Reset) will be taken for the true action (When the logic result value passed from Execution stage is logic True) by the True Action combo box.

Note!



When you choose Positive edge trigger (F->T) as action, the counter will only add one count for the first time that the logic result value from Execution Stage is logic high. After the first time, the counter value will not change even the logic result value from Execution Stage is still logic high. So it is the reason why it is called positive edge trigger.

- 2. The false action (When the logic result value passed from Execution stage is logic False) is displayed by the False Action text box and will automatically be set according to the true action. The false action will be opposite to the true action. Refer to the table below to see the relationship between true action and false action.
- 3. Define which counter channel is responsible to take the defined action by the Channel combo box.
- 4. Click the OK button to complete the configuration.

The following table will show the logic true and false of output actions.

Output Action	True action (the logic result value from the Execution stage is logic True)	False action (the logic result value from the Execution stage is logic False)	
AO	Change the analog output value	Keep current status	
	Output True value	Output False value	
	Output False value	Output True value	
Counter Obernel	Start counter counting	Stop counter counting	
Counter Channel	Stop counter counting	Start counter counting	
	Reset counter	Do nothing	
	Generate continuous pulse train		
Pulse Output	Generate finite pulses	Keep current status	
	Stop pulse generation		
Timor	Start counting time	Stop counting time and reset timer value to zero	
	Stop counting time and reset timer value to zero	Start counting time	
Internal Flag	Assign True value to flag	Assign False value to flag	
internal Flag	Assign False value to flag	Assign True value to flag	
Remote Message	Send message to target device	Do nothing	
Internal Counter Setting	Increase 1 count to counter	Do nothing	
(Counter)	Reset counter		

Internal Flag for Logic Cascade and Feedback

Logic Cascade

Using internal flag as interface, you can combine different logic together to form a new single logic rule which can play more complex logic architecture. You can combine logic rules on the same module, or even on different modules. Please refer to example below to understand how the internal flag works.

Local Logic Cascade

Here, we take one simple example to describe the logic cascade. We use two analog input channels (channel 0 and channel 1) of ADAM-6217 to measure signal from sensors. As long as either of the two input channel read voltage between $3 \sim 5$ Volt, digital channel 0 should generate logic high value. Otherwise, the digital channel 0 should generate logic low value. The logic architecture will look like as below.



In order to implement this logic architecture, we need to use three logic rule and two internal flag to achieve this. Refer to the following diagrams to see how to configure the three logic rules.




Rule 2.







We use the logic rule 1 to check if AI channel 0 value of the ADAM-6217 is within $3 \sim 5$ Volt. Logic rule 2 is used to check if AI channel 1 value is within $3 \sim 5$ Volt. The comparison result of logic rule 1 and 2 is assigned to internal flag 0 and 1. The logic rule 3 read the value of these two internal flags and use the OR logic operation to define the output of digital output channel 0. You can find that we have built the logic architecture as shown by the internal flag.

Distributed Logic Cascade

Logic Cascade function is not limited on one single module. Since you can define the internal flag on another module, the logic cascade structure can be across different modules. Take the previous application as example, now you can define the logic rule 1, 2, 3 are running on module A, B and C. Then the logic structure becomes across three ADAM-6200 modules, and we call it Distributed Logic Cascade as refer to below logic architecture and the configuration for the three logic rules.



Rule 1.











Using Local or Distributed Logic Cascade architecture, there will be no limitation for input numbers of logic rules. And you can build any logic architecture to meet your application requirement.

Feedback

When you choose the same internal flag for the input condition and output of one single logic rule, the logic rule has logic feedback ability. See as below. In this example, one input condition and one output are dedicated to the same internal flag 0 (AuxFlag 0). So the output value in current execution will become the input of the next execution. This gives this logic rule feedback ability.



Export logic file and online monitoring

After you have completed all the configurations for GCL logic rule, click the Download Project button in the GCL Menu area. All the configuration will be downloaded to the target device. Then you can click the Run GCL button in the GCL Menu area to execute the project on the target module. You can see the Current Status icon become the Running mode.

ADAM-6200 Module features special Online Monitoring function. In the Running mode, you can click the Monitoring button in the GCL Menu area to enable this function. Then you can see the execution situation on the Individual Logic Rule Configuration area. The yellow dot appears when the execution flow proceed to that stage. Besides, you can see the current input value besides the Input Condition icon. In this example, you can see the input condition D1, D2 and D3 has been satisfied, so the yellow dot appears next to the two Input Condition icons. And you can see the current input value showing at the top of the three Input Stage icons.



The yellow dot means the execution flow has reached this stage

Note!

When you use Internal Flags (AuxFlag) as the inputs of GCL logic rules, you can dynamically change the flag values in the online monitoring window of ADAM.NET Utility. Simply double click the input icons represented the internal flag, and you can see the flag values change from True to False, or from False to True.

GCL Rule Execution Sequence

There are 16 logic rules on one ADAM-6200 module. As below, you can see the execution flow for one cycle and there are 3 groups for one cycle: Input Condition + Logic, Execution, and Output .All the Input Condition + Logic stages of rules which are enabled will execute sequentially first. Then, all the Execution stages of rules which are enabled will be executed in sequence. In the end, all Output stages of rules which are enabled will be executed in order. For some advanced applications, you may combine different rules together by Logic Cascade architecture. For example, the output of rule 1 is connected to the input of rule 2, by assigning to the same internal flag. Based on the execution flow mentioned above, the Input Condition + Logic, Execution and Output stages of rule 1 will be executed sequentially. Therefore, the output of rule 1 will be updated at the last stage (Output stage) in the first cycle, and the input of rule 2 can detect the change of output of rule 1 in the next cycle.



GCL Execution and Data Transfer Performance

1. Local Output

Condition: Running 1 logic rule on one ADAM-6250 module Processing time: < 1 milliseconds

(Processing time includes hardware input delay time, 1 logic rule execution time and hardware output delay time)

If multiple logic rules are used, the processing time can be estimated by equation below:

• logic rule number n \leq 16

Approximate Processing Time (for one cycle) = $600 + n*370 (\mu s)$

2. Remote Output

Condition: Running 1 logic rule on one ADAM-6250, output is on another ADAM-6250 module through one Ethernet Switch Processing + Communication time: < 3 milliseconds

Typical Applications with GCL

In order to shorten GCL configuration time, Advantech has provided several example project files for some typical applications. You can find these example project files on the CD with the ADAM module. Simply load these example project files by clicking the Project Content button of GCL Menu bar. You can modify an example project based on your application requirements. Then you can download the modified project to your module and execute it. We will introduce each example project file in more detail below:

1. Empty Project

When you want to clear all configurations for GCL, it is simple to load this example project. Then you don't need to clear all the configurations manually.

2. On/Off Control (Two buttons to control On and Off Separately)

In some automation applications, two digital inputs (DI 0 and DI 1) are used to control one digital output status (DO 0). The DO status will become logic high when DI 0 is logic high, and the DO status will return to logic low when DI 1 is logic high. For example, motor operation is controlled by two buttons. When the first button is pressed, the motor is started. If the second button is pressed, the motor will be stopped immediately. PLCs are typically used for this kind of industrial automation application, and the ladder diagram will look like below figure:



Now, we can use GCL logic to achieve the same control operation. Two logic rules are used. The complete logic architecture is shown as below.



After you load the example project file, you can find that it uses rule 1 and rule 2. One output of rule 1 and one input of rule 2 are assigned to the same internal flag: Flag 0. This can combine 2 or more logic rules together, that we call it Logic Cascade. We have configured the condition for DI 1 input as False, so the DI input value is inverted before entering the AND operator of rule 2. The GCL logic architecture is similar to the PLC ladder diagram.

3. Sequential Control (Turn On in Sequence and Remain On)

In this kind of application, several digital outputs will be activated in sequence and latch their values. In the example project we provide, DO 0 \sim DO 5 will sequentially be controlled to change their status. The time chart for this application can be shown as below:



(Turns On in Sequence and Remains On)

In the example project, DI 0 is used as a trigger to start the sequential control action. Therefore, when DI 0 turn to logic high (at the moment T0), DO 0 will also change to logic high immediately. Then, DO1 ~ DO5 will sequentially be activated to logic high after a specific time interval. You can decide the time interval t1 ~ t5 (They can be different values). In this example project, t1 ~ t5 are all 5 seconds.

We can use 6 logic rules and 1 internal timer for this GCL application. In the first logic rule, DI 0 is used to trigger Timer 0 and DO 0. Since the timer has been triggered, it will start counting time and DO 1 ~ DO 5 will be activated after a specific amount of time has elapsed.. The GCL architecture can be shown by as below:



4. Multiple DI to control one DO (12 DI to 1 DO)

In many applications, only when multiple digital inputs are logic high (related conditions are all satisfied), digital output status will become logic high. In the example project we provide, only when DI 0 ~ DI 11 are all logic high at the same time, the DO 0 will become logic high. The time chart of this application can be shown as below. The green band area indicates the moment that all 12 DI are logic high, thus DO 0 will be logic high. For other time interval, there is at least one DI channel whose value is not logic high, so DO 0 value is logic low.



You can simply implement one AND logic operator to achieve this control system. However, since one logic rule only has three inputs, we need to use Logic Cascade function to have 12 inputs. There are two ways to achieve Logic Cascade:

- a. Select SendtoNextRule in Execution Stage of one logic rule. It will combine this logic rule to the next logic rule.
- b. Assign output of one logic rule and input of another logic rule to the same internal flag, combining the two logic rules together.

With the first method, the two logic rules must be next to each other. For example, rule 1 and rule 2 can be combined together. But you cannot combine rule 1 and rule 3. There is no such limitation if you use the second method to combine two different logic rules. Using the second method, you can even combine two rules on different modules together. Here, this example project adapts the first method for Logic Cascade. So the GCL logic architecture can be shown as below:



5. Flicker

Flicker is commonly used in automation control application. Typical example is we want to make the alarm flashing, controlled by digital output. This application requires a continuous pulse train by a digital output channel and we can decide the period of the pulse train. The time chart for flicker application can be shown as below:



We need to use 1 Internal Flag (Flag 0) and 2 logic rules for the Flicker application described above. In logic rule 1, the value of Flag 0 is inverted (By choosing NAND in the Logic stage) periodically. (Here, it is 0.5 second) The period is defined by the Execution_Period in the Execution Stage. The status of DO 0 is controlled by Flag 0

in logic rule 2, so DO 0 will change every 0.5 second. The GCL logic rule architecture is shown as below:



6. Rising Edge

For Rising Edge application, the DO status will be activated to logic high, when DI value is changed from logic low to logic high (it is so-called rising edge). But the DO value won't continuously remain logic high. Instead, after a specific time interval (in the example, it is 1 second), the DO value will return to logic low. Refer below for its time chart:



You can see that DO 0 will only be triggered when rising edge of DI 0 occurs. In the example project we provide, the DO status will remain logic high for 1 second. Then it will back to logic low. When PLC is used for this kind of application, the ladder diagram will be likely as below:



When you use GCL to achieve rising edge application, 3 logic rules, 1 Internal Timer (Timer 0) and 1 Internal Flag (Flag 0) are needed. For example, with logic rule 3, DO 0 value is controlled by DI 0 and Flag 0. Flag 0 is initially set as False. When rising edge occurs (DI value changes from logic low to logic high), DO will be activated (logic rule 3 are satisfied), and Timer 0 starts to count time (logic rule 1 are satisfied). After Timer 0 counts up to the specific time interval (1 second), Flag 0 will become logic True by logic rule 2, making DO 0 value logic low (logic rule 3 are not satisfied). The GCL architecture is similar to the ladder diagram.



7. Falling Edge

For Falling Edge application, the DO value will be activated to logic high, when DI value is changing from logic high to logic low (it is so-called falling edge). But the DO value won't continuously remain logic high. Instead, after a specific period (in the example project, it is 1 second), the DO value will back to logic low. The time chart is shown as below:



You can see the DO 0 will only be triggered when falling edge of DI 0 occurs. In the example project we provide, the DO status will remain logic high for 1 second. Then it will back to logic low. When PLC is used for this kind of application, the ladder diagram will be likely as below:



When you use GCL to achieve falling edge application, 3 logic rules, 1 Internal Timer (Timer 0) and 1 Internal Flag (Flag 0) are needed. For example, with logic rule 3, DO 0 value is controlled by DI 0 and Flag 0. Flag 0 value is logic False at beginning.

When falling edge occurs (DI value changes from logic high to logic low), DO will be activated (logic rule 3 are satisfied), and Timer 0 starts to count time (logic rule 1 are satisfied). After Timer 0 counts up to the specific time interval (1 second), Flag 0 will become logic True by logic rule 2, making DO 0 value logic low (logic rule 3 are not satisfied). The GCL architecture is similar to the ladder diagram.



8. Sequential Control (Turn On and Off in Sequence Continuously)

This type of automation application is similar to the 3rd application we have introduced. They are both sequential control applications. For example 3, DO channel will keep its value after it is turned on. In example 8 here, after DO channel is turned on, it will be turned off after a specific time. You can see the time chart for this application as below. There is one time base needed to control the digital output sequential action. In this example, the period of the time base to turn off one DO and turn on the next-door DO is 1 second.



Chapter 4 System Configuration

In order to implement this kind of application, 9 logic rules, 1 Internal Counter (Counter 0) and 1 Internal Flag (Flag 0) are used. In the example project we provide, logic rule 1 and 8 are used to create the time base. By logic rule 8, Flag 0 value will change every 0.5 second. In logic rule 1, once the Flag 0 value is logic high, the Counter 0 will increase 1 unit. So every 1 second, Counter 0 will increase 1 unit, making Counter 0 the time base.

Logic rules 9 ~ 14 are used to control DO 0 ~ 5. Which logic rule should be executed is based on Counter 0 value. Since Counter 0 value will continuously add 1 unit every 1 second, logic rules 9 ~ 14 will be executed in sequence every 1 second. Therefore, DO 0 ~ DO 5 will be activated sequentially in 1 second. When logic rule 15 is executed, Counter 0 will reset and its value will back to zero. So it makes the logic rules execution become a continuous loop. You can refer its GCL architecture as below.



9. DI Event Trigger (Only Occurs Once)

We can simply use GCL to perform Event trigger. For this kind of application, a DI channel is used to trigger some action. So, the input condition of GCL logic rule will be if the DI value is logic True, and output of the rule can be some desired action, such as sending remote message. When the DI value becomes logic True, the input condition is satisfied. The GCL logic rule will send message continuously until the DI value backs to logic False. However, it is not what we plan. (We don't want the message is sent out continuously. Instead, we want the message will only be sent once at the first moment that the condition is satisfied.) This kind of application can be simply achieved by using one counter input channel. You can refer to below figure. Select local counter input channel (DI_Counter) in the Input condition for one logic rule. There are two output used for the same logic rule, one is reset the counter input channel, and another is the desired action you want. Then, when the counter input channel detect DI signal, the condition is satisfied and the desired action will be done. At the same time, the GCL rule reset the counter input channel. So the desired action will only be executed once.



The true image of configuration of GCL logic rule in ADAM.NET Utility can be shown as below. (Here, the desired action is to send remote message.)



4.3.6 Remotely Monitoring and Control via Web Server

As mentioned in feature highlight section, this new feature will bring obvious benefit to user in maintenance anywhere over the Ethernet in the local field. Now the following paragraph will show how to build up this circumstance and use it. This feature not only works on PC or laptop, it can also work on portable devices, like smart phone or pad.

Preset conditions:

- 1. Finish the installation and network setting of ADAM-6200 module
- 2. ADAM-6200 is connected to your local Ethernet network

Operating steps: (Take smart phone as example)

1. Make you smart phone connect to your local Ethernet network via wireless and then open the browser of your smart phone.

Note!

ADAM-6200 module is developed by public HTML 5 base, but for detailed indication and data transmission mode may be different on Web page of the operating system.

For smart phone system, the minimum requirement of Web browsers as below:

- Safari 5 in Apple iOS
- Web Browser in Google Android 4.0 (Ice Cream Sandwich)
- Chrome in Google Android 4.0 (Ice Cream Sandwich)

Otherwise, if where you operate is PC platform, you can refer to the minimum requirement of Web browsers as below:

- Internet Explorer (version 9)
- Google Chrome (version 8)
- Mozilla Firefox (version 10)
- Enter IP address of ADAM-6200 module Please enter the IP address in URL field of the browser, for example: 172.18.3.163.
 You will see the login page (shown as below) on the screen

You will see the login page (shown as below) on the screen.

📶 中華電信 穼	下午 1:36	95 % 📟
A	DAM-6200 Web Logi	n
172.18.3.163	/ 0	Google
1	ADAM-6200 Web	
Account:		
Password:		
	Login)
	ret 🔐	

3. Enter the account and password.



The default setting of account is "root", and password is "00000000"

		1.5	÷.,	1
10	_	_	- 1	
Шēн	_	_	-8	
ЦÐ			-1	
1.6	_	_	-8	

•••• 中華電信 🤤	下午1:45	94% 🚍		
A	ADAM-6200 Web Login			
172.18.3.16	3/ 🖒	Google		
	ADAM-6200 W	eb		
Account:	root			
Password:	•••••			
(Login			
	Login			
		100 C		

 Click Login button, you will see the operation page. In this page, you will not only to monitor I/O status (trend log), but also simply enable output setting below.



5. For example, if you check on DO 0, 2, 3, and 5, then click "Apply Output", you will see the bulb is lit on and trend log is also changed.



💵 中華電信 穼 下午 2:14			98	3 % 🗲			
	Digital Input Values						
		Pol	ling 3	8 time	s		
DI	DI	DI	DI	DI	DI	DI	DI
0	1	2	3	4	5	6	7
		Digita	al Out	put V	alues		
		Pol	ling 3	8 time	s		
DO	DO	DO	DO	DO	DO	DO	
0	1	2	3	4	5	6	
8		9	9		9		
	A	ll Ch	annel	s Out	put: 🗌		
DO	DO	DO	DO	DO	DO	DO	
0	1	2	3	4	5	6	
		A	pply (Outp	ut		
			Ľ	2	m		6



I/O Modbus Mapping Table

A.1 I/O Modbus Mapping Table

A.1.1 Modbus Function Code Introduction

To full-fill the programming requirement, there is a series of function code standard for user's reference.

Code (Hex)	Name	Usage
01	Read Coil Status	Read Discrete Output Bit
02	Read Input Status	Read Discrete Input Bit
03	Read Holding Registers	Read 16-bit register. Used to read integer or
04	Read Input Registers	floating point process data.
05	Force Single Coil	Write data to force coil ON/OFF
06	Preset Single Register	Write data in 16-bit integer format
08	Loopback Diagnosis	Diagnostic testing of the communication port
0F	Force Multiple Coils	Write multiple data to force coil ON/OFF
10	Preset Multiple Registers	Write multiple data in 16-bit integer format

A.1.2 ADAM-6217 8-ch Isolated Analog Input Module

Address (0X):

Address (0X)	Channel	Description	Attribute	
00101	0		Write	
00102	1	Reset Historical Max. Value to present value	Write	
00103	2		Write	
00104	3		Write	
00105	4		Write	
00106	5		Write	
00107	6		Write	
00108	7	-	Write	
00109	Average Ch0 - 7		Write	

00111	0		Write
00112	1		Write
00113	2	Reset Historical Min. Value to present value	Write
00114	3		Write
00115	4		Write
00116	5		Write
00117	6		Write
00118	7		Write
00119	Average Ch0 - 7		Write

00121	0		Read
00122	1		Read
00123	2		Read
00124	3	 Open-Circuit Flag (Burnout) 	Read
00125	4		Read
00126	5		Read
00127	6		Read
00128	7		Read
00131	0		Read
00132	1		Read
00133	2		Read
00134	3		Read
00135	4	High Alarm Elag	Read
00136	5	— High Alarm Flag	Read
00137	6		Read
00138	7		Read
00139	Average Ch0 - 7	_	Read
00141	0		Read
00142	1		Read
00143	2		Read
00144	3		Read
00145	4	 Low Alarm Flag	Read
00146	5		Read
00147	6		Read
00148	7		Read
00149	Average Ch0 - 7		Read
00301	0		Write
00302	1		Write
00303	2		Write
00304	3		Write
00305	4	— Clear GCL Counter	Write
00306	5		Write
00307	6		Write
00308	7		Write
	I		VVIIC

Address (4X):					
Address (4X)	Channel	Description	Attribute		
40001	0		Read		
40002	1		Read		
40003	2		Read		
40004	3		Read		
40005	4		Read		
40006	5		Read		
40007	6		Read		
40008	7		Read		
40009	Average Ch0 - 7		Read		
40011	0		Pood		
40012	1		Read		
40012	2		Read		
40013	2		Read		
40014	3		Read		
40015	5	— Historical Max. AI Value	Read		
40010	5		Reau		
40017	0		Reau		
40018	/		Reau		
40019	Ch0 - 7		Read		
40021	0		Read		
40022	1		Read		
40023	2		Read		
40024	3		Read		
40025	4	— Historical Min. Al Value	Read		
40026	5		Read		
40027	6		Read		
40028	7		Read		
40029	Average Ch0 - 7		Read		
40101 - 40102	0		Read		
40103 - 40104	1		Read		
40105 - 40106	2		Read		
40107 - 40108	3		Read		
40109 - 40110	4	- AI Status	Read		
40111 - 40112	5	_	Read		

40113 - 40114

40115 - 40116

6

7

Read

Read

40031~40032	0		Read
40033~40034	1		Read
40035~40036	2		Read
40037~40038	3	—	Read
40039~40040	4	AL Electing Value (IEEE754)	Read
40041~40042	5		Read
40043~40044	6	—	Read
40045~40046	7	—	Read
40047~40048	Average 0~7	_	Read

40051~40052	0	Historical Max. Al Floating Value (IEEE754)	Read
40053~40054	1		Read
40055~40056	2		Read
40057~40058	3		Read
40059~40060	4		Read
40061~40062	5		Read
40063~40064	6		Read
40065~40066	7		Read
40067~40068	Average 0~7		Read

40071~40072	0		Read
40073~40074	1		Read
40075~40076	2		Read
40077~40078	3		Read
40079~40080	4	Historical Min. AI Floating Value	Read
40081~40082	5	(IEEE754)	Read
40083~40084	6		Read
40085~40086	7	-	Read
40087~40088	Average 0~7		Read

40201	0		R/W
40202	1		R/W
40203	2		R/W
40204	3		R/W
40205	4	 Type Code	R/W
40206	5		R/W
40207	6		R/W
40208	7		R/W
40209	Average Ch0 - 7		Read

40221	All	Al Channel Enable	R/W
40305	0 - 15	GCL Internal Flag Value	R/W

Note:

- 1. Users can configure the High alarm value in the ADAM.NET utility. When AI value is higher than the High alarm, this bit will be 1.
- 2. Users can configure the Low alarm value in the ADAM.NET utility. When AI value is lower than the Low alarm, this bit will be 1.
- 3. The value definition of AI Status

Bit	Description	
0	Failed to provide AI value (UART timeout)	
1	Over Range	
2	Under Range	
3	Open Circuit (Burnout)	
7	AD Converter failed	
9	Zero/Span Calibration Error	

4. Type code table

Input Range	Type Code (HEX)	
+/- 10V	0x0143	
+/- 5 V	0x0142	
+/- 1 V	0x0140	
+/- 500 mV	0x0104	
+/- 150 mV	0x0103	
+/- 20 mA	0x0181	
0 ~ 20 mA	0x0182	
4 ~ 20 mA	0x0180	

A.1.3 ADAM-6224 4-ch Isolated Analog Output Module

Address (0X):

Address (0X)	Channel	Description	Attribute
00001	0		Read
00002	1		Read
00003	2		Read
00004	3		Read
00301	0		Write
00302	1		Write
00303	2		Write
00304	3		Write
00305	4	Clear GCL Counter	Write
00306	5		Write
00307	6		Write
00308	7		Write
Address (4X):			
Address (4X)	Channel	Description	Attribute
40001		Description	R/M
40001	1	—	R/W
40003	2	— AO Value	R/W
40004	3		R/W
	0		
40101 – 40102	0		Read
40103 - 40104	1		Read
40105 - 40106	2	— AO Status	Read
40107 - 40108	3		Read
40111	0		Read
40112	1		Read
40113	2	— Di Event Status	Read
40114	3	—	Read
40201	0		R/W
40202	1	- Type Code	R/W
40203	2		R/W
40204	3		R/W
40301	All	DI Value	Read
40305	0 – 15	GCL Internal Flag Value	R/W
40411	0		R/W
40412	1		R/W
40413	2	- Satety value	R/W
40414	3		R/W

40401	0		R/W
40402	1	Stortup Valua	R/W
40403	2	Startup value	R/W
40404	3		R/W

Note:

1. The value definition of DI Event Status

Bit	Description
0	Unreliable DI value (UART Timeout)
1	Safety Value triggered
2	Startup Value triggered

2. The value definition of AO Status

First register

Description
Fail to provide AO Value
No Output Current)
Zero/Span Calibration Error

Second register

Bit	Description
0	DI triggered to Safety Value
1	DI triggered to Startup Value
2	AO triggered to Fail Safety Value

3. Type Code Table

Input Range	Type Code (HEX)	
0 ~ 20 mA	0x0182	
4 ~ 20 mA	0x0180	
0 ~ 10 V	0x0148	
0 ~ 5 V	0x0147	
+/- 10 V	0x0143	
+/- 5 V	0x0142	

A.1.4 ADAM-6250 15-ch Digital Input/Output Module

Address (0X):

Address (0X)	Channel	Description	Attribute
00001	0		Read
00002	1		Read
00003	2		Read
00004	3		Read
00005	4	— Di value	Read
00006	5		Read
00007	6		Read
80000	7		Read
00017	0		R/M
00017	1	Description DI Value DI Value DO Value Counter Start (1) / Stop (0) Clear Counter (1) Clear Counter (1)	
00018	2		
00019	2		
00020	3		
00021	5		
00022	6		
00023	0		
00033	0		R/W
00034	1		R/W
00035	2		R/W
00036	3		R/W
00037	4		R/W
00038	5		R/W
00039	6		R/W
00040	7		R/W
00044			\AL-'L-
00041	0		VVrite
00042	1		Write
00043	2		Write
00044	3	— Clear Counter (1)	Write
00045	4		Write
00046	5		Write
00047	6		Write
00048	7		Write

00049	0		R/W	
00050	1		R/W	
00051	2		R/W	
00052	3		R/W	
00053	4		R/W	
00054	5		R/W	
00055	6		R/W	
00056	7		R/W	
00057	0		R/W	
00058	1		R/W	
00059	2		R/W	
00060	3		R/W	
00061	4	— DI Lateri Status (1)	R/W	
00062	5		R/W	
00063	6		R/W	
00064	7		R/W	
00301	0		Write	
00302	1		Write	
00303	2		Write	
00304	3		Write	
00305	4	— Clear GCL Counter	Write	
00306	5		Write	
00307	6		Write	—
00308	7		Write	
	-			
Address (4A):				
Address (4X)	Channel	Description	Attribute	
40001 – 40002	0		Read	
40003 - 40004	1		Read	
40005 – 40006	2		Read	
40007 – 40008	3	 Counter/Frequency Value 	Read	
40009 – 40010	4		Read	
40011 – 40012	5		Read	
40013 – 40014	6		Read	
40015 – 40016	7		Read	
40017 – 40018	0		R/W	
40019 – 40020	1		R/W	
40021 – 40022	2		R/W	
40023 – 40024	3	Pulse Output Low Level Width	R/W	
40025 – 40026	4		R/W	
40027 – 40028	5		R/W	
40029 – 40030	6		R/W	

40031 - 40032	0		R/W
40033 - 40034	1		R/W
40035 - 40036	2		R/W
40037 – 40038	3	Pulse Output High Level Width	R/W
40039 - 40040	4		R/W
40041 - 40042	5		R/W
40043 - 40044	6		R/W
40045 - 40046	0		R/W
40047 - 40048	1		R/W
40049 - 40050	2		R/W
40051 – 40052	3	Set Absolute Pulse	R/W
40053 - 40054	4		R/W
40055 - 40056	5		R/W
40057 – 40058	6		R/W
40059 - 40060	0		R/W
40061 - 40062	1		R/W
40063 - 40064	2		R/W
40065 - 40066	3	Set Incremental Pulse	R/W
40067 - 40068	4		R/W
40069 - 40070	5		R/W
40071 – 40072	6		R/W
40301	All	DI Value	Read
40303	All	DO Value	R/W
40305	0 - 15	GCL Internal Flag Value	R/W

A.1.5 ADAM-6251 16-ch Digital Input Module

Address (0X):

Address (0X)	Channel	Description	Attribute
00001	0		Read
00002	1		Read
00003	2		Read
00004	3		Read
00005	4		Read
00006	5		Read
00007	6		Read
80000	7		Read
00009	8	Di value	Read
00010	9		Read
00011	10		Read
00012	11		Read
00013	12		Read
00014	13		Read
00015	14		Read
00016	15		Read
00033	0		R/W
00034	1		R/W
00035	2		R/W
00036	3		R/W
00037	4		R/W
00038	5		R/W
00039	6		R/W
00040	7	Countar Start (1) / Stop (0)	R/W
00041	8		R/W
00042	9		R/W
00043	10		R/W
00044	11		R/W
00045	12		R/W
00046	13		R/W
00047	14		R/W
00048	15		R/W

00049	0		Write
00050	1		Write
00051	2		Write
00052	3		Write
00053	4		Write
00054	5		Write
00055	6		Write
00056	7	Clear Counter (1)	Write
00057	8		Write
00058	9		Write
00059	10		Write
00060	11		Write
00061	12		Write
00062	13		Write
00063	14		Write
00064	15		Write
00065	0		R/W
00066	1		R/W
00067	2		R/W
00068	3		R/W
00069	4		R/W
00070	5		R/W
00071	6		R/W
00072	7		R/W
00073	8		R/W
00074	9		R/W
00075	10		R/W
00076	11		R/W
00077	12		R/W
00078	13		R/W
00079	14		R/W
00080	15		R/W

00081	0		R/W
00082	1		R/W
00083	2		R/W
00084	3		R/W
00085	4		R/W
00086	5		R/W
00087	6		R/W
00088	7	DLL atch Status	R/W
00089	8	Di Laich Status	R/W
00090	9		R/W
00091	10		R/W
00092	11		R/W
00093	12		R/W
00094	13		R/W
00095	14		R/W
00096	15		R/W

00301	0	Write
00302	1	 Write
00303	2	 Write
00304	3	Write
00305	4	Write
00306	5	Write
00307	6	Write
00308	7	Write

Address (4X):

Address (4X)	Channel	Description	Attribute
40001 - 40002	0		Read
40003 - 40004	1		Read
40005 - 40006	2		Read
40007 - 40008	3		Read
40009 - 40010	4		Read
40011 – 40012	5		Read
40013 - 40014	6		Read
40015 - 40016	7		Read
40017 - 40018	8	— Counter/Frequency value	Read
40019 - 40020	9		Read
40021 - 40022	10		Read
40023 - 40024	11		Read
40025 - 40026	12		Read
40027 - 40028	13		Read
40029 - 40030	14		Read
40031 - 40032	15		Read

40301	All	DI Value	Read
40305	0 - 15	GCL Internal Flag Value	R/W

A.1.6 ADAM-6256 16-ch Digital Output Module

Address (0X):

40031 - 40032

15

Address (0X)	Channel	Description	Attribute
00017	0		R/W
00018	1		R/W
00019	2		R/W
00020	3		R/W
00021	4		R/W
00022	5		R/W
00023	6		R/W
00024	7		R/W
00025	8		R/W
00026	9		R/W
00027	10		R/W
00028	11		R/W
00029	12		R/W
00030	13		R/W
00031	14		R/W
00032	15		R/W
00301	0		Write
00302	1		Write
00303	2		Write
00304	3		Write
00305	4	— Clear GCL Counter	Write
00306	5		Write
00307	6		Write
00308	7		Write
Address (4X):			
Address (4X)	Channel	Description	Attribute
40001 - 40002	0		R/W
40003 - 40004	1		R/W
40005 - 40006	2	—	R/W
40007 - 40008	3		R/W
40009 - 40010	4	—	R/W
40011 - 40012	5	—	R/W
40013 - 40014	6	—	R/W
40015 - 40016	7	— Dulas Output Low Loval Width	R/W
40017 - 40018	8		R/W
40019 - 40020	9	—	R/W
40021 - 40022	10	—	R/W
40023 - 40024	11	—	R/W
40025 - 40026	12		R/W
40027 - 40028	13		R/W
40029 - 40030	14	—	R/W

R/W

40033 - 40034	0	- - -	R/W
40035 - 40036	1		R/W
40037 - 40038	2		R/W
40039 - 40040	3		R/W
40041 - 40042	4		R/W
40043 - 40044	5	_	R/W
40045 - 40046	6	_	R/W
40047 - 40048	7	- Dulas Outrut Llink Lough Midth	R/W
40049 - 40050	8	- Puise Output High Level Width	R/W
40051 - 40052	9	-	R/W
40053 - 40054	10	-	R/W
40055 - 40056	11	-	R/W
40057 - 40058	12		R/W
40059 - 40060	13		R/W
40061 - 40062	14	-	R/W
40063 - 40064	15	-	R/W
40065 - 40066	0		R/W
40067 - 40068	1	-	R/W
40069 - 40070	2	-	R/W
40071 - 40072	3	-	R/W
40073 - 40074	4	-	R/W
40075 - 40076	5	-	R/W

Set Absolute Pulse

R/W

40077 - 40078

40079 - 40080

40081 - 40082

40083 - 40084

40085 - 40086

40087 - 40088

40089 - 40090

40091 - 40091

40093 - 40092

40095 - 40096

6

7

8

9

10

11

12

13

14

15
\mathbf{O}
\mathbf{O}
$\mathbf{\nabla}$
\sim
()
\bigcirc
<u> </u>
\mathbf{i}
()
<
01
\mathbf{O}
\mathbf{O}
10
\mathbf{U}
_
0)
_
Π

40097 – 40098	0		R/W
40099 - 40100	1		R/W
40101 – 40102	2		R/W
40103 - 40104	3		R/W
40105 - 40106	4		R/W
40107 – 40108	5		R/W
40109 - 40110	6		R/W
40111 – 40112	7	Sot Incromental Dulce	R/W
40113 – 40114	8		R/W
40115 – 40116	9		R/W
40117 – 40118	10		R/W
40119 – 40120	11		R/W
40121 – 40122	12		R/W
40123 – 40124	13		R/W
40125 – 40126	14		R/W
40127 – 40128	15		R/W
40303	All	DO Value	R/W
40305	0 – 15	GCL Internal Flag Value	R/W

A.1.7 ADAM-6260 6-ch Relay Output Module

Address (0X):

Address (0X)	Channel	Description	Attribute
00017	0		R/W
00018	1		R/W
00019	2		R/W
00020	3		R/W
00021	4		R/W
00022	5		R/W
00301	0		Write
00302	1		Write
00303	2		Write
00304	3		Write
00305	4		Write
00306	5		Write
00307	6		Write
00308	7		Write
Address (4X):			
Address (4X)	Channel	Description	Attribute
40001 - 40002	0		R/W
40003 - 40004	1	 Pulse Output Low Level Width 	R/W
40005 – 40006	2		R/W
40007 – 40008	3		R/W
40009 – 40010	4		R/W
40011 – 40012	5	—	R/W
40013 – 40014	0		R/W
40015 – 40016	1		R/W
40017 – 40018	2	- Pulse Output High Level Width	R/W
40019 – 40020	3		R/W
40021 – 40022	4		R/W
40023 – 40024	5		R/W
40025 – 40026	0		R/W
40027 – 40028	1		R/W
40029 - 40030	2	- Set Absolute Pulse	R/W
40031 - 40032	3		R/W
40033 - 40034	4		R/W
40035 – 40036	5	<u> </u>	R/W

40037 – 40038	0		R/W
40039 - 40040	1		R/W
40041 - 40042	2		R/W
40043 - 40044	3		R/W
40045 - 40046	4		R/W
40047 - 40048	5		R/W
40303	All	DO Value	R/W
40305	0 - 15	GCL Internal Flag Value	R/W

A.1.8 ADAM-6266 4-ch Relay Output Module with 4-ch DI

Address (0X):

Address (0X)	Channel	Description	Attribute
00001	0		Read
00002	1		Read
00003	2		Read
00004	3		Read
00017	0		R/W
00018	1		R/W
00019	2	— DO value	R/W
00020	3		R/W
00033	0		R/W
00034	1		R/W
00035	2	- Counter Start (1)7 Stop (0)	R/W
00036	3		R/W
00037	0		Write
00038	1	Clear Counter (1)	Write
00039	2	— Clear Counter (1) —	Write
00040	3		Write
00041	0		R/W
00042	1		R/W
00043	2	— Clear Overflow	R/W
00044	3		R/W
00045	0		R/W
00046	1		R/W
00047	2		R/W
00048	3		R/W

00301	0		Write
00302	1		Write
00303	2		Write
00304	3	Clear GCL Counter	Write
00305	4		Write
00306	5		Write
00307	6		Write
00308	7		Write

Address (4X):

Address (4X)	Channel	Description	Attribute
40001 – 40002	0		Read
40003 - 40004	1		Read
40005 - 40006	2	- Counter/Frequency value	Read
40007 - 40008	3		Read
40009 - 40010	0		R/W
40011 – 40012	1	— Dulas Output Lovel Width	R/W
40013 – 40014	2		R/W
40015 – 40016	3		R/W
40017 – 40018	0		R/W
40019 – 40020	1	— Dulas Outsut Link Laus Midth	R/W
40021 – 40022	2	- Puise Output High Level Width	R/W
40023 - 40024	3	—	R/W
40025 – 40026	0		R/W
40027 – 40028	1		R/W
40029 - 40030	2		R/W
40031 – 40032	3		R/W
40033 – 40034	0		R/W
40035 – 40036	1		R/W
40037 – 40038	2	- Sei Absolute Puise	R/W
40039 - 40040	3		R/W
40301	All	DI Value	Read
40303	All	DO Value	R/W
40305	0 - 15	GCL Internal Flag Value	R/W



ADAM-6200 ASCII Commands

B.1 ASCII Commands for ADAM-6200 modules

For users do not familiar to Modbus protocol, Advantech offers a function library as a protocol translator, integrating ASCII command into Modbus/TCP structure. Therefore, users familiar to ASCII command can access ADAM-6200 module easily. Before explaining the structure of ASCII command packed with Modbus/TCP format. Let's see how to use an ASCII command and how many are available for your program.

The command set is divided into the following categories:

- System Command Set
- Analog Input Command Set
- Analog Input Alarm Command Set
- Digital I/O Command Set

Every command set category starts with a command summary of the particular type of module, followed by datasheets that give detailed information about individual commands. Although commands in different subsections sometime share the same format, the effect they have on a certain module can be completely different than that of another. Therefore, the full command sets for each type of modules are listed along with a description of the effect the command has on the given module.

B.1.1 System Command Set

Function	Description	Command	Example
Read module name	Return the module name from a specified module	Cmd: \$aaM(cr) Ret: !aannnn(cr)	Send: \$01M(cr) Receive: !016250(cr)
Read Firmware Version	Return the firmware version from a speci- fied module	Cmd: \$aaF(cr) Ret: !aa nn.nn Bnn(cr)	Send: \$01F(cr) Receive: !01 A1.00 B01(cr)
Write GCL Internal Flags	Write value(s) to GCL internal flag(s) on a spe- cific ADAM-6200 Module	Cmd:#aaVd- bbbbddddddd(cr) Ret: >aa(cr)	Send: #01Vd000000000000(c r) Receive: >01(cr)
Read GCL Internal Flags	Read all GCL internal flags' values from a specific ADAM-6200 module	Cmd: #aaVd(cr) Ret: >aadddddddd(cr)	Send: \$01Vd(cr) Receive: >010000000(cr)

Note!

- 1. Command \$aaM and \$aaF support all ADAM-6200 I/O modules.
- 2. Command #aaVdbbbbddddddd supports all ADAM-6200 I/O modules.
- 3. Command #aaVd supports all ADAM-6200 I/O modules.

\$aaM

+	
Name	Read Module Name
Description	Returns the module name from a specified module.
Syntax	\$aaM(cr)
	\$ is a delimiter character.
	aa (range 00-FF) means the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	M is the Module Name command.
	(cr) is the terminating character, carriage return (0Dh).
Response	!aa60bb(cr) if the command is valid.
	?aa(cr) if an invalid operation was entered.
	There is no response if the module detects a syntax error, communica- tion error or if the address does not exist.
	! delimiter indicating a valid command was received.
	? delimiter indicating the command was in-valid.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.
	bb (range 00-FF) represents the 2-character model number of an ADAM-6200 module.
	(cr) is the terminating character, carriage return (0Dh).
Example	The command requests the system at address 01h to send its module name. The system at address 01h responds with module name 6250 indicating that there is an ADAM-6250 at address 01h.
	Command: \$01M(cr)
	Response: !016250(cr)

\$aaF	
Name	Read Firmware Version
Description	Returns the firmware version from a specified module.
Syntax	\$aaF(cr)
	\$ is a delimiter character.
	aa (range 00-FF) means the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	F is the Firmware Version command.
	(cr) is the terminating character, carriage return (0Dh).
Response	!aa(version)(cr) if the command is valid.
	?aa(cr) if an invalid operation was entered.
	There is no response if the module detects a syntax error, communica- tion error or if the address does not exist.
	! delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.
	(version) represents the firmware version of the module.
	(cr) is the terminating character, carriage return (0Dh).
Example	The command requests the system at address 01h to send its firm-ware version.
	The system responds with firmware version 1.01.
ASCII	Command: \$01F(cr)
	Response: !01 A1.00B01(cr)

#aaVdbbbbddddddd

Name	Write Value(s) to GCL Internal Flags (Auxiliary Flags)
Description	This command sets a single or all GCL internal flag(s) on the specific ADAM-6200 module.
Syntax	#aaVdbbbbddddddd(cr)
	# is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave net- work address of the ADAM-6200 module. (Always 01)
	Vd is the GCL Internal Flag command.
	bbbb is used to indicate which GCL internal flag(s) to set.
	Writing to all GCL internal flags: 0000
	Writing to a single GCL internal flag: First character is 1, and 2 \sim 4 characters indicate the GCL internal flag number which can range from 0h to Fh.
	ddddddd is the hexadecimal representation of the GCL internal flag value(s).
	Each character represents 4 GCL internal flags' values.
	(cr) is the terminating character, carriage return (0Dh)
Response	>aa(cr) if the command was valid.
	?aa(cr) if an invalid command has been issued.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	> delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of a module that is responding.
	(cr) is the terminating character, carriage return (0Dh)
Example 1	This command sets all GCL internal flags values.
	Values of All GCL internal flags (Flag 0 ~ 15) are logic low.
ASCII	Command: #01Vd00000000000(cr)
	Response: >01(cr)
Example 2	This command sets all GCL internal flags values.
	Values of All GCL internal flags (Flag 0 ~ 15) are logic high.
ASCII	Command: #01Vd00000000FFFF(cr)
	Response: >01(cr)
Example 3	This command sets one specific GCL internal flag value.
	GCL internal flag (Flag 3) is logic high.
ASCII	Command: #01Vd10030000001(cr)
	Response: >01(cr)
Example 4	This command sets one specific GCL internal flag value.
	GCL internal flag (Flag 14) is logic low.
ASCII	Command: #01Vd100E0000000(cr)
	Response: >01(cr)

\$aaVd	
Name	Read GCL Internal Flags' (Auxiliary Flags) Values
Description	This command reads all GCL internal flags' values from the specific ADAM-6200 module.
Syntax	\$aaVd(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave net- work address of the ADAM-6200 module. (Always 01)
	Vd is the GCL Internal Flag command.
	(cr) is the terminating character, carriage return (0Dh)
Response	>aadddddddd(cr) if the command was valid.
	?aa(cr) if an invalid command has been issued.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	> delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of a module that is responding.
	ddddddd is the hexadecimal representation of the GCL internal flag value(s).
	Each character represents 4 GCL internal flags' values.
	(cr) is the terminating character, carriage return (0Dh)
Example	This command reads all GCL internal flags values.
	The characters "B" mean "1011" and character "2" means "0010", so GCL internal flag 0, 1, 3, 5 are logic high while other GCL internal flags are all logic low.
ASCII	Command: \$01Vd (cr)
	Response: >01000002B(cr)

B.1.2 Analog Input Command Set

Function	Description	Command	Example
Read analog input from Chan- nel N	Return the input value from the specified ana- log input channel	Cmd: #aan(cr) Ret:>+nnnn.nnn(cr) or >–nnnn.nnn(cr)	Send: #010(cr) Receive: >+0000.000(cr)
Read analog input from all channels	Returns the input data from all analog input channels in a specified module.	Cmd: #aa(cr) Ret:>(data) (data) (data) (data) (data) (data) (data) (data)(cr) Where (data) is +nnnn.nnn or –nnnn.nnn	Send: #010(cr) Receive: >+0010.000+0010.000 +0010.000+0010.000+ 0010.000+0010.000+0 010.000+0010.000(cr)
Auto Calibration	Calibrate the analog input range of module	Cmd: \$aa1(cr) Ret:!aa(cr)	Send: \$011(cr) Receive: !01(cr)
Read channel Enable/Disable Status	Asks a specified module to return the Enable/Dis- able status of all analog input channels	Cmd: \$aa6(cr) Ret:!aamm(cr)	Send: \$016(cr) Receive: !01FF(cr)
Set channel Enable/Disable Status	Set Enable/Disable sta- tus for analog input chan- nels	Cmd: \$aa5mm(cr) Ret:!aa(cr)	Send: \$015FF(cr) Receive: !01(cr)
Read all Max. Data	Read the maximum data from all analog input channels	Cmd: #aaMH(cr) Ret:> (data) (data) (data) (data) (data) (data) (data) (data)(cr) Where (data) is +nnnn.nnn or –nnnn.nnn	Send: #01MH(cr) Receive: >+0010.000+0010.000 +0010.000+0010.000+ 0010.000+0010.000+0 010.000+0010.000(cr)
Read single Max. Data	Read the maximum date from a specified analog input channel	Cmd: #aaMHn(cr) Ret:> (data) (cr) Where (data) is +nnnn.nnn or –nnnn.nnn	Send: #01MH1(cr) Receive: >+0010.000(cr)
Read all Min. Data	Read the minimum data from all analog input channels	Cmd: #aaML(cr) Ret:> (data) (data) (data) (data) (data) (data) (data) (data)(cr) Where (data) is +nnnn.nnn or –nnnn.nnn	Send: #01ML(cr) Receive: >+0000.000+0000.000 +0000.000+0000.000+ 0000.000+0000.000+0 000.000+0000.000(cr)
Read single Min. Data	Read the minimum data from a specified analog input channel	Cmd: #aaMLn(cr) Ret:> (data) (cr)	Send: #01ML3(cr) Receive: >+0000.000(cr)
Read Analog input range code	Return the input range code from the specific analog input channel	Cmd: \$aaBnn(cr)(cr) Ret:> aa(Code) (cr)	Send: \$01B01(cr) Receive: >010182(cr)

#aan	
Name	Read Analog Input from Channel N
Description	Returns the input data from a specified analog input channel in a spec- ified module.
Syntax	#aan(cr)
	# is a delimiter character.
	aa (range 00-FF) means the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	n (range 0-8) represents the specific channel you want to read the input data.
	(cr) is the terminating character, carriage return (0Dh).
Response	>(data)(cr) if the command is valid.
	?aa(cr) if an invalid operation was entered.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	> delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	(cr) is the terminating character, carriage return (0Dh).
Example	Channel 2 of the ADAM-6200 analog module at address 01h responds with an input value +10.000.
ASCII	Command: #012(cr)
	Response: >+0010.000(cr)
#aa	
Name	Read Analog Input from All Channels
Description	Returns the input data from all analog input channels in a specified module.
Syntax	#aa(cr)
	# is a delimiter character.
	aa (range 00-FF) menans the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	(cr) is the terminating character, carriage return (0Dh).
Response	>(data)(data)(data)(data)(data)(data)(data)(data)(cr) if the com- mand is valid.
	?aa(cr) if an invalid operation was entered.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	> delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	(cr) is the terminating character, carriage return (0Dh).
Example	Command: #01(cr)
	Response:>+0010.000+0010.000+0010.000+0010.000+0010.000+00 10.000+0010.000+0010.000(cr)
Note!	The latest data returned is the Average value of the preset channels in
	this module.

ADAM-6200 User Manual

\$aa1

• · ·			
Name	Auto Calibration		
Description	Calibrate the analog input range of module		
Syntax	\$aa1(cr)		
	\$ is a delimiter character.		
	aa (range 00-FF) represents the 2-character hexadecimal Modbus address of the ADAM-6200 module which is to be calibrated. (Always 01)		
	1 represents the zero calibration command.		
	(cr) is the terminating character, carriage return (0Dh)		
Response	!aa(cr) if the command is valid.		
	?aa(cr) if an invalid operation was entered.		
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.		
	! delimiter indicating a valid command was received.		
	? delimiter indicating the command was invalid.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.		
	(cr) is the terminating character, carriage return (0Dh)		

\$aa6			
Name	Read Channel Enable/Disable Status		
Description	Asks a specified module to return the Enable/Disable status of all ana- log input channels		
Syntax	\$aa6(cr)		
	\$ is a delimiter character.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)		
	6 is the read channels status command.		
	(cr) is the terminating character, carriage return (0Dh)		
Response	!aamm(cr) if the command is valid.		
	?aa(cr) if an invalid operation was entered.		
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.		
	! delimiter indicating a valid command was received.		
	? delimiter indicating the command was invalid.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.		
	mm are two hexadecimal values.		
	Each value is interpreted as 4 bits.		
	The first 4-bit value represents the status of channels 7-4, the second 4 bits represents the status of channels 3-0.		
	A value of 0 means the channel is disabled, while a value of 1 means the channel is enabled.		
	(cr) is the terminating character, carriage return (0Dh)		
Example	The command asks the specific module at address 01h to send Enable/Disable status of all analog input channels. The analog input module responds that all its channels are enabled (FF equals 1111 and 1111).		
ASCII	Command: \$016(cr) Response: !01FF(cr)		

\$aa5mm

Y aa Y			
Name	Set Channel Enable/Disable Status		
Description	Set Enable/Disable status for all analog input channels		
Syntax	\$aa5mm(cr)		
	\$ is a delimiter character.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module. (Always 01)		
	5 identifies the enable/disable channels command.		
	mm (range 00-FF) are two hexadecimal characters.		
	Each character is interpreted as 4 bits.		
	The first 4-bit value represents the status of channels 7-4.		
	The second 4-bit value represents the status of channels 3-0.		
	A value of 0 means the channel is disabled, while a value of 1 means the channel is enabled.		
	(cr) is the terminating character, carriage return (0Dh)		
Response	laa(cr) if the command is valid.		
	?aa(cr) if an invalid operation was entered.		
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.		
	! delimiter indicating a valid command was received.		
	? delimiter indicating the command was invalid.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.		
	(cr) is the terminating character, carriage return (0Dh)		
Example	The command enables/disables channels of the analog input module at address 01h. Hexadecimal 8 equals binary 1000, which enables channel 7 and disables channels 4, 5 and 6. Hexadecimal 1 equals binary 0001, which enables channel 0 and disables channels 1, 2 and 3.		
ASCII	Command: \$01581(cr)		
	Response: !01(cr)		

#aaMH			
Name	Read Maximum Value		
Description	Read the maximum values from all analog input channels in a speci- fied analog module		
Syntax	#aaMH(cr)		
	# is a delimiter character.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module to be read.(Always 01)		
	MH represents the read maximum value command.		
	(cr) is the terminating character, carriage return (0Dh)		
Response	>(data)(data)(data)(data)(data)(data)(data)(data)(cr) if the com- mand is valid.		
	?aa(cr) if an invalid operation was entered.		
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.		
	> delimiter indicating a valid command was received.		
	? delimiter indicating the command was invalid.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.		
	(cr) is the terminating character, carriage return (0Dh)		
Example	The command asks the specific module at address 01h to send his- toric maximum value from analog input channels.		
ASCII	Command: #01MH(cr)		
	Response: >+0010.000+0010.000+0010.000+0010.000+0010.000+0010.000+00 10.000 +0010.000(cr)		
Notal	The letest data returned is the Average value of the proset charged in		
NOIH	THE MEN DAMA LEMITIED IN THE AVELAGE VALUE OF THE DIESEL CHADDELS IN		

Note!

The latest data returned is the Average value of the preset channels in this module.

#aaMHn

Name	Read Maximum Value from channel N		
Description	Read the maximum value from a specific channel in a specified module		
Syntax	#aaMHn(cr)		
	# is a delimiter character.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module to be read. (Always 01)		
	MH represents the read maximum value command.		
	n (range 0-8) represents the specific channel you want to read the input data.		
	(cr) is the terminating character, carriage return (0Dh)		
Response	>(data)(cr) if the command is valid.		
	?aa(cr) if an invalid operation was entered.		
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.		
	> delimiter indicating a valid command was received.		
	? delimiter indicating the command was invalid.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.		
	(cr) is the terminating character, carriage return (0Dh)		
Example	The command asks the specific module at address 01h to send his- toric maximum value from analog input channel 2.		
ASCII	Command: #01MH2(cr)		
	Response: >+0010.000(cr)		

#aaML			
Name	Read Minimum Value		
Description	Read the minimum values from all analog input channels in a specified module		
Syntax	#aaML(cr)		
	# is a delimiter character.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module to be read.(Always 01)		
	ML represents the read minimum value command.		
	(cr) is the terminating character, carriage return (0Dh)		
Response	>(data)(data)(data)(data)(data)(data)(data)(data)(cr) if the com- mand is valid.		
	?aa(cr) if an invalid operation was entered.		
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.		
	> delimiter indicating a valid command was received.		
	? delimiter indicating the command was invalid.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.		
	(cr) is the terminating character, carriage return (0Dh)		
Example	The command asks the specific module at address 01h to send his- toric minimum value from all AI channels.		
ASCII	Command: #01ML(cr)		
	00.000+0000.000(cr)		
Note!	The latest data returned is the Average value of the preset channels in		

The latest data returned is the Average value of the preset channels in this module.

#aaMLn

Name	Read Minimum Value from channel N		
Description	Read the minimum value from a specific analog input channel in a specified module		
Syntax	#aaMLn(cr)		
	# is a delimiter character.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module to be read. (Always 01)		
	ML stands for the read minimum value command.		
	n (range 0-8) means the specific channel you want to read the input data.		
	(cr) is the terminating character, carriage return (0Dh)		
Response	>(data)(cr) if the command is valid.		
	?aa(cr) if an invalid operation was entered.		
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.		
	> delimiter indicating a valid command was received.		
	? delimiter indicating the command was invalid.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.		
	(cr) is the terminating character, carriage return (0Dh)		
Example	The command asks the specific module at address 01h to send his- toric minimum value from analog input channel 3.		
ASCII	Command: #01ML3(cr)		
	Response: >+000.000(cr)		

\$aaBnn

Name	Read Analog Input Range Code from Channel N		
Description	Returns the range code from a specified analog input channel in a specified module.		
Syntax	\$aaBnn(cr)		
	\$ is a delimiter character.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)		
	B is the Analog Input Range Code command.		
	nn (range 00-07) represents the specific channel you want to read the range code.		
	(cr) is the terminating character, carriage return (0Dh).		
Response	!aa(code) if the command is valid.		
	?aa(cr) if an invalid operation was entered.		
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.		
	! delimiter indicating a valid command was received.		
	? delimiter indicating the command was invalid.		
	(cr) is the terminating character, carriage return (0Dh).		
	(code) is the range code read. Refer to the tables below to see the meaning of range code for different modules.		

B.1.3 Analog Input Range code

Range Code	HEX
+/- 10V	0x0143
+/- 5 V	0x0142
+/- 1 V	0x0140
+/- 500 mV	0x0104
+/- 150 mV	0x0103
+/- 20 mA	0x0181
0 ~ 20 mA	0x0182
4 ~ 20 mA	0x0180

Example The command asks the specific module at address 01h to send analog input range code value from analog input channel 3.

ASCII Command: #01B03(cr)

Response: >010182(cr)

B.1.4 Analog Input Alarm Command Set

Command Syntax	Command Name	Description
\$aaCjAhs	Set Alarm Mode	Set the High/Low alarm in either Momentary or Latch-ing mode
\$aaCjAh	Read Alarm Mode	Returns the alarm mode for the specified chan- nels
\$aaCjAhEs	Enable/Dis-able Alarm	Enables/Disables the high/low alarm of the specified channels
\$aaCjCh	Clear Latch Alarm	Resets a latched alarm
\$aaCjAhCCn	Set Alarm Connection	Connects the High/Low alarm of a specified input channel to interlock with a specified output channel
\$aaCjRhC	Read Alarm Connection	Returns the alarm configuration of a specified input channel
\$aaCjAhU	Set Alarm Limit	Sets the High/Low alarm limit value to a speci- fied channel
\$aaCjRhU	Read Alarm Limit	Returns the High/Low alarm limit value of the speci-fied channel
\$aaCjS	Read Alarm Status	Reads whether an alarm occurred in the speci- fied channel

\$aaCjAhs

çaa ej, me	
Name	Set Alarm Mode
Description	Sets the High/Low alarm of the specified input channel in the addressed ADAM-6200 module to either Latching or Momentary mode.
Syntax	\$aaCjAhs(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave net- work address of an ADAM-6200 module. (Always 01)
	Cj identifies the desired channel j (j : 0 to 7).
	A is the Set Alarm Mode command.
	h indicates alarm types (H = High alarm, L = Low alarm)
	s indicates alarm modes (M = Momentary mode,
	L = Latching mode)
	(cr) represents terminating character, carriage return (0Dh)
Response	!aa(cr) if the command was valid
	?aa(cr) if an invalid operation was entered.
	There is no response if the system detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	aa represents the 2-character hexadecimal slave address of the corre- sponding ADAM-6200 module.
	(cr) represents terminating character, carriage return (0Dh)
Example	Channel 1 of the ADAM-6200 module at address 01h is instructed to set its High alarm in Latching mode. The module confirms that the command has been received.
ASCII	Command: \$01C1AHL(cr)
	Response: !01(cr)

\$aaCjAh	
Name	Read Alarm Mode
Description	Returns the alarm mode for the specified channel in the specified ADAM-6200 module.
Syntax	\$aaCjAh(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module. (Always 01)
	Cj identifies the desired channel j (j : 0 to 7).
	A is the Read Alarm Mode command.
	h indicates the alarm types (H = High alarm,
	L = Low alarm)
	(cr) represents terminating character, carriage return (0Dh)
Response	!aas(cr) if the command was valid
	?aa(cr) if an invalid operation was entered.
	There is no response if the system detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	aa presents the 2-character hexadecimal slave address of the corre- sponding ADAM-6200 module.
	s indicates alarm modes (M = Momentary mode,
	L = Latching mode)
	(cr) represents terminating character, carriage return (0Dh)
Example	Channel 1 of the ADAM-6200 module at address 01h is instructed to return its Low alarm mode. The system responds that it is in Momentary mode.
ASCII	Command: \$01C1AL(cr)
	Response: !01M(cr)

\$aaCjAhEs

+	-
Name	Enable/Disable Alarm
Description	Enables/Disables the High/Low alarm of the specified input channel in the addressed ADAM-6200 module
Syntax	\$aaCjAhEs(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module. (Always 01)
	Cj identifies the desired channel j (j : 0 to 7).
	AhEs is the Set Alarm Mode command.
	h indicates alarm type (H = High alarm, L = Low alarm)
	s indicates alarm enable/disable (E = Enable, D = Disable)
	(cr) represents terminating character, carriage return (0Dh)
Response	laa(cr) if the command was valid
	?aa(cr) if an invalid operation was entered.
	There is no response if the system detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	aa represents the 2-character hexadecimal slave address of the corre- sponding ADAM-6200 module.
	(cr) represents terminating character, carriage return (0Dh)
Example	Channel 1 of the ADAM-6200 module at address 01h is instructed to enable its Low alarm function. The module confirms that its Low alarm function has been enabled.
ASCII	Command: \$01C1ALEE(cr)
	Response: !01(cr)
Note!	An analog input module requires a maximum of 2 seconds after it
	receives an Enable/Disable Alarm command to let the setting take effect.

\$aaCjCh	
Name	Clear Latch Alarm
Description	Sets the High/Low alarm to OFF (no alarm) for the specified input channel in the addressed ADAM-6200 module
Syntax	\$aaCjCh(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave net- work address of an ADAM-6200 module. (Always 01)
	Cj identifies the desired channel j (j : 0 to 7).
	Ch is the Clear Latch Alarm command.
	h indicates alarm type (H = High alarm, L = Low alarm)
	(cr) represents terminating character, carriage return (0Dh)
Response	!aa(cr) if the command was valid
	?aa(cr) if an invalid operation was entered.
	There is no response if the system detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	aa represents the 2-character hexadecimal slave address of the corre- sponding ADAM-6200 module.
	(cr) represents terminating character, carriage return (0Dh)
Example	Command: \$01C1CL(cr)
	Response: !01(cr) Channel 1 of the ADAM-6200 module at address 01h is instructed to set its Low alarm state to OFF. The system confirms it has done so accordingly.

\$aaCjAhCCn

çuu ej, are er	•
Name	Set Alarm Connection
Description	Connects the High/Low alarm of the specified input channel to inter- lock the specified digital output in the addressed ADAM-6200 module
Syntax	\$aaCjAhCCn(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.(Always 01)
	Cj identifies the desired analog input channel j (j : 0 to 7).
	AhC is the Set Alarm Connection command.
	h indicates alarm type (H = High alarm, L = Low alarm)
	Cn identifies the desired digital output channel n (n : 0 to 1).
	To disconnect the digital output, n should be set as ?*?.
	(cr) represents terminating character, carriage return (0Dh)
Response	laa(cr) if the command was valid
	?aa(cr) if an invalid operation was entered.
	There is no response if the system detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	aa represents the 2-character hexadecimal slave address of the corre- sponding ADAM-6200 module.
	(cr) represents terminating character, carriage return (0Dh)
Example	Channel 1 of the ADAM-6200 module at address 01h is instructed to connect its Low alarm to the digital output of channel 0 in the specific module. The system confirms it has done so accordingly.
ASCII	Command: \$01C1ALCC0(cr)
	Response: !01(cr)

\$aaCjRhC

Nomo	Dead Alarma Compaction
Name	Read Alarm Connection
Description	Returns the High/Low alarm limit output connection of a specified input channel in the addressed module
Syntax	\$aaCjRhC(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module. (Always 01)
	Cj identifies the desired analog input channel j (j : 0 to 7).
	RhC is the Read Alarm Connection command.
	h indicates alarm type (H = High alarm, L = Low alarm)
	(cr) represents terminating character, carriage return (0Dh)
Response	!aaCn(cr) if the command was valid
	?aa(cr) if an invalid operation was entered.
	There is no response if the system detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	aa represents the 2-character hexadecimal slave address of the corre- sponding ADAM-6200 module.
	Cn identifies the desired digital output channel n (n : 0 to 1) whether interlock with the alarm of the specific analog input channel. If the values of n are "*", the analog input has no connection with a digital output point.
	(cr) represents terminating character, carriage return (0Dh)
Example	Channel 1 of the ADAM-6200 module at address 01h is instructed to read its Low alarm output connection. The system responds that the Low alarm output connects to the digital output at channel 0 in the specific module.
ASCII	Command: \$01C1RLC(cr)
	Response:!01C0(cr)

\$aaCjAhU

,	
Name	Set Alarm Limit
Description	Sets the High/Low alarm limit value for the specified input channel of a specified ADAM-6200 module.
Syntax	\$aaCjAhU(data)(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.(Always 01)
	Cj identifies the desired analog input channel j (j : 0 to 7).
	AhU is the Set Alarm Limit command.
	h indicates alarm type (H = High alarm, L = Low alarm)
	(data) represents the desired alarm limit setting.
	The format is always in engineering units.
	(cr) represents terminating character, carriage return (0Dh)
Response	!aa(cr) if the command was valid
	?aa(cr) if an invalid operation was entered.
	There is no response if the system detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	aa represents the 2-character hexadecimal slave address of the corre- sponding ADAM-6200 module.
	(cr) represents terminating character, carriage return (0Dh)
Example	The high alarm limit of the channel 1 in the specific module at address 01h is been set +80. The system confirms the command has been received.
ASCII	Command: \$01C1AHU+080.00(cr)
	Response:!01(cr)
Note!	An analog input module requires a maximum of 2 seconds after it



receives a Set Alarm Limit command to let the settings take effect.

\$aaCjRhU

Name	Read Alarm Limit
Description	Returns the High/Low alarm limit value for the specified input channel in the addressed ADAM-6200 module
Syntax	\$aaCjRhU(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module.(Always 01)
	Cj identifies the desired analog input channel j (j : 0 to 7).
	RhU is the Read Alarm Limit command.
	h indicates alarm type (H = High alarm, L = Low alarm)
	(cr) represents terminating character, carriage return (0Dh)
Response	!aa(data)(cr) if the command was valid
	?aa(cr) if an invalid operation was entered.
	There is no response if the system detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	aa represents the 2-character hexadecimal slave address of the corre- sponding ADAM-6200 module.
	(data) represents the desired alarm limit setting. The format is always in engineering units.
	(cr) represents terminating character, carriage return (0Dh)
Example	Channel 1 of the ADAM-6200 module at address 01h is configured to accept 5V input. The command instructs the system to return the High alarm limit value for that channel. The system responds that the High alarm limit value in the desired channel is 2.0500 V.
ASCII	Command: \$01C1RHU(cr)
	Response: !01+2.0500(cr)

\$aaCjS

,			
Name	Read Alarm Status		
Description	Reads whether an alarm occurred to the specified input channel in the specified ADAM-6200 module		
Syntax	\$aaCjS(cr)		
	\$ is a delimiter character.		
	aa (range 00-FF) represents the 2-character hexadecimal slave address of an ADAM-6200 module. (Always 01)		
	Cj identifies the desired analog input channel j (j : 0 to 7).		
	S is the Read Alarm Status command.		
	(cr) represents terminating character, carriage return (0Dh)		
Response	!aahl(cr) if the command was valid		
	?aa(cr) if an invalid operation was entered.		
	There is no response if the system detects a syntax error or communi- cation error or if the address does not exist.		
	! delimiter indicating a valid command was received.		
	aa represents the 2-character hexadecimal slave address of the corre- sponding ADAM-6200 module.		
	h represents the status of High alarm. "1" means the High alarm occurred, '0" means it did not occur.		
	I represents the status of Low alarm. ?1" means the Low alarm occurred,?0" means it did not occur.		
	(cr) represents terminating character, carriage return (0Dh)		
Example	The command asks the module at address 01h to return its alarm sta- tus for channel 1.		
	The system responds that a High alarm has not occurred, but the Low alarm has occurred.		
ASCII	Command: \$01C1S(cr)		
	Response: !0101(cr)		

B.1.5 Analog Output Command Set

Function	Description	Command	Example
Read analog out- put startup value	Read startup output value from a specific analog output channel	Cmd: \$aaDScc(cr) Ret:!aannnn (cr) nnnn range: 0x0000 ~ 0x0FFF	Send: \$01DS01(cr) Receive: !010800(cr)
Set analog output startup value	Set startup output value to a specific analog output channel	Cmd: #aaD- Sccnnnn(cr) Ret: !aa(cr)	Send: #01DS010800(cr) Receive: !01(cr)
Write AO values	Write value to the spe- cific analog output channel	Cmd: #aaBCccnnnn(cr) Ret: !aa(cr)	Send: #01BC010800(cr) Receive: !01(cr)
Read AO range code	Return the channel range code form specific analog output channel	Cmd: \$aaBEcc(cr) Ret: !aannnn(cr)	Send: \$01BE00(cr) Receive: !010147(cr)

\$aaDScc	
Name	Read AO Startup Value from One Channel
Description	Returns the startup value from a specified analog output channel in a specified module.
Syntax	\$aaDScc(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	DS represents the analog output channel startup command.
	cc (range 00-01) represents the specific channel you want to read the startup value.
	(cr) is the terminating character, carriage return (0Dh).
Response	!aannnn(cr) if the command is valid.
	?aa(cr) if an invalid operation was entered.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	nnnn (range: 0000-0FFF) represents the 4-character hexadecimal startup value of the specific AO channel.
	(cr) is the terminating character, carriage return (0Dh).
Example	Startup value for analog output channel 1 of the ADAM-6224 module at address 01h responds with a value +10.000. (The AO range of channel 1 is $0\sim10V$)
ASCII	Command: \$01DS01(cr)
Response: !0	10FFF(cr)

#aaDSccnnnn

"aab ooonnin	
Name	Set AO Startup Value to One Channel
Description	Set the startup value to a specified analog output channel in a speci- fied module.
Syntax	\$aaDSccnnnn(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	DS represents the analog output channel startup command.
	cc (range 00-01) represents the specific channel you want to set the startup value.
	nnnn (range 0000-0FFF) represents the 4-character hexadecimal startup value of the specific AO channel.
	(cr) is the terminating character, carriage return (0Dh).
Response	!aa(cr) if the command is valid.
	?aa(cr) if an invalid operation was entered.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	(cr) is the terminating character, carriage return (0Dh).
Example	Startup value for analog output channel 1 of the ADAM-6224 module at address 01h is set with a value +10.000. (The AO range of channel 1 is 0~10V)
ASCII	Command: \$01DS01FFF(cr)
	Response: !01(cr)

#aaBCccnnnn

Name	Write AO Value to One Channel
Description	Write output value to a specified analog output channel in a specified module.
Syntax	#aaBCccnnnn(cr)
	# is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	cc (range 00-01) represents the specific channel you want to write output value.
	nnnn (range:0000 - 0FFF) represents the analog output value of the specific analog output channel.
	(cr) is the terminating character, carriage return (0Dh).
Response	!aa(cr) if the command is valid.
	?aa(cr) if an invalid operation was entered.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	! delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	BC is Write AO Value to One Channel command
	(cr) is the terminating character, carriage return (0Dh).
Example	Value for analog output channel 1 of the ADAM-6224 module at address 01h is set with a value 0x800.
ASCII	Command: #01DS010800 (cr)
	Response: !01(cr)

\$aaBEcc

+				
Name	Read Analog Output Range Code from Channel N			
Description	Returns the range code from a specified analog output channel in specified module.			
Syntax	\$aaBEcc(cr)			
	\$ is a delimiter character.			
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)			
	cc (range 00-03) represents the specific channel you want to read the range code.			
	(cr) is the terminating character, carriage return (0Dh).			
Response	!aa(code) if the command is valid.			
	?aa(cr) if an invalid operation was entered.			
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.			
	! delimiter indicating a valid command was received.			
	? delimiter indicating the command was invalid.			
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)			
	nnnn stands for Analog output range code			
	(cr) is the terminating character, carriage return (0Dh).			

B.1.6 Analog Output Range code

Range Code	НЕХ
+/- 10V	0x0143
+/- 5 V	0x0142
0 ~ 10V	0x0148
0 ~ 5V	0x0147
0 ~ 20 mA:	0x0182
4 ~ 20 mA:	0x0180

Example The command asks the specific module at address 01h to send analog output range code value from analog input channel 3.

ASCII Command: #01BE03(cr) Response: !010147(cr)

B.1.7 Digital Input/Output Command Set

Function	Description	Command	Example					
Read Channels	Asks a specified input module to return the status of all channels	Cmd: \$aa6(cr) Ret:!aannnnnn (cr)	Send: \$016(cr) Receive: !01000124(cr)					
Write all DO chan- nels	Writes specified val- ues to all channels simultaneously	Cmd: #aa00nnnn(cr) Ret:>aa(cr)	Send: #0100007F(cr) Receive: >01(cr)					
Write a single DO channel	Writes specified val- ues to a single channel	Cmd: #aa1c01(cr) or #aa1c00(cr) Ret:>aa(cr)	Set channel 2 to logic 1 Send: #011201(cr) Receive: >01(cr)					
Read DI Channel Counter Value	Returns the counter value from specified DI channels in a specified module	Cmd: \$aaJCFFFFssmm(cr) Ret:>aa(data)… (cr)	Send: \$01JCFFFF0102(cr) Receive: >01000000020000000 6(cr)					
\$aa6								
---	--	---------------------	--------------------	---------------------	-------------------	------------------	----------	-----------
Name	Read Channel Status							
Description	This command reques the status of its digital	sts that input o	t the sp channe	becified	ADAM	1-6200	modul	e return
Syntax	\$aa6(cr)							
	\$ is a delimiter charac	ter.						
	aa (range 00-FF) rep work address of the A	resents	s the 2 6200 m	2-charac iodule.	cter he (Alway	xadecii s 01)	mal sla	ave net-
	6 is the Digital Data Ir	n comm	nand.					
	(cr) is the terminating	charac	ter, ca	rriage r	eturn (()Dh)		
Response	!aa(data)(data)(data)(cr) if th	e comi	mand is	valid.			
	?aa(cr) if an invalid op	peration	n was e	entered				
	There is no response	if the n	nodule	detects	a synt	ax erro	or or co	mmuni-
	cation error or if the a	ddress	does r	not exis	t.			
	! delimiter indicating a	valid o	comma	ind was	receiv	ed.		
? delimiter indicating the command was invalid.								
	aa (range 00-FF) rep work address of an Al	resents DAM-6	s the 2 200 m	2-charao odule.	cter he	xadeci	mal sla	ave net-
	(data) a 2-character h digital I/O module.	exade	cimal v	alue re	presen	ting the	e value	es of the
	(cr) is the terminating	charac	ter, ca	rriage r	eturn (()Dh)		
Example	Command: \$016(cr)			-				
	Response: !01000124	l(cr)						
		. <i>.</i>						
	Response	!01	0	0	0	1	2	4
	Transfer to 3 Bytes		0x00		0x01		0x24	

	-	-	-	-			
Transfer to 3 Bytes		0x00		0x01		0x24	
Data can be presented as 24 Bit		0x0001 (Bit 0 ~ 0)	124 - 23, Bit	2, 5, ar	nd 8 is 1	, but otl	ners is
ADAM-6250		Bit 0~7 Bit 8∼1	': DI[0] ~ 4: DO[0	- DI[7])] ~ DO	[6]		
ADAM-6251		Bit 0~1	5: DI[0]	~ DI[15	5]		
ADAM-6256		Bit 0~1	5: DO[0)] ~ DO	[15]		
ADAM-6260		Bit 0~5	5: DO[0]	~ DO[5	5]		
ADAM-6266		Bit 0~3 Bit 4~7	8: DI[0] ~ 7: DO[0]	- DI[3] ~ DO[3	5]		

#aa00(data)

· · ·	
Name	Write all digital output channels
Description	This command sets all digital output channels to the specific ADAM- 6200 module.
Syntax	#aa00(data)(cr)
	# is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave net- work address of the ADAM-6200 module. (Always 01)
	00 means to set all channel(s).
	(data) is the hexadecimal representation of the DO value(s).
Response	>(cr) if the command was valid.
	?aa(cr) if an invalid command has been issued.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	> delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	aa (range 00-FF) represents the 2-character hexadecimal slave net- work address of a module that is responding.
	(cr) is the terminating character, carriage return (0Dh)
Example	All Digital Output channels of ADAM-6250 will be logic 1.
ASCII	Command: #0100007F(cr)
	Response: >01<(cr)
Example	All Digital Output channels of ADAM-6256 will be logic 1.
ASCII	Command: #0100FFFF(cr)
	Response: >01<(cr)

#aa1c(data)

#aa i C(uala)	
Name	Write a single digital output channel
Description	This command sets a single DO channels to the specific ADAM-6200 module.
Syntax	#aa1c(data)(cr)
	# is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave net- work address of the ADAM-6200 module. (Always 01)
	c is used to indicate which channel(s) you want to set.
	(data) is the hexadecimal representation of the DO value(s).
	When writing to a single channel (bit), the first character is always 0. The value of the second character is either 0 or 1.
Response	>(cr) if the command was valid.
	?aa(cr) if an invalid command has been issued.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	> delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	aa (range 00-FF) represents the 2-character hexadecimal slave net- work address of a module that is responding.
	(cr) is the terminating character, carriage return (0Dh)
Example	Set channel 2 to logic 1
ASCII	Command: #011201(cr)
	Response: >01(cr)

\$aaJCFFFFssmm

Name	Read DI Channel Counter Value
Description	Returns the counter value from specified DI channels in a specified module.
Syntax	\$aaJCFFFFssmm(cr)
	\$ is a delimiter character.
	aa (range 00-FF) represents the 2-character hexadecimal slave address of the ADAM-6200 module you want to request. (Always 01)
	JCFFFF is the Digital Input Channel Counter Value command.
	ss (range 00-07) means the specific start channel you want to read the counter value.
	mm (range 00-07) means the total channel numbers you want to read the counter value.
	(cr) is the terminating character, carriage return (0Dh).
Response	>aa(data) if the command is valid.
	?aa(cr) if an invalid operation was entered.
	There is no response if the module detects a syntax error or communi- cation error or if the address does not exist.
	> delimiter indicating a valid command was received.
	? delimiter indicating the command was invalid.
	(data) is the counter value read.
	(cr) is the terminating character, carriage return (0Dh).
Example	The command requests the module at address 01h to return count value from channel 0. (the first read channel is 0, represent by "00", and only one channel is read) That module return the count value $0000000A(h)$ from channel 0.
ASCII	Command: \$01JCFFFF0001(cr)
	Response: >01000000A(cr)
Example	The command requests the module at address 01h to return count value from channel 12 and 13. (The first read channel is 12, represent by "0C", and two channels are read) That module return the count value 0000000A(h) from channel 12 and 00000001(h) from channel 13.
ASCII	Command: \$01JCFFFF0C02(cr)
	Response: >01000000000000001(cr)



REST for ADAM-6200

C.1 Introduction

REpresentational State Transfer (REST) is a design style of software architecture for Web application behaves and services including image indication, resource request and response and message delivery. It can be developed compatible with popular protocols or standards like HTTP, URI, XML, HTML. With the advantage of scalability, simplicity and performance, it's already adopted in Web service by Amazon, Yahoo. The Web service of ADAM-6200 is developed based on HTML5 language, if user need to integrate this into other Web services, the following information/command list should be referred for implementation.

C.2 REST Resources for ADAM

C.2.1 Analog Input

C.2.1.1 GET /analoginput/(all[{id})/value

	The content-type will be 'application/x-www-form-urlencoded'. {id} : is the AI channel ID starting from 0 Examples:
Request	Use the following URI to get the AI-0 value.
incide of	http://10.0.0.1/analoginput/0/value
	Use the following URI to get the all AI values.
	http://10.0.0.1/analoginput/all/value
	The content-type will be 'text/xml'
	If result is OK, the content will look like below
	xml version="1.0" ?
	<adam-6217 status="OK"></adam-6217>
	<ai></ai>
	<id>0</id>
	<
Response	VALUE>FFFF
	If result is failed , the content will look like below
	<pre></pre>
	<pre><adam-6217 status="{error}"> </adam-6217></pre>
	<pre> (orror): The error message</pre>
Remarks	If the {id} is out of range, the response will return HTTP status code 501 (Not implemented)

C.2.1.2 GET /analoginput/(all|{id})/range

Request	The content-type will be 'application/x-www-form-urlencoded'. {id} : is the AI channel ID starting from 0 Examples: Use the following URI to get the AI-0 range information. http://10.0.0.1/analoginput/0/range
	Use the following URI to get the all AI range information. http://10.0.0.1/analoginput/all/range
Response	The content-type will be 'text/xml' If result is OK, the content will look like below xml version="1.0" ? <adam-6217 status="OK"> <al> <id>0</id> <range>7</range> <name>4~20 mA</name> <max>20</max> <min>4</min> <unit>mA</unit> </al></adam-6217>
	If result is failed , the content will look like below xml version="1.0" ? <adam-6217 status="{error}"> </adam-6217> {error}: The error message.
Remarks	If the {id} is out of range, the response will return HTTP status code 501 (Not implemented)

C.2.2 Analog Output

C.2.2.1 GET /analogoutput/(all|{id})/value

	The content-type will be 'application/x-www-form-urlencoded'
	$\{id\}$: is the AO channel ID starting from 0
	Examples:
Request	Use the following URI to get the AO-0 value.
	http://10.0.0.1/analogoutput/0/value
	Use the following URI to get the all AO values.
	http://10.0.0.1/analogoutput/all/value
	I he content-type will be 'text/xml'
	If result is OK, the content will look like below
	xml version="1.0" ?
	<adam-6224 status="OK"></adam-6224>
	<ao></ao>
	<id>0</id>
	<value>0FFF</value>
Response	
	If result is failed , the content will look like below
	xml version="1.0" ?
	<adam-6224 status="{error}"></adam-6224>
	{error} : The error message.
Pomarke	If the {id} is out of range, the response will return HTTP status code 501
Remarks	(Not implemented)

C.2.2.2 POST /analogoutput/all/value

Request	The content-type will be 'application/x-www-form-urlencoded'. Examples: Use the following URI to set the AO value(s). http://10.0.0.1/analogoutput/all/value The coming data with the request will be {name}={value} pair(s). {name} : The name of the channel, for example AO0. {value} : The value to be set to the indicated channel. For example, if the request is going to set channel 0, 1, 2 at +- 5V output range to 0V, -2V and 5V respectively, then the name-value pairs will look like below: AO0=0800&AO1=04CC&AO2=0FFF
Response	The content-type will be 'text/xml' The content will look like below xml version="1.0" ? <adam-6224 status=" {status}"> </adam-6224> {status} : The result. If succeed, the result will be 'OK'; otherwise, the result will be the error message.
Remarks	

C.2.2.3 GET /analogoutput/(all|{id})/range

Request	The content-type will be 'application/x-www-form-urlencoded'. {id} : is the AO channel ID starting from 0 Examples: Use the following URI to get the AO-0 range information. http://10.0.0.1/analogoutput/0/range
	Use the following URI to get the all AO range information. http://10.0.0.1/analogoutput/all/range
Response	The content-type will be 'text/xml' If result is OK, the content will look like below xml version="1.0" ? <adam-6224 status="OK"> <ao> <id>0</id> <range>7</range> <name>4~20 mA</name> <max>20</max> <min>4</min> <unit>mA</unit> </ao> </adam-6224> If result is failed, the centent will look like below
	<pre></pre> <pre></pre> <pre></pre> <pre></pre> <pre></pre>
Remarks	If the {id} is out of range, the response will return HTTP status code 501 (Not implemented)

C.2.2.4 GET /analogoutput/(all|{id})/range

	The content-type will be 'application/x-www-form-urlencoded'. {id} : is the AO channel ID starting from 0 Examples:
Request	Use the following URI to get the AO-0 range information. http://10.0.0.1/analogoutput/0/range
	Use the following URI to get the all AO range information. http://10.0.0.1/analogoutput/all/range
	The content-type will be 'text/xml'
	If result is OK, the content will look like below
	xml version="1.0" ?
	<adam-6224 status="OK"></adam-6224>
	<a0></a0>
	<id>0</id>
	<range>7</range>
	<name>4~20 mA</name>
Posponso	
Response	
	If result is failed , the content will look like below
	<pre><?xml version="1.0" ?> </pre>
	<pre><adam-6224 status=" {error}"> </adam-6224> </pre>
Remarks	If the {id} is out of range, the response will return HTTP status code 501 (Not implemented)

C.2.3 Digital Input

C.2.3.1 GET /digitalinput/(all|{id})/value

Request	The content-type will be 'application/x-www-form-urlencoded'. {id} : is the DI channel ID starting from 0 Examples: Use the following URI to get the DI-0 value. http://10.0.0.1/digitalinput/0/value Use the following URI to get the all DI values. http://10.0.0.1/digitalinput/all/value
	The content-type will be 'text/xml' If result is OK, the content will look like below
	xml version="1.0" ?
	<adam-6250 status="OK"></adam-6250>
	<di></di>
	<id>0</id>
	<value>0</value>
Response	
	If result is failed , the content will look like below
	xml version="1.0" ?
	<adam-6250 status="{error}"></adam-6250>
	{error}: The error message.
Remarks	If the {id} is out of range, the response will return HTTP status code 501 (Not implemented)

C.2.4 Digital Output

C.2.4.1 GET /digitaloutput/(all|{id})/value

Request	The content-type will be 'application/x-www-form-urlencoded'. {id} : is the DO channel ID starting from 0 Examples: Use the following URI to get the DO-0 value. http://10.0.0.1/digitaloutput/0/value Use the following URI to get the all DO values. http://10.0.0.1/digitaloutput/all/value
Response	The content-type will be 'text/xml' If result is OK, the content will look like below xml version="1.0" ? <adam-6250 status="OK"> <do> <id>0</id> <value>1</value> </do> </adam-6250> If result is failed , the content will look like below xml version="1.0" ? <adam-6250 status="{error}"> </adam-6250> /error}: The error message
Remarks	If the {id} is out of range, the response will return HTTP status code 501 (Not implemented)

C.2.4.2 POST /digitaloutput/all/value

Request	The content-type will be 'application/x-www-form-urlencoded'. Examples: Use the following URI to set the DO value(s). http://10.0.0.1/digitaloutput/all/value The coming data with the request will be {name}={value} pair(s). {name} : The name of the channel, for example DO0. {value} : The value to be set to the indicated channel. For example, if the request is going to set channel 0, 1, 2 to value 1, then the name-value pairs will look like below: DO0=1&DO1=1&DO2=1
Response	The content-type will be 'text/xml' The content will look like below xml version="1.0" ? <adam-6250 status=" {status}"> </adam-6250> {status} : The result. If succeed, the result will be 'OK'; otherwise, the result will be the error message.
Remarks	

KOLBINGER - PCQT-+43 2239 3160AT-2384 Breitenfurt/Vienna, Hauptstrasse 93, office@kolbinger.at , www.pcqt.at