

User Manual



FPM-2120G/2150G/ 2170G Series

12"SVGA/15" XGA/17" SXGA Industrial LED Monitor with Resistive Touchscreen, VGA Display Port and DC12 V Input



Copyright

The documentation and the software included with this product are copyrighted 2013 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows® are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

This manual includes the following products:

FPM-2120G Series FPM-2150G Series FPM-2170G Series

> Part No. 2003212010 Printed in China

Edition 1 January 2013

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

- Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
- 2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
- If your product is diagnosed as defective, obtain an RMA (return merchandize authorization) number from your dealer. This allows us to process your return more quickly.
- 4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
- 5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Declaration of Conformity

FCC Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Technical Support and Assistance

- 1. Visit the Advantech web site at www.advantech.com/support where you can find the latest information about the product.
- Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Safety Instructions

- Read these safety instructions carefully.
- 2. Keep this User Manual for later reference.
- 3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- 4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
- 5. Keep this equipment away from humidity.
- 6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
- 7. The openings on the enclosure are for air convection. Protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- 8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- 9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- 10. All cautions and warnings on the equipment should be noted.
- 11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
- 12. Never pour any liquid into an opening. This may cause fire or electrical shock.
- 13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
- 14. If one of the following situations arises, get the equipment checked by service personnel:
- The power cord or plug is damaged.
- Liquid has penetrated into the equipment.
- The equipment has been exposed to moisture.
- The equipment does not work well, or you cannot get it to work according to the user's manual.
- The equipment has been dropped and damaged.
- The equipment has obvious signs of breakage.
- 15. DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 60° C (140° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.
- 16. The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

NOTE

Warning

If the customer user DC power by oneself for this product may cause the radio interference in which case, the customer must be to take adequate measures.

Warning

If the customer needs to use power adapter, please use the power adapter listed on the product datasheet. If the customer use the power adapter not listed on the product datasheet, it may cause the radio interference in which case, the customer must be to take adequate measures

Contents

| Chapter | 1 | General Information | 1 |
|----------------|-----|--|----|
| | 1.1 | Introduction | 2 |
| | 1.2 | Specifications | 2 |
| | | 1.2.1 General | |
| | | 1.2.2 Touchscreen (Optional) | |
| | 1.3 | LCD Specification | |
| | 1.4 | Connectors | |
| | 1.5 | Dimensions | |
| | | Figure 1.1 FPM-2120G Dimensions | |
| | | Figure 1.2 FPM-2150G Dimensions | |
| | | Figure 1.3 FPM-2170G Dimensions | 6 |
| Appendi | хА | Touchscreen | 7 |
| | A.1 | Introduction | 8 |
| | A.2 | Touchscreen Specifications (12"/15"/17") | 8 |
| | | A.2.1 Typical Optical Features | 8 |
| | | A.2.2 Electrical Specifications | 8 |
| | | A.2.3 Environment Specifications | 8 |
| | A.3 | Installing Driver for Windows OS | 8 |
| Appendi | хВ | OSD Operation Keypad | 9 |
| | B.1 | OSD Board Overview | 10 |
| | | B.1.1 OSD Button Description | |
| | | Table B.1: OSD Button Description | |
| | | B.1.2 LED Function | |
| | | Table B.2: LED Function | 10 |

Chapter

General Information

Sections include:

- Introduction
- Specifications
- LCD Specification
- **■** Power Consumption
- **■** Connectors
- **■** Dimensions

1.1 Introduction

Advantech's FPM-2120G/2150G/2170G is a 12"/15"/17" color TFT LED flat panel monitor built specifically for industrial applications. With the optional touchscreen, FPM-2120G/2150G/2170G is an excellent and user-friendly system control interface.

In addition to its usual application as an LED panel monitor,FPM-2120G/2150G/2170G comes standard with direct VGA control signal inputs, making it compatible with Industrial PCs and Workstations. Its OSD (On Screen Display) function allows you to adjust display factors such as brightness, contrast, colors and VGA signal information. Functions that are more and more critical as HMI users become aware of the benefits of flat panel monitors. The whole chassis is of stainless steel, and the front panel is of aluminum with NEMA4/IP65 compliance.

FPM-2120G/2150G/2170G also comes in a touch screen version (FPM-2120G-R/FPM-2150G-R/FPM-2170G-R). With an 5-wire resistive type touchscreen, this monitor can be immediately transformed into a remote control system. The Advantech FPM-2120G/2150G/2170G is the ultimate HMI solution for your industrial application.

1.2 Specifications

1.2.1 General

| Specifications | FPM-2120G | FPM-2150G | FPM-2170G |
|---------------------------|---|--|---|
| Construction | Heavy-duty aluminum and steel chassis | | |
| Front panel | Aluminum, NEMA4 / If | P65 Compliant | |
| Control | OSD (On Screen Display) control pad on rear panel | | |
| Mounting | Panel, wall, desktop, VESA ARM or rack | | |
| Dimensions (W x H x D) | 311 mm x 237 mm x 40.63 mm (12.24" x 9.33" x 1.60") | 383 mm x 307 mm x 48.13 mm (15.08" x 12.09" x 1.89") | 413.72 mm x 347.22 mm x 52.13 mm (16.29" x 13.67 x 2.05") |
| Weight | 4 kg (8.81 lbs) | 6 kg (13.22 lbs) | 8 kg (17.63 lbs) |

1.2.2 Touchscreen (Optional)

| Specifications | FPM-2120G | FPM-2150G | FPM-2170G |
|-----------------------|--------------------------|-----------|-----------|
| Туре | 5 wire, analog resistive | | |
| Resolution | 2048*2048 | | |
| Light Transmission | 80% | | |
| Controller | USB & RS-232 interface | | |

1.3 LCD Specification

| Specifications | 12" LCD (LED Backlight) | 15" LCD (LED Backlight) | 17" LCD (LED Backlight) |
|--------------------------|----------------------------|----------------------------|----------------------------|
| Display Type | SVGA TFT LCD | XGA TFT LCD | SXGA TFT LCD |
| Display Size | 12" | 15" | 17" |
| Max. Colors | 16.2 M | 16.7 M | 16.7 M |
| Max. Resolution | 800 x 600 | 1280 x 1024 | 1280 x 1024 |
| View Angle (H/V°) | 160°(V), 140°(H) | 160°(V), 140°(H) | 170°(V), 160°(H) |
| Luminance | 450 cd/m ² | 400 cd/m ² | 350 cd/m ² |
| Storage Temperature | -30 ~ 85°C | -30 ~ 80°C | -30 ~ 85°C |
| Operating Temperature | -30 ~ 85°C | -40 ~ 85°C | -30 ~ 85°C |
| Contrast Ratio | 700:1 (Typical) | 700:1 (Typical) | 1000:1 (Typical) |
| Lamp Life Time (MTBF) | 50,000 hrs. | 50,000 hrs. | 50,000 hrs. |

1.4 Connectors

The following connectors are situated on the bottom side of the FPM-2120G/2150G/2170G series:

■ VGA Port (DB-15)

This DB-15 connector can be connected to the system via the external 15-pin DB-15 connector located on the left side of the system unit.

■ RS-232 Touchscreen Connector (DB-9) (FPM-2120G/2150G/2170G-R)
This connector will be present only if a touchscreen is installed. It must be connected to the RS-232 port of the PC. The touchscreen cable is included with all orders which include the touchscreen option.

■ Touchscreen Connector (USB)

This connector will be present only if a touchscreen is installed. It must be connected to the USB port of the PC. The touchscreen cable is included with all orders.

DC 12 V Power Input Connector

This connector must be connected to DC 12 V power switch.

Warning! Please note before connect the monitor and PC with VGA cable:



- 1. If PC has installed operation system, please confirm its portrait frequency is within the acceptable range.
- 2. If PC has installed operation system, users need to adjust the portrait frequency to be within the acceptable range.

1.5 Dimensions

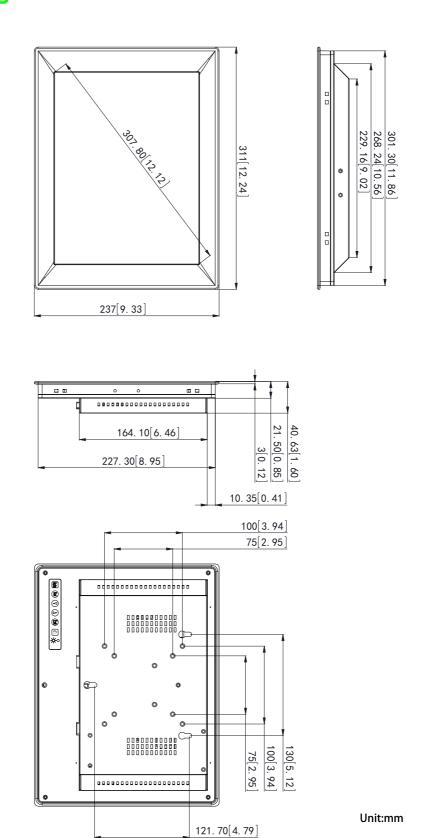


Figure 1.1 FPM-2120G Dimensions

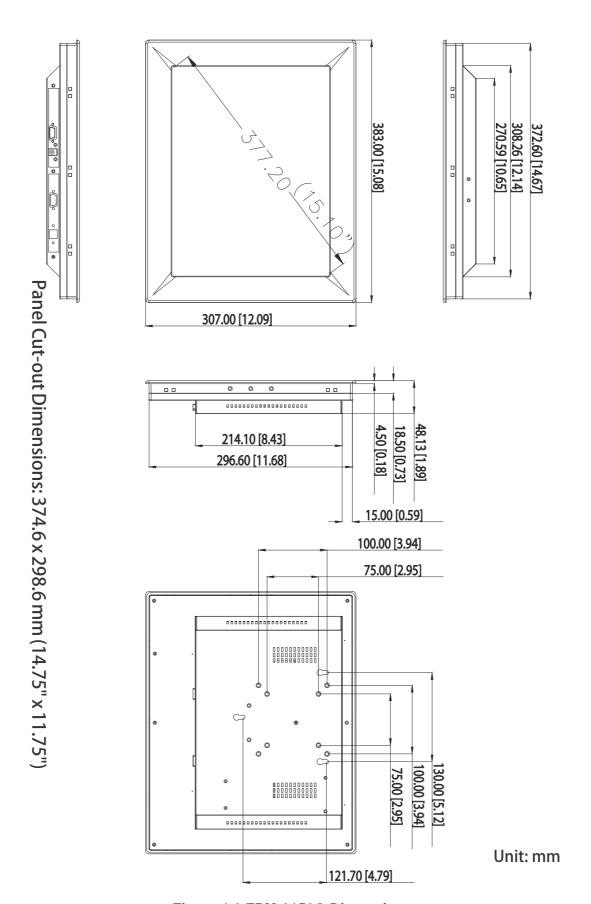


Figure 1.2 FPM-2150G Dimensions

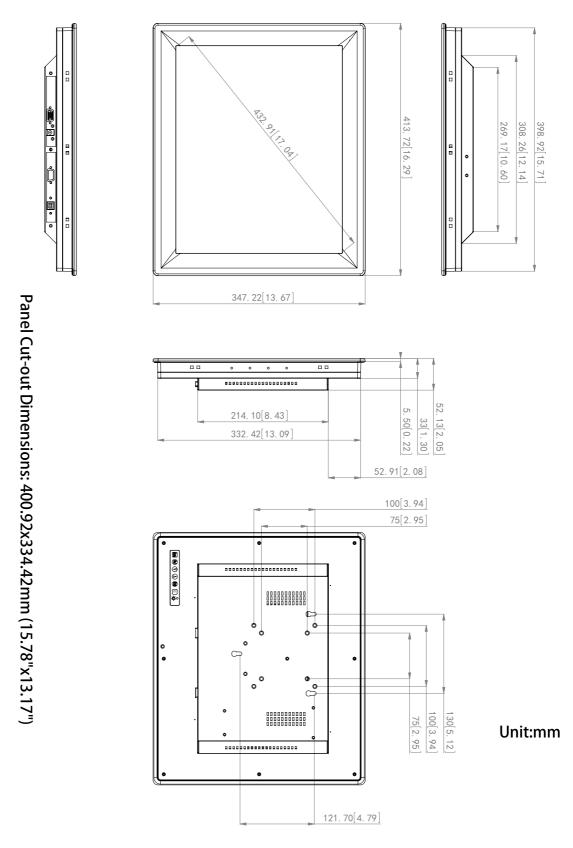


Figure 1.3 FPM-2170G Dimensions

Appendix A

Touchscreen

A. 1 Introduction

The FPM-2120G/2150G/2170G Series touchscreen uses advanced 5-wire resistive technology. It provides more accurate sensing capacity than other technologies. The touchscreen is specially designed for tough industrial environments, and has been approved to FCC Class A standards.

A.2 Touchscreen Specifications (12"/15"/17")

A.2.1 Typical Optical Features

| Specification | 12" | 15" | 17" | |
|--------------------|-------|-----|-----|--|
| Light Transmission | > 80% | | | |
| Haze | < 13% | | | |

A.2.2 Electrical Specifications

| Specification | 12" | 15" | 17" |
|-------------------|-----------------|-----|-----|
| Operation Voltage | 5.5 V or below | | |
| Contact Current | 70 mA (Maximum) | | |

A.2.3 Environment Specifications

| 规格 | 12" | 15" | 17" |
|------|-------------------------------|---------------------|-----|
| 工作温度 | −10 ~ +60° C | | |
| 储存温度 | -40 ∼ +80° C | | |
| 湿度 | \geq 20° C, humidity | < 80% RH | |
| /业/支 | $<20^{\circ}$ C, humidity $<$ | 90% RH, Non-condens | ing |

A.3 Installing Driver for Windows OS

The touchscreen has drivers for Win 2000/2003/Vista. You should read the instructions in CD-ROM Disk carefully before you attempt installation. The FPM-2120G/2150G/2170G-R series need to install Penmount 6000 driver. Please find Penmount 6000 folder and install the driver into your system.

Note!



The driver manual are examples only. You must follow the flow chart instructions and pay attention to the instructions which then appear on your screen.

Note!




If there is any other OS driver need, you could download at the web site: http://www.penmount.com.tw (Penmount 6000)

Appendix B

OSD Operation Keypad

B.1 OSD Board Overview

The OSD keypad, including six keys and a two color indicator, is designed as the OSD operation interface.

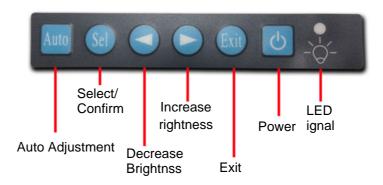

B.1.1 OSD Button Description

| Table B.1: OSD Button Description | | |
|---|--|--|
| Power Turn the monitor power ON or OFF. | | |
| Exit | Exit menu. | |
| Increase Brightness | Increase the monitor backlight brightness. | |
| Decrease Brightness | Decrease the monitor backlight brightness. | |
| Select/Confirm | Enter/confirm the selected option. | |
| Auto Adjustment | Automatically adjust the monitor brightness. | |

B.1.2 LED Function

| Table B.2: LED | Function | |
|----------------|----------------|--|
| ON | Green | |
| StandBy/OFF | Green Blinking | |
| No Signals | Orange | |



www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2013