## I-7013, I-7015, I-7033, M-7015 and M-7033 Series User Manual

## Warranty

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year from the date of delivery to the original purchaser.

## Warning

ICP DAS assumes no liability for damages resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notification. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, or for any infringements of patents or other rights of third parties resulting from its use.

## Copyright

Copyright 1999 - 2010 ICP DAS. All rights reserved.

## Trademark

The names used for identification only may be registered trademarks of their respective companies.

Date: 2011/9/16

KOLBINGER - PCQT - +43 2239 3160

AT-2384 Breitenfurt/Vienna, Hauptstrasse 93, office@kolbinger.at , www.pcqt.at

## **Table of Contents**

| 1. Introduction                                       | 5  |
|---|----|
| 1.1 More Information                                  | 7  |
| 1.2 Terminal Assignment                               |    |
| 1.3 Specifications                                    |    |
| 1.4 Block Diagrams                                    | 12 |
| 1.4.1 Block Diagram for the I-7013 and I-7013D        |    |
| 1.4.2 Block Diagram for the I-7033, I-7033D, M-7033   |    |
| and M-7033D   | 12 |
| 1.4.3 Block Diagram for the I-7015, I-7015P, M-7015   |    |
| and M-7015P   | 13 |
| 1.5 Dimensions  |    |
| 1.5.1 I-7013, I-7013D, I-7033, I-7033D, M-7033 and M  | [_ |
| 7033D Dimensions                                      |    |
| 1.5.2 I-7015, I-7015P, M-7015 and M-7015P Dimensio    |    |
| · · · · ·   |    |
| 1.6 Wiring  |    |
| 1.6.1 Wiring diagram for the I-7013, I-7013D, I-7033, | I- |
| 7033D, M-7033 and M-7033D                             | 16 |
| 1.6.2 Wiring diagram for the I-7015, I-7015P, M-7015  |    |
| and M-7015P   | 17 |
| 1.6.3 Wiring Recommendations                          | 17 |
| 1.7 Quick Start                                       | 18 |
| 1.8 Default Settings                                  | 20 |
| 1.9 Calibration                                       | 21 |
| 1.10 Configuration Tables                             | 23 |
| 1.11 M-7000 Notes                                     | 31 |
| 1.11.1 Protocol Switching                             | 31 |
| 1.11.2 INIT Mode                                      | 32 |
| 1.12 Mounting   |    |
| 1.12.1 Din-Rail Mounting                              |    |
| 1.12.2 Piggyback Mounting                             | 35 |
| 1.12.3 Wall Mounting                                  |    |
| 1.13 Technical Support                                |    |
| 2. DCON Protocol.                                     | 38 |

| 2.1 %AANNTTCCFF               |    |
|-------------------------------|----|
| 2.2 #**                       |    |
| 2.3 #AA                       |    |
| 2.4 #AAN                      |    |
| 2.5 \$AA0                     |    |
| 2.6 \$AA1                     |    |
| 2.7 \$AA0Ci                   |    |
| 2.8 \$AA1Ci                   |    |
| 2.9 \$AA2                     |    |
| 2.10 \$AA4                    |    |
| 2.11 \$AA5                    |    |
| 2.12 \$AA5VV                  |    |
| 2.13 \$AA6                    |    |
| 2.14 \$AA7CiRrr               |    |
| 2.15 \$AA8Ci                  |    |
| 2.16 \$AA8                    | 74 |
| 2.17 \$AA8V                   |    |
| 2.18 \$AA9(Data)              |    |
| 2.19 \$AAB                    |    |
| 2.20 \$AAF                    |    |
| 2.21 \$AAI                    |    |
| 2.22 \$AAM                    |    |
| 2.23 \$AAP                    |    |
| 2.24 \$AAPN                   |    |
| 2.25 \$AAS0                   |    |
| 2.26 \$AAS1                   |    |
| 2.27 ~AAD                     |    |
| 2.28 ~AADVV                   |    |
| 2.29 ~AAEV                    |    |
| 2.30 ~AAI (Soft INIT command) |    |
| 2.31 ~AAO(Name)               |    |
| 2.32 ~AATnn                   |    |
| 2.33 ~**                      |    |
| 2.34 ~AA0                     |    |
| 2.35 ~AA1                     |    |
| 2.36 ~AA2                     |    |
| 2.37 ~AA3EVV                  |    |
| 3. Modbus RTU Protocol        |    |


| 3.1 02 (0x02) Read Input Status                      | 117  |
|--|------|
| 3.2 04 (0x04) Read Input Channels                    | 118  |
| 3.3 70 (0x46) Read/Write Module Settings             |      |
| 3.3.1 Sub-function 00 (0x00) Read module name        | 120  |
| 3.3.2 Sub-function 04 (0x04) Set module address      | 121  |
| 3.3.3 Sub-function 05 $(0x05)$ Read communication    |      |
| settings   | 122  |
| 3.3.4 Sub-function 06 (0x06) Set communication sett  | ings |
|  |      |
| 3.3.5 Sub-function 07 (0x07) Read type code          | 126  |
| 3.3.6 Sub-function 08 (0x08) Set type code           | 127  |
| 3.3.7 Sub-function 32 (0x20) Read firmware version.  | 128  |
| 3.3.8 Sub-function 37 (0x25) Read channel            |      |
| enabled/disabled status                              | 129  |
| 3.3.9 Sub-function 38 (0x26) Set channel enable/disa | ble  |
|  | 130  |
| 3.3.10 Sub-function 41 (0x29) Read miscellaneous     |      |
| settings   | 131  |
| 3.3.11 Sub-function 42 (0x2A) Write miscellaneous    |      |
| settings   | 132  |
| 3.3.12 Sub-function 49 (0x31) Read LED configurati   |      |
|  | 133  |
| 3.3.13 Sub-function 50 (0x32) Write LED configurat   |      |
|  |      |
| 3.4 M-7015/15P Address Mappings                      |      |
| 3.5 M-7015/15P Engineering Data Format Table         |      |
| 4. Troubleshooting                                   |      |
| 4.1 Communicating with the module                    |      |
| 4.2 Reading Data                                     |      |
| A. Appendix  |      |
| A.1 INIT Mode  |      |
| A.2 Dual Watchdog Operation                          |      |
| A.3 Frame Ground                                     |      |
| A.4 Node Information Area                            |      |
| A.5 RTD  |      |
| A.6 Resistance Measurement                           | 148  |

## 1. Introduction

The I-7000 series is a family of network data acquisition and control modules, providing analog-to-digital, digitalto-analog, digital input/output, timer/counter and other functions. The modules can be remotely controlled using a set of commands, which we call the DCON protocol. Communication between the module and the host is in ASCII format via an RS-485 bi-directional serial bus standard. Baud Rates are software programmable and transmission speeds of up to 115.2 Kbps can be selected.

The functionality of the M-7000 series is the same as the I-7000 series, with the exception that the M-7000 series offers extended support for the Modbus RTU protocol.

Some I-7000 modules feature a new design for the frame ground and INIT switch as shown in the figure (rear view). The frame ground provides enhanced static protection (ESD) abilities and ensures the module is more reliable. The INIT switch allows easier access to INIT mode. Please refer to Sections A.1 and A.3 for more details.

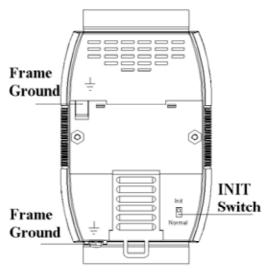

The common features of the I-7013/13D, I-7033/33D, I-7015/15P, M-7015/15P, and M-7033/33D modules are as follows:

1. 3000V DC inter-module isolation

- 2. 24-bit sigma-delta ADC to provide excellent accuracy
- 3. Direct RTD (resistance temperature detector) connection
- 4. Software calibration

The I-7013 is a single channel RTD input module. The I-7013D is the I-7013 with a 41/2 digit LED display. The I-7015/M-7015 is a 6-channel RTD input module. The I-7015P/M-7015P is a 6-channel RTD input module with lead resistances elimination. The I-7033/M-7033 is a 3-channel RTD input module. The I-7033/M-7033D is the I-7033/M-7033 with a 41/2 digit LED display.

Supported RTD types are as follows:


- 1. Platinum, 100 Ohms at 0°C,  $\alpha = 0.00385$
- 2. Platinum, 100 Ohms at 0°C,  $\alpha = 0.003916$
- Platinum, 1000 Ohms at 0°C, α = 0.00385 (I-7013/13D firmware version B1.3 and later, I-7033/33D, M-7033/33D, I-7015/15P and M-7015/15P)
- 4. Nickel, 120 Ohms at 0°C,  $\alpha = 0.00672$
- 5. Copper, 100 Ohms at 0°C,  $\alpha = 0.00421$  (I-7015/15P and M-7015/15P)
- 6. Copper, 1000 Ohms at 0°C,  $\alpha = 0.00421$  (I-7015/15P and M-7015/15P)
- 7. Copper, 100 Ohms at 25°C,  $\alpha = 0.00427$  (I-7015/15P and M-7015/15P)
- 8. Copper, 50 Ohms at 0°C, (I-7015/15P and M-7015/15P firmware version A2.3 and later)
- 9. Nickel, 100 Ohms at 0°C, (I-7015/15P and M-7015/15P firmware version A2.9 and later)


## **1.1 More Information**


For more information regarding the I-7000 series, please refer to chapter 1 of the "I-7000 Bus Converter User Manual" as shown below or visit the ICP DAS website <u>http://www.icpdas.com</u>.

- 1.1 The 7000 Series Overview
- 1.2 Related Documentation for the 7000 Series
- 1.3 Common Features of the 7000 Series
- 1.4 The 7000 Series System Network Configuration
- 1.5 7000 Dimensions

**1.2 Terminal Assignment** 

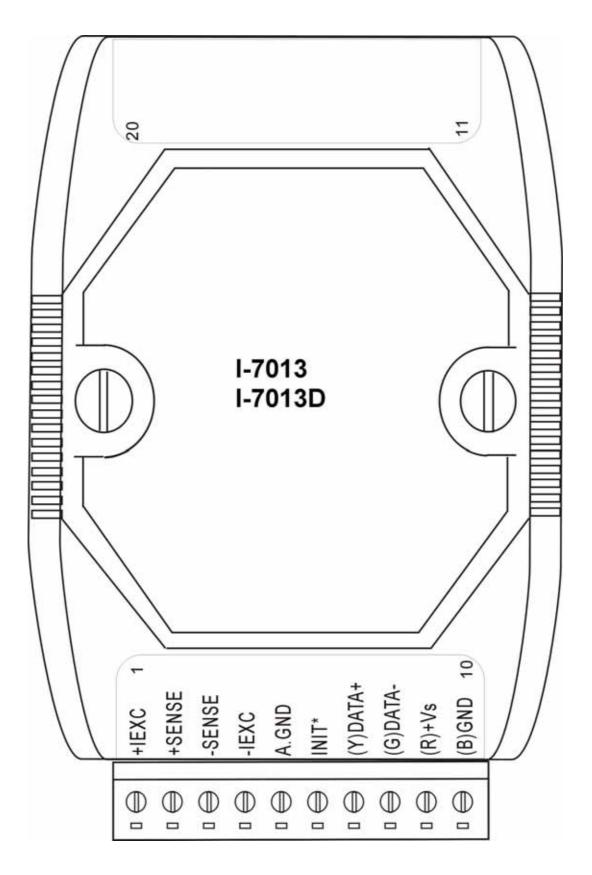

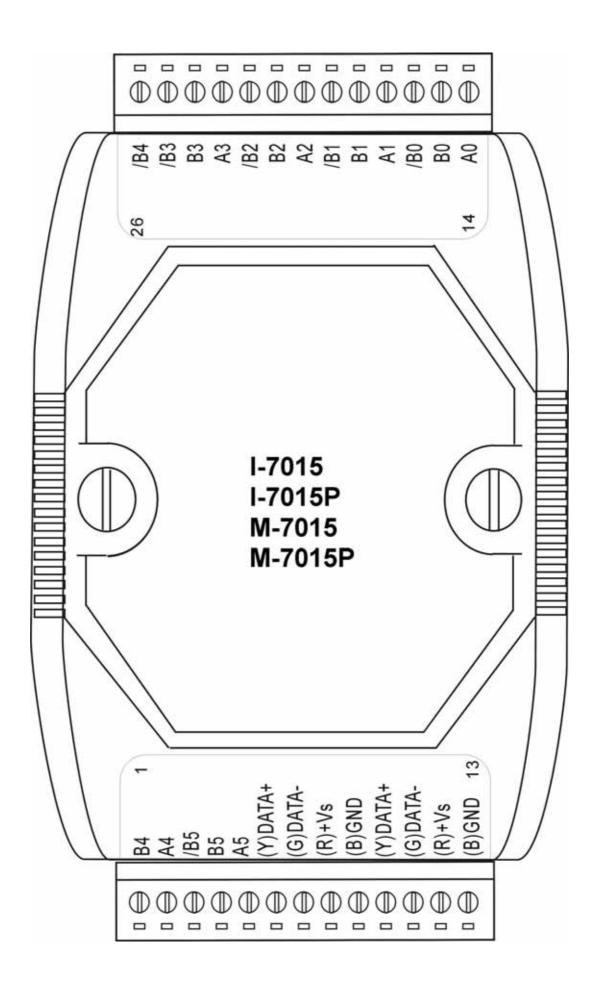

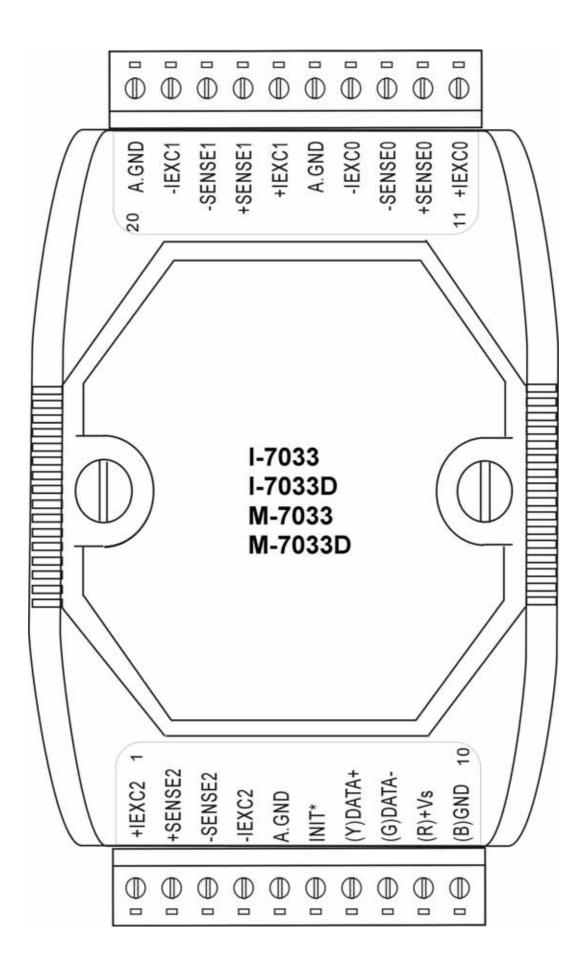

## **1.3 Specifications**

|                      | I-7013/I-7013D                     | I-7033/I-7033D                          | I-7015/I-7015P                     |
|----------------------|------------------------------------|---|------------------------------------|
|                      |                                    | M-7033/M-7033D                          | M-7015/M-7015P                     |
| Analog Input         |                                    | •                                       |                                    |
| Input Channels       | 1                                  | 3                                       | 6                                  |
| Input Type           | 2/3/4-wire RTD                     | 2/3/4-wire RTD                          | 2/3-wire RTD                       |
| RTD Type             | Pt100 $\alpha$ = 0.00385           | Pt100 $\alpha$ = 0.00385                | Pt100 $\alpha$ = 0.00385           |
|                      | Pt100 $\alpha$ = 0.003916          | Pt100 $\alpha$ = 0.003916               | Pt100 $\alpha$ = 0.003916          |
|                      | Ni120                              | Ni120                                   | Ni120                              |
|                      | Pt1000 $\alpha$ = 0.00385          | Pt1000 $\alpha$ = 0.00385               | Pt1000 $\alpha$ = 0.00385          |
|                      | (for firmware version              |   | Cu100 $\alpha$ = 0.00421           |
|                      | B1.3 and later)                    |   | Cu100 $\alpha$ = 0.00427           |
|                      |                                    |   | Cu1000 $\alpha$ = 0.00421          |
| Sampling Rate        | 10 samples/sec                     | 15 samples/sec at 60Hz                  | 12 samples/sec                     |
| Sumpting Rule        |                                    | 12.5 samples/sec at 50Hz                | 12 sumpres/see                     |
| Bandwidth            | 5.24 Hz                            | 15.7 Hz                                 | 5.24 Hz                            |
| Accuracy             | ±0.05%                             | ±0.1%                                   | ±0.05%                             |
| Zero Drift           | 0.5 μV/°C                          | 0.5 μV/°C                               | 0.5 μV/°C                          |
| Span Drift           | 20 μV/°C                           | 20 µV/°C                                | 20 μV/°C                           |
| CMR@50/60Hz          |                                    | 150 dB min                              | 150 dB min                         |
| NMR@50/60Hz          |                                    | 100 dB min                              | 100 dB min                         |
| Isolation            | 3000 VDC                           | 3000 VDC                                | 3000 VDC                           |
| Modbus RTU           |                                    | M-7033/M-7033D                          | M-7015/M-7015P                     |
| LED Display          | 4 1/2 digits                       | 4 1/2 digits                            |                                    |
|                      | (for I-7013D only)                 | (for I-7033D and                        |                                    |
|                      |                                    | M-7033D only)                           |                                    |
| Power                |                                    |   |                                    |
| Requirements         | +10 to +30 VDC                     | +10 to +30 VDC                          | +10 to +30 VDC                     |
| Consumption          | 0.7 W for I-7013                   | 1.0 W for I-7033/M-7033                 | 1.1 W                              |
|                      | 1.3 W for I-7013D                  | 1.6 W for I-7033D/                      |                                    |
|                      |                                    | M-7033D                                 |                                    |
| Temperature<br>Banga |                                    |   |                                    |
| Range                | $25^{\circ}C$ to $\pm 75^{\circ}C$ | $25^{\circ}C$ to $\pm 75^{\circ}C$      | $25^{\circ}C$ to $\pm 75^{\circ}C$ |
| Operating<br>Storage | $-25^{\circ}C$ to $+75^{\circ}C$   | $-25^{\circ}C \text{ to } +75^{\circ}C$ | $-25^{\circ}C$ to $+75^{\circ}C$   |
| Storage              | -30°C to +75°C                     | -30°C to +75°C                          | -30°C to +75°C                     |


### Notes:

- 1. A warm up period of 30 minutes is recommended in order to achieve the complete performance results described in the specifications.
- 2. The specifications are typical at 25°C unless otherwise stated.


11

## **1.4 Block Diagrams**


### 1.4.1 Block Diagram for the I-7013 and I-7013D

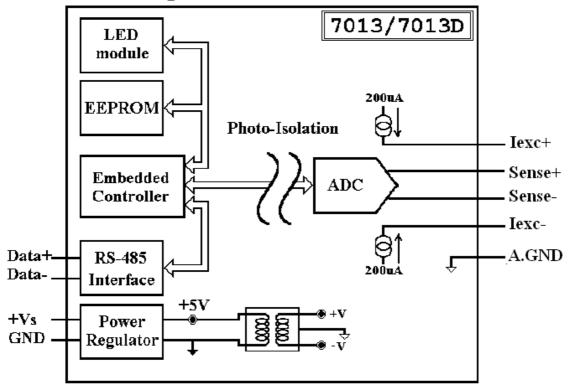

### 1.4.2 Block Diagram for the I-7033, I-7033D, M-7033 and M-7033D

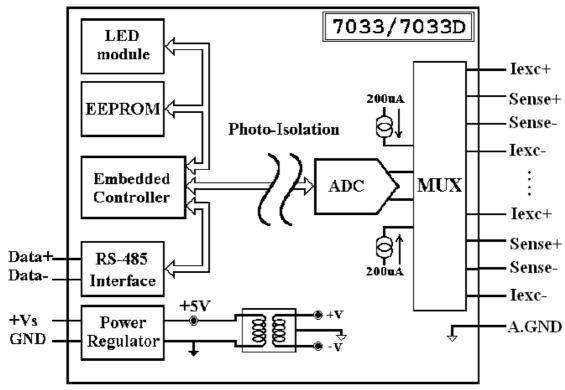


12

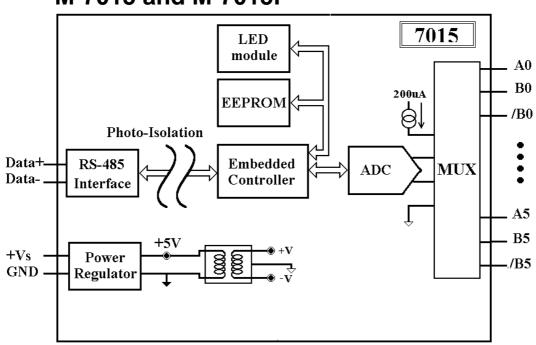


### 1.4.3 Block Diagram for the I-7015, I-7015P, M-7015 and M-7015P

### **1.5 Dimensions**

### 1.5.1 I-7013, I-7013D, I-7033, I-7033D, M-7033 and M-7033D Dimensions

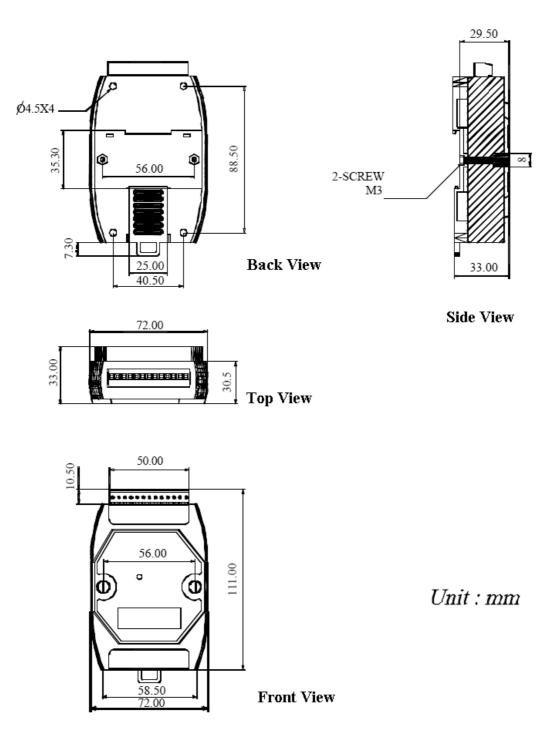


### 1.5.2 I-7015, I-7015P, M-7015 and M-7015P Dimensions

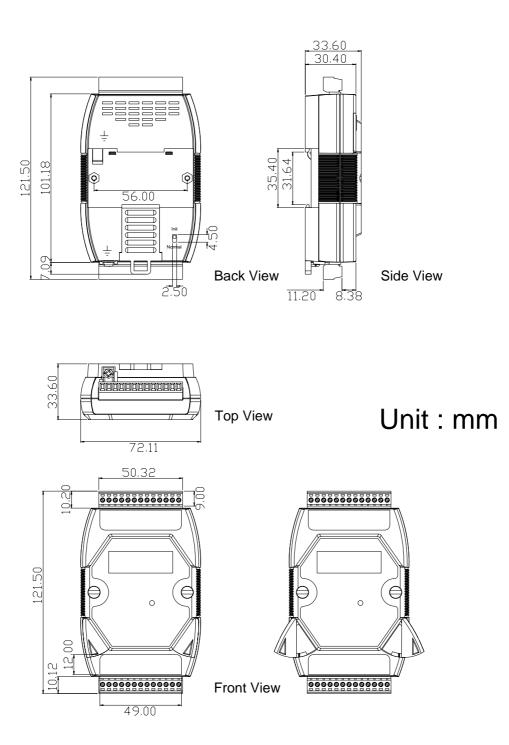

## 1.6 Wiring


### 1.6.1 Wiring diagram for the I-7013, I-7013D, I-7033, I-7033D, M-7033 and M-7033D

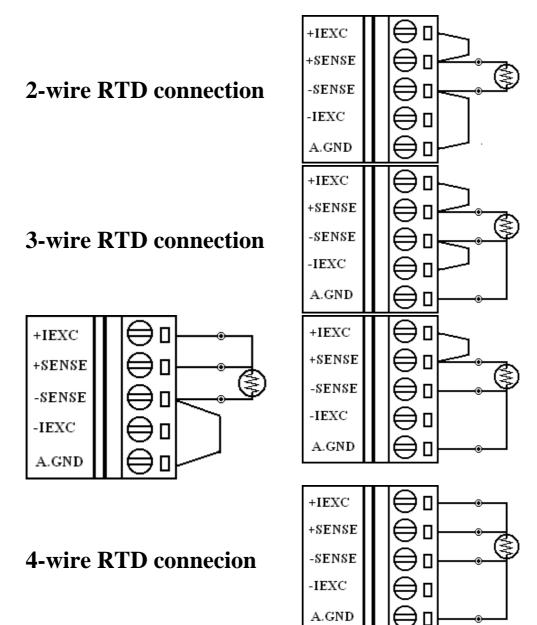

### 1.6.2 Wiring diagram for the I-7015, I-7015P, M-7015 and M-7015P

2-wire RTD connection

**3-wire RTD connection** 

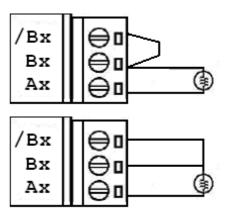

### **1.6.3 Wiring Recommendations**

- Use 26-12 AWG wire for signal connections.
- Strip the wire to a length of 7±0.5mm.
- Use a crimp terminal for wiring.
- Avoid high-voltage cables and power equipment as much as possible.
- For the I-7015 and M-7015, it is recommended to use shielded wire and connect the shielding to the Ax terminal of the channel.
- For the I-7015P and M-7015P, it is recommended to use shielded wire and connect the shielding to the /Bx terminal of the channel.
- For the I-7033/33D and M-7033/33D, the wires of a channel should be shielded and the shielding should be connected to the A.GND terminal of the channel.
- For RS-485 communication, use insulated and twisted pair 24 AWG wire, e.g. Belden 9841.

## **1.7 Quick Start**

To install the module, follow the steps below:

- 1. Connect the RTD sensor. See Section 1.2 for the terminal assignment and Section 1.6 for the wiring diagram.
- Connect the module to the RS-485 network using the DATA+ and DATA- terminals. See Section 1.2 for the terminal assignment. If the host is only equipped with an RS-232 interface, then an RS-232 to RS-485 converter will be required. Refer to the "I-7000 Bus Converter User Manual" for more information.
- 3. Connect the module to the power supply using the +Vs and GND terminals. See Section 1.2 for the terminal assignment. Note that the voltage supplied to the module should be in the range of +10 to +30 VDC.
- 4. For I-7000 modules, configure the module by sending the %AANNTTCCFF command. See Section 2.1 for details. To configure the I-7015/15P, the \$AA7CiRrr command must also be sent. See Section 2.14 for details. For M-7000 modules using the Modbus RTU protocol, configure the module using the following functions.
  - □ Sub-function 04h of Function 46h, see Section 3.3.2
  - □ Sub-function 06h of Function 46h, see Section 3.3.4
  - Sub-function 08h of Function 46h, see Section 3.3.6
     The default settings for the module can be found in Section 1.8.
- 5. For I-7000 modules, in order to read data from the input channels, send either the #AA or #AAN commands to the module. See Sections 2.3 and 2.4 for details. For M-7000 modules using the Modbus RTU protocol, use Function 04h to read the data from the input channels. See Section 3.2 for details.

18

6. If the host is a PC with a Windows operating system installed, the DCON Utility can be used to allow easy configuration and reading of data. The DCON Utility can be downloaded from the ICP DAS website (<u>http://www.icpdas.com</u>). The documentation for the DCON Utility can be found in the "Getting Started For I-7000 Series Modules" manual.

Please refer to the "I-7000 Bus Converter User Manual" and "Getting Started For I-7000 Series Modules" manuals for more details. The "Getting Started For I-7000 Series Modules" manual can be downloaded from the ICP DAS website (http://www.icpdas.com).

## **1.8 Default Settings**

Default settings for the I-7013/13D, I-7015/15P and I-7033/33D modules are as follows:

- Module Address: 01
- RTD Type: Type 20, Pt100, -100°C to 100°C
- Baud Rate: 9600 bps
- Checksum disabled
- Engineering unit format
- Filter set at 60Hz rejection

Default settings for the M-7033/33D and M-7015/15P modules are as follows:

- Protocol: Modbus RTU
- Module Address: 01
- RTD Type: Type 20, Pt100, -100°C to 100°C
- Baud Rate: 9600 bps
- Filter set at 60Hz rejection

## **1.9 Calibration**

**Warning:** It is not recommended that calibration be performed until the process is fully understood.

The calibration procedure is as follows:

- 1. Warm up the module for at least 30 minutes.
- 2. Set the type code to the type you wish to calibrate. Refer to Sections 2.1 and 2.14 for details.
- 3. Enable calibration. Refer to Section. 2.29 for details.
- 4. Connect the zero calibration resistor.
- 5. Send the zero calibration command. Refer to Sections 2.6 and 2.7 for details.
- 6. Connect the span calibration resistor.
- Send the span calibration command. Refer to Sections 2.5 and 2.8 for details.
- 8. Repeat steps 3 to 7 three times.

### Notes:

- 1. Use the 2-wire RTD connection to connect the calibration resistor.
- 2. For the I-7033/33D and M-7033/33D, connect the calibration resistor to channel 0.
- 3. For the I-7015, I-7015P, M-7015 and M-7015P, each channel should be calibrated separately and only the channel being calibrated should be enabled during calibration.
- 4. Step 3 is not needed for the I-7013 and I-7013D version A1.x and A2.x. Use the \$AAF command to access the firmware version. See Section 2.20 for details.
- 5. Calibration resistors are shown on the next page.
- 6. The M-7000 series modules must be switched to the DCON protocol mode before calibrating. Refer to Sections 1.11.1 and 3.3.4 for details of the switching protocol.

## Calibration resistor types used by the I-7013/13D with firmware version A1.x and A2.x:

| Туре | Zero Calibration Resistor | Span Calibration Resistor |
|------|---------------------------|---------------------------|
| 20   | 55 Ohms                   | 375 Ohms                  |

Note: Types 21 to 29 use the same calibration parameters as type 20.

# Calibration resistor types used by the I-7013/13D with firmware version B1.3 and later, I-7033/33D and M-7033/33D:

| Туре | Zero Calibration Resistor | Span Calibration Resistor |
|------|---------------------------|---------------------------|
| 82   | 0 Ohms                    | 200 Ohms                  |
| 20   | 0 Ohms                    | 375 Ohms                  |
| 2A   | 0 Ohms                    | 3200 Ohms                 |

Note:

- 1. Types 21 to 29, 2E, 2F, 80 and 81 use the same calibration parameters as type 20.
- 2. Type 82 is only available to firmware version B1.5 and later.

## Calibration resistor types used by the I-7015/15P and M-7015/15P:

#### For firmware version A2.9 and before:

| Туре | Zero Calibration Resistor | Span Calibration Resistor |
|------|---------------------------|---------------------------|
| 2B   | 0 Ohms                    | 160 Ohms                  |
| 20   | 0 Ohms                    | 320 Ohms                  |
| 2A   | 0 Ohms                    | 3000 Ohms                 |

#### For firmware version B1.9 and later:

| Туре | Zero Calibration Resistor | Span Calibration Resistor |
|------|---------------------------|---------------------------|
| 2B   | 0 Ohms                    | 200 Ohms                  |
| 20   | 0 Ohms                    | 375Ohms                   |
| 2A   | 0 Ohms                    | 3200 Ohms                 |

Note:

- 1. Types 21 to 29, 2E, 2F, 80 81 and 83 use the same calibration parameters as type 20.
- 2. Type 2C and 82 uses the same calibration parameters as type 2B.
- 3. Type 2D uses the same calibration parameters as type 2A.

## **1.10 Configuration Tables**

### **Baud Rate Setting (CC)**

| Code      | 03   | 04   | 05   | 06   | 07    | 08    | 09    | 0A     |
|-----------|------|------|------|------|-------|-------|-------|--------|
| Baud rate | 1200 | 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200 |

### Note:

For I-7015/15P and M-7015/15P firmware version B2.2 and later, bits 7 and 6 of the CC byte are used to set parity and stop bits as follows. The number of data bits is fixed to be eight.

| <b>Bits 7:6</b> | Description                  |
|-----------------|------------------------------|
| 00              | No parity and one stop bit   |
| 01              | No parity and two stop bits  |
| 10              | Even parity and one stop bit |
| 11              | Odd parity and one stop bit  |

For other firmware version of I-7015/15P and M-7015/15P and other modules, the data bits are fixed at one start bit, eight data bits, no parity and one stop bit.

### **RTD Type Setting (TT)**

| r         |   | []              |
|-----------|---|-----------------|
| Type Code | Temperature Sensor Type                     |                 |
| 20        | Platinum 100, $\alpha = 0.00385$            | -100 ~ 100      |
| 21        | Platinum 100, $\alpha = 0.00385$            | 0~100           |
| 22        | Platinum 100, $\alpha = 0.00385$            | $0 \sim 200$    |
| 23        | Platinum 100, $\alpha = 0.00385$            | $0 \sim 600$    |
| 24        | Platinum 100, $\alpha = 0.003916$           | -100 ~ 100      |
| 25        | Platinum 100, $\alpha = 0.003916$           | 0 ~ 100         |
| 26        | Platinum 100, $\alpha = 0.003916$           | 0~200           |
| 27        | Platinum 100, $\alpha = 0.003916$           | 0 ~ 600         |
| 28        | Nickel 120                                  | -80 ~ 100       |
| 29        | Nickel 120                                  | $0 \sim 100$    |
| 2A        | Platinum 1000, $\alpha = 0.00385$           | $-200 \sim 600$ |
| 2B        | Cu 100 @ 0°C, $\alpha = 0.00421$            | -20 ~ 150       |
| 2C        | Cu 100 @ $25^{\circ}$ C, $\alpha = 0.00427$ | 0~200           |
| 2D        | Cu 1000 @ 0°C, $\alpha = 0.00421$           | -20 ~ 150       |
| 2E        | Platinum 100, $\alpha = 0.00385$            | $-200 \sim 200$ |
| 2F        | Platinum 100, $\alpha = 0.003916$           | $-200 \sim 200$ |
| 80        | Platinum 100, $\alpha = 0.00385$            | -200 ~ 600      |
| 81        | Platinum 100, $\alpha = 0.003916$           | -200 ~ 600      |
| 82        | Cu 50 @ 0°C                                 | -50 ~ 150       |
| 83        | Nickel 100                                  | -60 ~ 180       |

### Note:

- 1. Type 2A is only applicable to the I-7013/13D firmware version B1.3 and later, I-7015/15P, I-7033/33D, M-7015/15P and M-7033/33D.
- 2. Types 2B, 2C and 2D are only applicable to the I-7015/15P and M-7015/15P.
- 3. Types 2E, 2F, 80 and 81 are only applicable to the I-7013/13D firmware version B1.3 and later, I-7015 firmware version A1.10 and later, I-7033/33D firmware version B1.3 and later, I-7015P, M-7015/15P and M-7033/33D.
- 4. Types 82 is only applicable to the I-7013/13D firmware version B1.5 and later, I-7015 and M-7015 firmware version A2.3 and later, I-7033/33D firmware version B1.5 and later, I-7015P, M-7015P and M-7033/33D.
- 5. Type 83 is only applicable to the I-7015 and M-7015 firmware version A2.9 and later, I-7015P and M-7015P.

### **Data Format Setting (FF)**

| 7  | 6  | 5 | 4        | 3 | 2 | 1 | 0          |
|----|----|---|----------|---|---|---|------------|
| FS | CS |   | reserved |   |   | D | <b>)</b> F |

| Key | Description                                 |  |
|-----|---|--|
| DF  | Data format                                 |  |
|     | 00: Engineering unit                        |  |
|     | 01: % of FSR (full scale range)             |  |
|     | 10: 2's complement hexadecimal              |  |
|     | 11: Ohms                                    |  |
| CS  | Checksum setting                            |  |
|     | 0: Disabled                                 |  |
|     | 1: Enabled                                  |  |
| FS  | Filter setting                              |  |
|     | 0: 60Hz rejection                           |  |
|     | 1: 50Hz rejection                           |  |
|     | This setting is reserved for the I-7015 and |  |
|     | M-7015 firmware version A2.9 and before and |  |
|     | should be zero.                             |  |

Note: The reserved bits should be zero.

### **RTD Type and Data Format Table**

| Type Code | RTD Type  | Data Format      | +F.S.   | -F.S.   |
|-----------|---|------------------|---------|---------|
|           | Platinum 100  | Engineering unit | +100.00 | -100.00 |
| 20        |   | % of FSR         | +100.00 | -100.00 |
|           | $\alpha = 0.00385$<br>-100 ~ 100°C                              | 2's comp HEX     | 7FFF    | 8000    |
|           |   | Ohms             | +138.50 | +060.60 |
|           | Distinum 100  | Engineering unit | +100.00 | +000.00 |
| 21        | Platinum 100 $a_{\rm H} = 0.00285$                              | % of FSR         | +100.00 | +100.00 |
| 21        | $\alpha = 0.00385$  | 2's comp HEX     | 7FFF    | 0000    |
|           | 0 ~ 100°C   | Ohms             | +138.50 | +100.00 |
|           | Platinum 100  | Engineering unit | +200.00 | +000.00 |
| 22        | $\alpha = 0.00385$  | % of FSR         | +100.00 | +000.00 |
| 22        |   | 2's comp HEX     | 7FFF    | 0000    |
|           | $0 \sim 200^{\circ} C$  | Ohms             | +175.84 | +100.00 |
|           | Distinum 100  | Engineering unit | +600.00 | +000.00 |
| 22        | Platinum 100<br>$\alpha = 0.00385$<br>$0 \sim 600^{\circ}C$     | % of FSR         | +100.00 | +000.00 |
| 23        |   | 2's comp HEX     | 7FFF    | 0000    |
|           |   | Ohms             | +313.59 | +100.00 |
|           | Platinum 100<br>$\alpha = 0.003916$<br>$-100 \sim 100^{\circ}C$ | Engineering unit | +100.00 | -100.00 |
| 24        |   | % of FSR         | +100.00 | -100.00 |
| 24        |   | 2's comp HEX     | 7FFF    | 8000    |
|           |   | Ohms             | +139.16 | +060.60 |
|           | Platinum 100  | Engineering unit | +100.00 | +000.00 |
| 25        | $\alpha = 0.003916$   | % of FSR         | +100.00 | +000.00 |
| 25        | a = 0.003910<br>0 ~ 100°C                                       | 2's comp HEX     | 7FFF    | 0000    |
|           |   | Ohms             | +139.16 | +100.00 |
|           | Platinum 100<br>$\alpha = 0.003916$<br>$0 \sim 200^{\circ}C$    | Engineering unit | +200.00 | +000.00 |
| 26        |   | % of FSR         | +100.00 | +000.00 |
|           |   | 2's comp HEX     | 7FFF    | 0000    |
|           |   | Ohms             | +177.14 | +100.00 |
|           | Platinum 100<br>$\alpha = 0.003916$                             | Engineering unit | +600.00 | +000.00 |
| 27        |   | % of FSR         | +100.00 | +000.00 |
| 27        |   | 2's comp HEX     | 7FFF    | 0000    |
|           | $0 \sim 600^{\circ}\mathrm{C}$                                  | Ohms             | +317.28 | +100.00 |

| Type Code | RTD Type  | Data Format      | +F.S.   | -F.S.   |
|-----------|---|------------------|---------|---------|
|           |   | Engineering unit | +100.00 | -080.00 |
| 28        | Nickel 120  | % of FSR         | +100.00 | -080.00 |
|           | -80 ~ 100°C   | 2's comp HEX     | 7FFF    | 999A    |
|           |   | Ohms             | +200.64 | +066.60 |
|           |   | Engineering unit | +100.00 | +000.00 |
| 20        | Nickel 120  | % of FSR         | +100.00 | +000.00 |
| 29        | $0 \sim 100^{\circ} C$                                | 2's comp HEX     | 7FFF    | 0000    |
|           |   | Ohms             | +200.64 | +120.60 |
|           | Platinum 1000   | Engineering unit | +600.00 | -200.00 |
| $2A^{*1}$ | $\alpha = 0.00385$                                    | % of FSR         | +100.00 | -033.33 |
| ZA        | $-200 \sim 600^{\circ}C$                              | 2's comp HEX     | 7FFF    | D556    |
|           | $-200 \sim 600 \text{ C}$                             | Ohms             | +3137.1 | +0185.2 |
|           | Cu 100  | Engineering unit | +150.00 | -020.00 |
| $2B^{*2}$ | $\alpha = 0.00421$<br>-20 ~ 150°C                     | % of FSR         | +100.00 | -013.33 |
| 20        |   | 2's comp HEX     | 7FFF    | EEEF    |
|           |   | Ohms             | +163.17 | +091.56 |
|           | Cu 100<br>$\alpha = 0.00427$<br>$0 \sim 200^{\circ}C$ | Engineering unit | +200.00 | +000.00 |
| $2C^{*2}$ |   | % of FSR         | +100.00 | +000.00 |
| 20        |   | 2's comp HEX     | 7FFF    | 0000    |
|           |   | Ohms             | +167.75 | +090.34 |
|           | Cu 1000   | Engineering unit | +150.00 | -020.00 |
| $2D^{*2}$ | $\alpha = 0.00421$                                    | % of FSR         | +100.00 | -013.33 |
| 2D        | a = 0.00421<br>-20 ~ 150°C                            | 2's comp HEX     | 7FFF    | EEEF    |
|           |   | Ohms             | +1631.7 | +0915.6 |
|           | Platinum 100<br>$\alpha = 0.00385$<br>-200 ~ 200°C    | Engineering unit | +200.00 | -200.00 |
| $2E^{*3}$ |   | % of FSR         | +100.00 | -100.00 |
|           |   | 2's comp HEX     | 7FFF    | 8000    |
|           |   | Ohms             | +175.84 | +018.49 |
|           | Platinum 100<br>$\alpha = 0.003916$<br>-200 ~ 200°C   | Engineering unit | +200.00 | -200.00 |
| $2F^{*3}$ |   | % of FSR         | +100.00 | -100.00 |
| 21        |   | 2's comp HEX     | 7FFF    | 8000    |
|           | -200 ~ 200 C  | Ohms             | +177.14 | +017.14 |

| Type Code        | RTD Type   | Data Format      | +F.S.   | -F.S.   |
|------------------|--|------------------|---------|---------|
| Type Code        | ктотуре  |                  |         |         |
|                  | Platinum 100<br>$\alpha = 0.00385$<br>-200 ~ 600°C | Engineering unit | +600.00 | -200.00 |
| 80*3             |  | % of FSR         | +100.00 | -033.33 |
| 80               |  | 2's comp HEX     | 7FFF    | D556    |
|                  | $-200 \sim 600 \text{ C}$                          | Ohms             | +313.59 | +018.49 |
|                  | Platinum 100                                       | Engineering unit | +600.00 | -200.00 |
| 81*3             | $\alpha = 0.003916$                                | % of FSR         | +100.00 | -033.33 |
| 01               | a = 0.003910<br>-200 ~ 600°C                       | 2's comp HEX     | 7FFF    | D556    |
|                  |  | Ohms             | +317.28 | +017.14 |
|                  |  | Engineering unit | +150.00 | -050.00 |
| 82 <sup>*4</sup> | Cu 50  | % of FSR         | +100.00 | -033.33 |
| 02               | -50 ~ 150°C  | 2's comp HEX     | 7FFF    | D556    |
|                  |  | Ohms             | +082.13 | +039.24 |
|                  |  | Engineering unit | +180.00 | -060.00 |
| 83 <sup>*5</sup> | Nickel 100   | % of FSR         | +100.00 | -033.33 |
|                  | -60 ~ 180°C  | 2's comp HEX     | 7FFF    | D556    |
|                  |  | Ohms             | +223.10 | +069.50 |

\*1: only available with the I-7013/13D firmware version B1.3 and later, I-7015/15P, I-7033/33D, M-7015/15P and M-7033/33D.

- \*2: only available with the I-7015/15P and M-7015/15P.
- \*3: only available with the I-7013/13D firmware version B1.3 and later, I-7015 firmware version A1.10 and later, I-7033/33D firmware version B1.3 and later, I-7015P, M-7015/15P and M-7033/33D.
- \*4: only available with the I-7013/13D firmware version B1.5 and later, I-7015/M-7015 firmware version A2.3 and later, I-7033/33D firmware version B1.5 and later, I-7015P, M-7015P and M-7033/33D.

\*5: only available with the I-7015/M-7015 firmware version A2.9 and later, I-7015P and M-7015P.

## RTD Over Range/Under Range Reading for the I-7013/13D, I-7033/33D and M-7033/33D

|                    | Over Range | Under Range |
|--------------------|------------|-------------|
| Engineering Unit   | +9999      | -0000       |
| % of FSR           | +9999      | -0000       |
| 2's Complement HEX | 7FFF       | 8000        |

**Note:** For firmware version B1.3 and later, the over range/under range reading can be the same as that of the I-7015 as follows by sending the ~AADVV command. Refer to Section 2.28 for details.

### **RTD Over Range/Under Range Reading for the** I-7015/15P and M-7015/15P

|                    | Over Range | Under Range |
|--------------------|------------|-------------|
| Engineering Unit   | +9999.9    | -9999.9     |
| % of FSR           | +999.99    | -999.99     |
| 2's Complement HEX | 7FFF       | 8000        |

### **RTD Over Range/Under Range Reading for the** M-7015/15P and M-7033/33D with Modbus RTU protocol

| Over Range | Under Range |
|------------|-------------|
| 7FFFh      | 8000h       |

## 1.11 M-7000 Notes

The main difference between the I-7000 and M-7000 series is that the M-7000 series has additional support for the Modbus RTU communication protocol, which is the default protocol of the M-7000 series. The communication Baud Rates for the Modbus RTU protocol can be in the range of 1200 bps to 115200 bps, and the parity, data and stop bits are fixed as no parity, 8 data bits and 1 stop bit.

Modbus functions supported by the module are described in Chapter 3.

### 1.11.1 Protocol Switching

To switch to the DCON protocol:

- Uses sub-function 06h of the function 46h and set byte 8 to a value of 1. See Section 3.3.4 for details.
- 2. After a power-on reset, the communication protocol will be changed to DCON.

To switch to the Modbus RTU protocol:


- Sends the \$AAPN command and set N to a value of 1. Note that for the M-7033/33D, the INIT\* terminal should be connected to the GND terminal, and for the M-7015/15P, the slide switch on the rear side of the module should be set to the INIT position, see the figure on the next page. See Section 2.24 for details.
- 2. After a power-on reset, the communication protocol will be changed to the Modbus RTU protocol.

### 1.11.2 INIT Mode

When the module is powered on, with the rear slide switch set to the INIT position as shown in the figure below for the M-7015/15P, or with the INIT\* pin connected to the GND pin for the M-7033/33D, the module is in INIT mode, (see Section A.1 for details), and the communication settings are as follows:


- 1. Address: 00
- 2. Baud Rate: 9600 bps
- 3. No checksum
- 4. Protocol: DCON

If communication with the module is not possible, set the module to the INIT mode and use the above settings to communicate with the module. To read the current settings, send the commands \$AA2, (see Section 2.9), and \$AAP, (see Section 2.23). To set new settings, send the commands %AANNTTCCFF, (see Section 2.1) and \$AAPN, (see Section 2.24). The new communication settings will be effective after the next power-on reset.

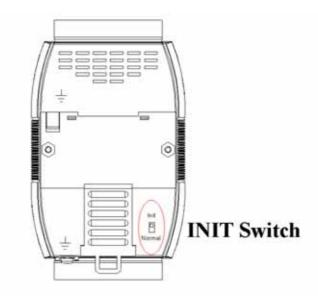


## 1.12 Mounting


### 1.12.1 Din-Rail Mounting

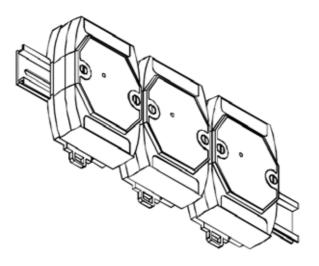

There are three new DIN rail models available. Each is made of stainless steel, which is stronger than those made of aluminum. There is a screw at one end and a ring terminal is included so that it can be easily connected to the earth ground. The three new DIN rail models are as follows.

| Part number  | Max. number of modules | Dimensions   |
|--------------|------------------------|--------------|
| DRS-360      | 5                      | 360mm x 35mm |
| to earth gro | ound                   |              |

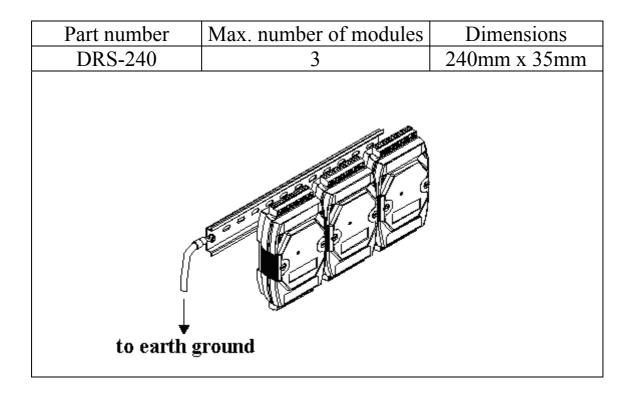


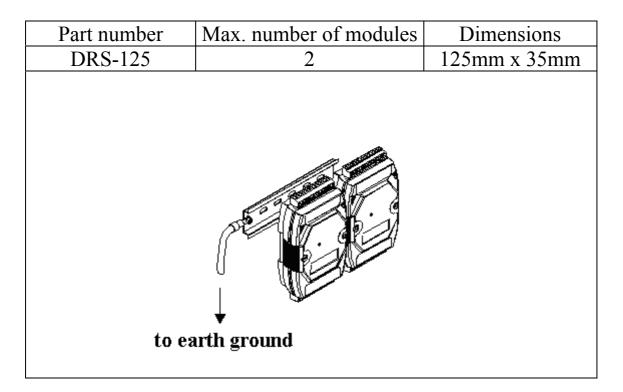


**Note**: It is recommended that a 16 - 14 AWG wire is used to connect the DIN rail to the earth ground.

### 1.12.2 Piggyback Mounting


For I-7013/13D, I-7033/33D and M-7033/33D modules

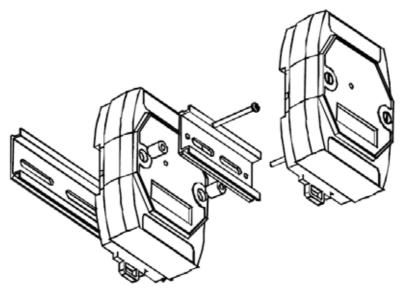

For I-7015/15P and M-7015/15P modules

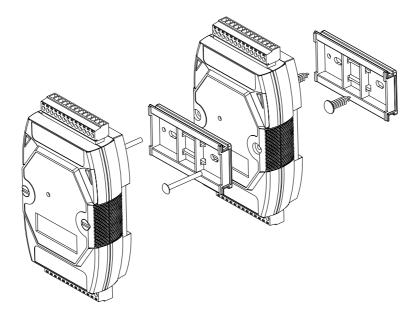

### 1.12.3 Wall Mounting

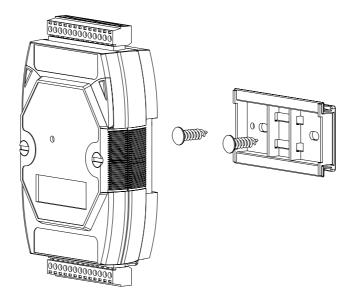

# **1.13 Technical Support**

Should you encounter any problems while using the I-7000 and M-7000 module, and are unable to find the help you need in this manual or on our website, please contact ICP DAS Product Support.

Email: <u>support@icpdas.com</u>

Website: http://www.icpdas.com/service/support.htm

When requesting technical support, be prepared to provide the following information about your system:

- 1. Module name and serial number: The serial number can be found printed on the barcode label attached to the cover of the module.
- 2. Firmware version: See Sections 2.20 and 3.3.7 for information regarding the command used to identify the firmware version.
- 3. Host configuration (type and operating system)
- 4. If the problem is reproducible, please give full details describing the procedure used to reproduce the problem.
- 5. Any specific error messages displayed. If a dialog box with an error message is displayed, please include the full text of the dialog box, including the text in the title bar.
- 6. If the problem involves other programs or hardware devices, please describe the details of the problem in full.
- 7. Any comments and suggestions related to the problem are welcome.

ICP DAS will reply to your request by email within three business days.

# 2. DCON Protocol

All communication with I-7000 modules consists of commands generated by the host and responses transmitted by the I-7000 modules. Each module has a unique ID number that is used for addressing purposes and is stored in non-volatile memory. The ID is 01 by default and can be changed using a user command. All commands to the modules contain the ID address, meaning that only the addressed module will respond. The only exception to this is commands #\*\* (Section 2.2) and ~\*\* (Section 2.33), which are sent to all modules, but in both of these cases, the modules do not reply to the command.

## **Command Format:**

| Leading<br>Character |  | Command | [CHKSUM] | CR |
|----------------------|--|---------|----------|----|
|----------------------|--|---------|----------|----|

## **Response Format:**

| Leading Module<br>Character Address | Data | [CHKSUM] | CR |
|-------------------------------------|------|----------|----|
|-------------------------------------|------|----------|----|

| CHKSUM | A 2-character checksum which is present     |  |
|--------|---|--|
|        | when the checksum setting is enabled. See   |  |
|        | Sections 1.10 (Data Format Setting) and 2.1 |  |
|        | for details.                                |  |
| CR     | End of command character, carriage return   |  |
|        | (0x0D)                                      |  |

## Checksum Calculation:

- 1. Calculate the ASCII code sum of all the characters in the command/response string except for the carriage return character (CR).
- 2. The checksum is equal to the sum masked by 0FFh.

## Example:

Command string: \$012(CR)

- 1. Sum of the string = "\$"+"0"+"1"+"2" = 24h+30h+31h+32h = B7h
- 2. Therefore the checksum is B7h, and so CHKSUM = "B7"
- 3. The command string with the checksum = 012B7(CR)

Response string: !01200600(CR)

- 1. Sum of the string = "!"+"0"+"1"+"2"+"0"+"0"+"6"+"0"+"0" = 21h+30h+31h+32h+30h+30h+36h+30h+30h = 1AAh
- 2. Therefore the checksum is AAh, and so CHKSUM = "AA"
- 3. The response string with the checksum = !01200600AA(CR)

## Note:

All characters should be in upper case.

| General Command Sets |             |  |         |
|----------------------|-------------|--|---------|
| Command              | Response    | Description                                | Section |
| %AANNTTCCFF          | !AA         | Sets the module configuration              | 2.1     |
| #**                  | No Response | Synchronized sampling                      | 2.2     |
| #AA                  | >(Data)     | Reads the analog inputs of all channels    | 2.3     |
| #AAN                 | >(Data)     | Reads the analog input of a channel        | 2.4     |
| \$AA0                | !AA         | Performs a span calibration                | 2.5     |
| \$AA1                | !AA         | Performs a zero calibration                | 2.6     |
| \$AA0Ci              | !AA         | Performs a single channel zero calibration | 2.7     |
| \$AA1Ci              | !AA         | Performs a single channel span calibration | 2.8     |
| \$AA2                | !AANNTTCCFF | Reads the module configuration             | 2.9     |
| \$AA4                | >AAS(Data)  | Reads the synchronized data                | 2.10    |
| \$AA5                | !AAS        | Reads the module reset status              | 2.11    |
| \$AA5VV              | !AA         | Enables/Disables a channel                 | 2.12    |
| \$AA6                | !AAVV       | Reads the channel enabled/disabled status  | 2.13    |
| \$AA7CiRrr           | !AA         | Sets a single channel range configuration  | 2.14    |
| \$AA8Ci              | !AACiRrr    | Reads a single channel range configuration | 2.15    |
| \$AA8                | !AAV        | Reads the LED configuration                | 2.16    |
| \$AA8V               | !AA         | Sets the LED configuration                 | 2.17    |
| \$AA9(Data)          | !AA         | Sets the LED display data                  | 2.18    |
| \$AAB                | !AANN       | Reads the channel diagnostic status        | 2.19    |
| \$AAF                | !AA(Data)   | Reads the firmware version                 | 2.20    |
| \$AAI                | !AAS        | Reads the INIT terminal status             | 2.21    |
| \$AAM                | !AA(Data)   | Reads the module name                      | 2.22    |
| \$AAP                | !AASC       | Reads the communication protocol           | 2.23    |
| \$AAPN               | !AA         | Sets the communication protocol            | 2.24    |
| \$AAS0               | !AA         | Internal Calibration                       | 2.25    |
| \$AAS1               | !AA         | Reloads the default calibration parameters | 2.26    |
| ~AAD                 | !AAVV       | Reads the miscellaneous settings           | 2.27    |
| ~AADVV               | !AA         | Sets the miscellaneous settings            | 2.28    |
| ~AAEV                | !AA         | Enables/Disables calibration               | 2.29    |
| ~AAI                 | !AA         | Soft INIT                                  | 2.30    |
| ~AAO(Name)           | !AA         | Sets the module name                       | 2.31    |
| ~AATnn               | !AA         | Sets the soft INIT timeout                 | 2.32    |

| Host Watchdog Command Sets |             |  |         |
|----------------------------|-------------|--|---------|
| Command                    | Response    | Description                              | Section |
| ~**                        | No Response | Host is OK                               | 2.33    |
| ~AA0                       | !AASS       | Reads the host watchdog status           | 2.34    |
| ~AA1                       | !AA         | Resets the host watchdog status          | 2.35    |
| ~AA2                       | !AAETT      | Reads the host watchdog timeout settings | 2.36    |
| ~AA3ETT                    | !AA         | Sets the host watchdog timeout settings  | 2.37    |

## 2.1 %AANNTTCCFF

## **Description:**

Sets the configuration of an analog input module.

## Syntax:

## %AANNTTCCFF[CHKSUM](CR)

- % Delimiter character
- AA Address of the module to be configured in hexadecimal format (00 to FF)
- NN New address of the module in hexadecimal format (00 to FF)
- TT New type code, see Section 1.10 for details. Not used by the I-7015/15P and M-7015/15P. For the I-7015/15P and M-7015/15P, use the \$AA7CiRrr command to set the type of each channel, see Section 2.14 for details.
- CC New Baud Rate code, see Section 1.10 for details. For the I-7013/13D, I-7033/33D and M-7033/33D, the INIT\* terminal must be connected to GND terminal in order to change Baud Rates. In the I-7015/15P and M-7015/15P, this is achieved by moving the rear slide switch to the INIT position. See Section A.1 for details.

- FF Used to set the data format, checksum, and filter settings (Section 1.10). For the I-7013/13D, I-7033/33D and M-7033/33D, the INIT\* terminal must be connected to GND terminal in order to change the checksum setting. In the I-7015/15P and M-7015/15P, this is achieved by moving the rear slide switch to the INIT position. See Section A.1 for details.
- Note: The filter setting is not available in either the I-7015 or M-7015 firmware version B2.9 and before.

## **Response:**

## Valid Command: **!AA[CHKSUM](CR)**

## Invalid Command: ?AA[CHKSUM](CR)

- ! Delimiter for a valid command
- Delimiter for an invalid command. If the Baud
   Rate or checksum settings are changed without connecting the INIT\* terminal to ground or switching the rear slide switch to the INIT position, the module will return an invalid command.
- AA Address of the module in hexadecimal format (00 to FF)

#### I-7013, I-7013D, I-7033, I-7033D, I-7015, I-7015P M-7033, M-7033D, M-7015, M-7015P

## Examples:

Command: %0102200600 Response: !02 Changes the address of module 01 to 02. The module returns a valid response. Response: !02 Command: %0202200603 Sets the data format of module 02 to be 3 (Ohms). The module returns a valid response. Command: %0101200A00 Response: ?01 Changes the Baud Rate of module 01 to 115200bps. The module returns an invalid command, because it is not in INIT\* mode. Command: %0101200A00 Response: 101 Changes the Baud Rate of module 01 to 115200bps and the module is in INIT\* mode. The module returns a valid response.

## **Related Commands:**

Section 2.9 \$AA2, Section 2.30 ~AAI, Section 2.32 ~AATnn

## **Related Topics:**

Section 1.10 Configuration Tables, Section A.1 INIT\* pin Operation

#### I-7013, I-7013D, I-7033, I-7033D, I-7015, I-7015P M-7033, M-7033D, M-7015, M-7015P

### Notes:

- 1. Changes to the address, type code, data format and filter settings take effect immediately after a valid command is received. Changes to the Baud Rate and checksum settings take effect on the next power-on reset.
- 2. For the I-7015/15P and M-7015/15P, changing the Baud Rate and checksum settings can be achieved by software only and is performed by using the following commands:
  - I. Send a ~AATnn command. See Section 2.32 for details.
  - II. Send a ~AAI command. See Section 2.30 for details.
  - III. Send a %AANNTTCCFF command.

If the command is valid, the Baud Rate and checksum settings will be changed after the module responds with !AA.

## 2.2 #\*\*

## **Description:**

When the command is received, it will allow all analog input modules to read data from all input channels and will store the data for later retrieval.

## Syntax:

#### #\*\*[CHKSUM](CR)

# Delimiter character\*\* Synchronized sampling command

### **Response:**

There is no response with this command. To access the data, another command, \$AA4, must be sent, see Section 2.10 for details.

## Examples:

46

Command: #\*\* No response Sends the synchronized sampling command. Command: \$014 Response: >011+025.123 Sends a command to read the synchronized data. The status byte of the response is 1, which means that it is the first time the synchronized data has been read after the previous #\*\* command. Command: \$014 Response: >010+025.123 Sends a command to read the synchronized data. The status byte of the response is 0, which means that it is **NOT** the first time the synchronized data has been read after the previous #\*\* command.

#### I-7013, I-7013D, I-7015, I-7015P, M-7015, M-7015P

#### **Related Commands:**

Section 2.10 \$AA4

#### Notes:

This command is only applicable to the I-7015/15P, M-7015/15P, and I-7013/13D.

# 2.3 #AA

## **Description:**

Reads the data from all analog input channels.

## Syntax:

## #AA[CHKSUM](CR)

# Delimiter characterAA Address of the module to be read (00 to FF)

## **Response:**

| Valid Co  | mmand: >(Data)[CHKSUM](CR)                       |
|-----------|--|
| Invalid C | Command: <b>?AA[CHKSUM](CR)</b>                  |
| >         | Delimiter character for a valid command          |
| ?         | Delimiter character for an invalid command       |
| (Data)    | Data from all analog input channels, see Section |
|           | 1.10 for the data format. For both the           |
|           | I-7015/15P and M-7015/15P, data from disabled    |
|           | channels is filled with space characters.        |
| AA        | Address of the responding module (00 to FF)      |
|           |  |

#### I-7013, I-7013D, I-7033, I-7033D, I-7015, I-7015P M-7033, M-7033D, M-7015, M-7015P

## Examples:

Command: #01 Response: >+026.35 Reads module 01 and receives the data in engineering format.
Command: #02 Response: >4C53 Reads module 02 and receives the data in hexadecimal format.
Command: #03 Response: >-0000 Reads module 03 and the data is under range.
Command: #04 Response: >+025.12+054.12+150.12 Reads module 04, an I-7033, and receives the data from 3 channels.

## **Related Commands:**

Section 2.1 %AANNTTCCFF, Section 2.9 \$AA2

## **Related Topics:**

Section 1.10 Configuration Tables

## 2.4 #AAN

## **Description:**

Reads the analog input of channel N.

## Syntax:

#### #AAN[CHKSUM](CR)

| #  | Delimiter character                         |
|----|---|
| AA | Address of the module to be read (00 to FF) |
| Ν  | The channel to be read, zero based.         |

## **Response:**

| Valid Co  | mmand:   | >(Data)[CHKSUM](CR)                   |
|-----------|--|---------------------------------------|
| Invalid C | Command:   | ?AA[CHKSUM](CR)                       |
| >         | Delimiter c                                      | naracter for a valid command          |
| ?         | Delimiter c                                      | haracter for an invalid command. An   |
|           | invalid com                                      | mand is returned if the specified     |
|           | channel is i                                     | ncorrect.                             |
| (Data)    | Analog inp                                       | at data of the specified channel, see |
|           | Section 1.1                                      | ) for the data format. For the        |
|           | I-7015/15P                                       | and M-7015/15P, if the specified      |
|           | channel is disabled, then the data field will be |                                       |
|           | filled with s                                    | pace characters.                      |
| AA        | Address of                                       | the responding module (00 to FF)      |

Command: #032 Response: >+025.13 Reads data from channel 2 of module 03. Command: #029 Response: ?02 Reads data from channel 9 of module 02. An error is returned because channel 9 is invalid.

## **Related Commands:**

Section 2.1 %AANNTTCCFF, Section 2.9 \$AA2

## **Related Topics:**

Section 1.10 Configuration Tables

## Notes:

This command is only applicable to the I-7015/15P, M-7015/15P, I-7033/33D and M-7033/33D.

## 2.5 \$AA0

## **Description:**

Performs a span calibration.

## Syntax:

#### \$AA0[CHKSUM](CR)

| \$ | Delimiter character                               |
|----|---|
| AA | Address of the module to be calibrated (00 to FF) |
| 0  | Command for the span calibration                  |

## **Response:**

| Valid Co  | mmand:    | <b>!AA[CHKSUM](CR)</b>             |
|-----------|-----------|------------------------------------|
| Invalid C | command:  | ?AA[CHKSUM](CR)                    |
| !         | Delimiter | character for a valid command      |
| ?         | Delimiter | character for an invalid command   |
| AA        | Address o | f the responding module (00 to FF) |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

## Examples:

Command: \$010 Response: !01 Performs a span calibration on module 01 and returns a valid response. Command: \$020 Response: ?02 Performs a span calibration on module 02. An invalid command is returned because the "enable calibration" command was not sent in advance.

#### **Related Commands:**

Section 2.6 \$AA1, Section 2.29 ~AAEV

## **Related Topics:**

Section 1.9 Calibration

## Notes:

- 1. This command is only applicable to the I-7013/13D, I-7033/33D and M-7033/33D.
- 2. The "enable calibration" command, ~AAEV and the "zero calibration" command, \$AA1, must be sent before this command is used, see Sections 1.9 and 2.6 for details.

# 2.6 \$AA1

## **Description:**

Performs a zero calibration.

## Syntax:

## \$AA1[CHKSUM](CR)

| \$ | Delimiter character                               |
|----|---|
| AA | Address of the module to be calibrated (00 to FF) |
| 1  | Command for the zero calibration                  |

## **Response:**

| Valid C | Command:    | <b>!AA[CHKSUM](CR)</b>           |
|---------|-------------|----------------------------------|
| Invalid | Command:    | <b>?AA[CHKSUM](CR)</b>           |
| !       | Delimiter c | haracter for a valid command     |
| ?       | Delimiter c | haracter for an invalid command  |
| AA      | Address of  | the responding module (00 to FF) |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

## Examples:

Command: \$011 Response: !01 Performs a zero calibration on module 01 and returns a valid response. Command: \$021 Response: ?02 Performs a zero calibration on module 02. An invalid command is returned because the "enable calibration" command was not sent in advance.

#### **Related Commands:**

Section 2.5 \$AA0, Section 2.29 ~AAEV

## **Related Topics:**

Section 1.9 Calibration

## Notes:

- 1. This command is only applicable to the I-7013/13D, I-7033/33D and M-7033/33D.
- 2. The "enable calibration" command, ~AAEV, must be sent before this command is used, see Section 1.9 for details.
- 3. This command must be sent before the "span calibration" command, \$AA0, is used.

## 2.7 \$AA0Ci

### **Description:**

Performs a zero calibration on the specified channel.

## Syntax:

## \$AA0Ci[CHKSUM](CR)

| \$ | Delimiter character                               |
|----|---|
| AA | Address of the module to be calibrated (00 to FF) |
| 0  | Command for the zero calibration                  |
| Ci | Specifies the channel to be calibrated            |

## **Response:**

#### Valid Command: **!AA[CHKSUM](CR)** Invalid Command: **?AA[CHKSUM](CR)**

| ! | Delimiter character for a valid command |
|---|---|
|---|---|

? Delimiter character for an invalid command. An invalid command is returned if the specified channel is incorrect.

AA Address of the responding module (00 to FF)

Command: \$010C0 Response: !01

Performs a zero calibration on channel 0 of module
01 and returns a valid response.

Command: \$020C5 Response: !02

Performs a zero calibration on channel 5 of module
02 and returns a valid response.

Command: \$030C1 Response: ?03

Performs a zero calibration on channel 1 of module
03. An invalid command is returned because the "enable calibration" command was not sent in advance.

## **Related Commands:**

Section 2.8 \$AA1Ci, Section 2.29 ~AAEV

## **Related Topics:**

Section 1.9 Calibration

## Notes:

- 1 This command is only applicable to the I-7015/15P and M-7015/15P.
- 2 The "enable calibration" command, ~AAEV, must be sent before this command is used, see Section 1.9 for details.
- 3 This command must be sent before the "span calibration" command, \$AA1Ci, is used.
- 4 This command takes about 8 seconds for firmware version A2.9 and before.

## 2.8 \$AA1Ci

#### **Description:**

Performs a span calibration on the specified channel.

## Syntax:

### \$AA1Ci[CHKSUM](CR)

| \$ | Delimiter character                               |
|----|---|
| AA | Address of the module to be calibrated (00 to FF) |
| 1  | Command for the span calibration                  |
| Ci | Specifies the channel to be calibrated            |

### **Response:**

### Valid Command: **!AA[CHKSUM](CR)** Invalid Command: **?AA[CHKSUM](CR)**

| ! Delimiter character for a valid comma | ind |
|---|-----|
|---|-----|

? Delimiter character for an invalid command. An invalid command is returned if the specified channel is incorrect.

AA Address of the responding module (00 to FF)

Command: \$011C0 Receive: !01

Performs a span calibration on channel 0 of module
01 and returns a valid response.

Command: \$021C5 Receive: !02

Performs a span calibration on channel 5 of module
02 and returns a valid response.

Command: \$031C1 Receive: ?03

Performs a span calibration on channel 1 of module
03. An invalid command is returned because the "enable calibration" command was not sent in advance.

## **Related Commands:**

Section 2.7 \$AA0Ci, Section 2.29 ~AAEV

## **Related Topics:**

Section 1.9 Calibration

## Notes:

- 1. The command is only applicable to the I-7015/15P and M-7015/15P.
- 2. The "enable calibration" command, ~AAEV, and the "zero calibration" command, \$AA0Ci, must be sent before this command is used, see Sections 1.9 and 2.7 for details.
- 3. This command takes about 8 seconds for firmware version A2.9 and before.

## 2.9 \$AA2

## **Description:**

Reads the module configuration.

## Syntax:

## \$AA2[CHKSUM](CR)

| \$ | Delimiter character                         |
|----|---|
| AA | Address of the module to be read (00 to FF) |
| 2  | Command to read the module configuration    |

## **Response:**

| Valid Co  | mmand: <b>!AATTCCFF[CHKSUM](CR)</b>            |
|-----------|--|
| Invalid C | ommand: <b>?AA[CHKSUM](CR)</b>                 |
| !         | Delimiter character for a valid command        |
| ?         | Delimiter character for an invalid command     |
| AA        | Address of the responding module (00 to FF)    |
| TT        | Type code of the module, see Section 1.10 for  |
|           | details.                                       |
| CC        | Baud Rate code of the module, see Section 1.10 |
|           | for details.                                   |
| FF        | Data format, checksum settings and filter      |
|           | settings of the module, see Section 1.10 for   |
|           | details.                                       |
|           |  |

Command: \$012Response: !01200600Reads the configuration of module 01.Command: \$022Reads the configuration of module 02.

## **Related Commands:**

Section 2.1 %AANNTTCCFF

## **Related Topics:**

Section 1.10 Configuration Tables

## 2.10 \$AA4

## **Description:**

Reads the synchronized data that was retrieved by the last #\*\* command.

## Syntax:

#### \$AA4[CHKSUM](CR)

| \$ | Delimiter character                         |
|----|---|
| AA | Address of the module to be read (00 to FF) |
| 4  | Command to read the synchronized data       |

## **Response:**

| Valid Command:   | >AAS(Data)[CHKSUM](CR) |
|------------------|------------------------|
| Invalid Command: | ?AA[CHKSUM](CR)        |

| !   | Delimiter character for a valid command     |  |
|---|---|--|
| ?   | Delimiter character for an invalid command  |  |
| AA  | Address of the responding module (00 to FF) |  |
| S   | Status of the synchronized data             |  |
|   | 1: first read                               |  |
|   | 0: not the first read                       |  |
| (Data) Synchronized data. See Section 1.10 fo |   |  |
|   | data format. For the I-7015/15P and         |  |
|   | M-7015/15P modules, data from disabled      |  |
|   | channels is filled with space characters.   |  |

Command: \$014 Response: ?01 Reads the synchronized data for module 01. An invalid command is returned because the  $\#^{**}$ command has not been issued in advance. Command: #\*\* No response Sends the synchronized sampling command. Command: \$014 Response: >011+025.56 Reads the synchronized data for module 01. The module returns the synchronized data and sets the status byte to 1 to indicate that this is the first time the synchronized data has been read. Command: \$014 Response: >010+25.56 Reads the synchronized data for module 01. The module returns the synchronized data and sets the status byte to 0 to indicate that the synchronized data has been read

#### **Related Commands:**

Section 2.2 #\*\*

#### Notes:

This command is only applicable to the I-7015/15P, M-7015/15P and I-7013/13D.

# 2.11 \$AA5

## **Description:**

Reads the reset status of a module.

## Syntax:

## \$AA5[CHKSUM](CR)

| \$ | Delimiter character                         |
|----|---|
| AA | Address of the module to be read (00 to FF) |
| 5  | Command to read the module reset status     |

## **Response:**

| Valid Command: | <b>!AAS[CHKSUM](CR)</b>                 |
|----------------|---|
| Invalid Comman | d: <b>?AA[CHKSUM](CR)</b>               |
| ! Delimit      | ter character for a valid command       |
| ? Delimit      | ter character for an invalid command    |
| AA Addres      | s of the responding module (00 to FF)   |
| S Reset s      | tatus of the module                     |
| 1: This        | is the first time the command has been  |
| sent           | since the module was powered on.        |
| 0: This        | is not the first time the command has   |
| been           | sent since the module was powered on,   |
| whic           | h denotes that there has been no module |
| reset          | since the last \$AA5 command was sent.  |

#### I-7013, I-7013D, I-7033, I-7033D, I-7015, I-7015P M-7033, M-7033D, M-7015, M-7015P

## Examples:

Command: \$015 Response: !011 Reads the reset status of module 01. The response shows that it is the first time the \$AA5 command has been sent since the module was powered-on. Command: \$015 Response: !010 Reads the reset status of module 01. The response shows that there has been no module reset since the last \$AA5 command was sent.

## 2.12 \$AA5VV

## **Description:**

Specifies the channels to be enabled.

## Syntax:

#### \$AA5VV[CHKSUM](CR)

- \$ Delimiter character
- AA Address of the module to be set (00 to FF)
- 5 Command to set the channels to enabled
- VV A two-digit hexadecimal value, where bit 0 corresponds to channel 0, bit 1 corresponds to channel 1, etc. When the bit is 1, it denotes that the channel is enabled, and 0 denotes that the channel is disabled.

## **Response:**

| Valid Command:   | !AA[CHKSUM](CR) |
|------------------|-----------------|
| Invalid Command: | ?AA[CHKSUM](CR) |

- Delimiter character for a valid command
   Delimiter character for an invalid command. An invalid command is returned if an attempt is made to enable a channel that is not present.
- AA Address of the responding module (00 to FF)

Command: \$0153A Response: !01

Enables channels 1, 3, 4, and 5 and disables all other channels of module 01. The module returns a valid response.

Command: \$016 Response: !013A

Reads the channel status of module 01. The module returns a response of 3A, which denotes that channels

1, 3, 4, and 5 are enabled and all other channels are disabled.

## **Related Commands:**

Section 2.13 \$AA6

#### Notes:

This command is only applicable to the I-7015/15P and M-7015/15P. It is recommended that only the channels to be used are enabled.

## 2.13 \$AA6

## **Description:**

Reads the enabled/disabled status of each channel.

## Syntax:

## \$AA6[CHKSUM](CR)

| \$ | Delimiter character                         |
|----|---|
| AA | Address of the module to be read (00 to FF) |
| 6  | Command to read the channel status          |

### **Response:**

| nmand: !AAVV[CHKSUM](CR)                           |  |  |
|--|--|--|
| Invalid Command: <b>?AA[CHKSUM](CR)</b>            |  |  |
| Delimiter character for a valid command            |  |  |
| Delimiter character for an invalid command         |  |  |
| Address of the responding module (00 to FF)        |  |  |
| A two-digit hexadecimal value, where bit 0         |  |  |
| corresponds to channel 0, bit 1 corresponds to     |  |  |
| channel 1, etc. When the bit is 1, it denotes that |  |  |
| the channel is enabled, and 0 denotes that the     |  |  |
| channel is disabled.                               |  |  |
|  |  |  |

Command: \$0153A Response: !01
Enables channels 1, 3, 4, and 5 and disables all other channels of module 01. The module returns a valid response.
Command: \$016 Response: !013A
Reads the channel status of module 01 and returns a

Reads the channel status of module 01 and returns a response of 3A, which denotes that channels 1, 3, 4, and 5 are enabled and all other channels are disabled.

### **Related Commands:**

Section 2.12 \$AA5VV

### Notes:

This command is only applicable to the I-7015/15P and M-7015/15P.

## 2.14 \$AA7CiRrr

## **Description:**

Sets the type code of a channel.

## Syntax:

#### \$AA7CiRrr[CHKSUM](CR)

| •   |  |
|-----|--|
| \$  | Delimiter character                              |
| AA  | Address of the module to be set (00 to FF)       |
| 7   | Command to set the channel range code            |
| Ci  | i specifies the input channel to be set (0-5)    |
| Rrr | rr represents the type code of the channel to be |
|     | set. Refer to the Temperature Sensor Type        |
|     | Setting table in Section 1.10.                   |
|     |  |

## **Response:**

| Valid con | nmand: <b>!AA [CHKSUM](CR)</b>                |
|-----------|---|
| Invalid c | ommand: <b>?AA[CHKSUM](CR)</b>                |
| !         | Delimiter character for a valid command       |
| ?         | Delimiter character for an invalid command or |
|           | invalid type code                             |
| AA        | Address of the responding module (00 to FF)   |

Command: 017C0R20Response: 01Sets the type code for channel 0 of module 01 to be $20 (PT100, -100 \sim +100^{\circ}C)$  and the module returns avalid response.Command: 027C5R28Response: 02Sets the type code for channel 5 of module 02 to be $28 (Ni120, -80 \sim +100^{\circ}C)$  and the module returns a

valid response.

Command: \$037C1R30 Response: ?03 Sets the type code for channel 1 of module 03 to be 30. The module returns an invalid response because the type code is invalid.

## **Related Commands:**

Section 2.15 \$AA8Ci

## **Related Topics:**

Section 1.10 Configuration Tables

#### Notes:

This command is only applicable to the I-7015/15P and M-7015/15P.

## 2.15 \$AA8Ci

## **Description:**

Reads the type code information of a channel.

## Syntax:

## \$AA8Ci[CHKSUM](CR)

| \$ | Delimiter character                            |
|----|--|
| AA | Address of the module to be read (00 to FF)    |
| 8  | Command to read the type code of a channel     |
| Ci | Specifies which channel to access for the type |
|    | code information ( $i = 0 \sim 5$ )            |

## **Response:**

#### Valid command: **!AACiRrr[CHKSUM](CR)** Invalid command: **?AA[CHKSUM](CR)**

- ! Delimiter character for a valid command
- ? Delimiter character for an invalid command or invalid channel
- AA Address of the responding module (00 to FF)
- Ci Specifies which input channel the type code information relates to.
- Rrr Represents the type code of the specified input channel. Refer to the Temperature Sensor Type Setting table in Section 1.10.

### Examples:

Command: 018C0Response: 01C0R20Reads the input range of channel 0 of module 01 andreturns 20 (PT100,  $-100 \sim +100^{\circ}$ C).

### **Related Commands:**

Section 2.14 \$AA7CiRrr

### **Related Topics:**

Section 1.10 Configuration Tables

### Notes:

This command is only applicable to the I-7015/15P and M-7015/15P.

# 2.16 \$AA8

### **Description:**

Reads the LED configuration information of a module.

### Syntax:

### \$AA8[CHKSUM](CR)

| \$ | Delimiter character                         |
|----|---|
| AA | Address of the module to be read (00 to FF) |
| 8  | Command to read the LED configuration       |

### **Response:**

| Valid Command: <b>!AAV[CHKSUM](CR)</b>         |           |
|--|-----------|
| Invalid Command: <b>?AA[CHKSUM](CR)</b>        |           |
| ! Delimiter character for a valid command      | t         |
| ? Delimiter character for an invalid comm      | land      |
| AA Address of the responding module (00 to     | o FF)     |
| V LED configuration                            |           |
| For the I-7013D                                |           |
| 1: the temperature is shown on the LED         | display   |
| in the data format specified by the            |           |
| %AANNTTCCFF command.                           |           |
| 2: the LED display is controlled by the l      | 10st.     |
| For the I-7033D and M-7033D                    |           |
| $0\sim2$ : specifies the channel for which the |           |
| temperature is shown on the LED displa         | iy in the |
| data format specified by the %AANNT            | ГССFF     |
| command.                                       |           |
| 3: the LED display is controlled by the l      | 10st.     |
|  |           |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

### **Examples:**

Command: \$018 Response: !011 Reads the LED configuration of module 01. Command: \$028 Response: !012 Reads the LED configuration of module 02.

### **Related Commands:**

Section 2.17 \$AA8V, Section 2.18 \$AA9(Data)

### Notes:

This command is only applicable to the I-7013D, I-7033D and M-7033D.

# 2.17 \$AA8V

### **Description:**

Sets the LED configuration of a module.

# Syntax:

### \$AA8V[CHKSUM](CR)

| · · L |  |
|-------|--|
| \$    | Delimiter character                              |
| AA    | Address of the module to be set (00 to FF)       |
| 8     | Command to set the LED configuration             |
| V     | LED configuration                                |
|       | For the I-7013D                                  |
|       | 1: the temperature is shown on the LED display   |
|       | in the data format specified by the              |
|       | %AANNTTCCFF command.                             |
|       | 2: the LED display is controlled by the host.    |
|       | For the I-7033D and M-7033D                      |
|       | $0 \sim 2$ : specifies the channel for which the |
|       | temperature is shown on the LED display in the   |
|       | data format specified by the %AANNTTCCFF         |
|       | command.   |
|       | 3: the LED display is controlled by the host.    |

3: the LED display is controlled by the host.

### **Response:**

| Valid Co  | mmand: !AA           | [CHKSUM](CR)             |
|-----------|----------------------|--------------------------|
| Invalid C | Command: <b>?A</b> A | [CHKSUM](CR)             |
| !         | Delimiter character  | for a valid command      |
| ?         | Delimiter character  | for an invalid command   |
| AA        | Address of the resp  | onding module (00 to FF) |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

### **Examples:**

Command: \$0180 Response: !01 Sets the LED configuration of module 01 to 0, and returns a valid response. Command: \$0281 Response: !02 Sets the LED configuration of module 02 to 1, and returns a valid response.

### **Related Commands:**

Section 2.16 \$AA8, Section 2.18 \$AA9(Data)

### Notes:

This command is only applicable to the I-7013D, I-7033D and M-7033D.

# 2.18 \$AA9(Data)

### **Description:**

Sends the data to be shown on the LED display of a module.

# Syntax:

### \$AA9(Data)[CHKSUM](CR)

- \$ Delimiter character
- AA Address of the module (00 to FF)
- 9 Command to send the LED data
- (Data) Data to be shown on the LED display, consisting of a leading sign character (+, -), 5 decimal digits and a dot character. The first digit should be 0 or 1. There must be a digit preceding the dot character. The module should be in host controlled mode before sending this command. See Section 2.17 for details.

### **Response:**

### Valid command: **!AA[CHKSUM](CR)**

### Invalid command: ?AA[CHKSUM](CR)

- ! Delimiter character for a valid command
- ? Delimiter character for an invalid command, or if the module is not in host controlled mode.See Section 2.17 for details.
- AA Address of the responding module (00 to FF)

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

### **Examples:**

Command: \$019+123.45 Response: !01 The host sends the data "+123.45" to module 01. The module returns a valid response and shows the data on the LED display. Command: \$029+12.345 Response: 202

Command: \$029+12.345 Response: ?02 The host sends the data "+12.345" to module 02. The module returns an invalid command because it is not in host controlled mode and the LED data cannot be received from the host. See Section 2.17 for details.

### **Related Commands:**

Section 2.16 \$AA8, Section 2.17 \$AA8V

### Notes:

This command is only applicable to the I-7013D, I-7033D and M-7033D.

# 2.19 \$AAB

### **Description:**

Diagnoses the analog inputs for over-range, under-range, and wire opening conditions.

## Syntax:

### \$AAB[CHKSUM](CR)

| \$ | Delimiter character                              |
|----|--|
| AA | Address of the module to be diagnosed (00 to FF) |
| В  | Command to diagnose the analog inputs            |

## Response:

### Valid command: **!AANN[CHKSUM](CR)** Invalid command: **?AA[CHKSUM](CR)**

! Delimiter character for a valid command

? Delimiter character for an invalid command

AA Address of the responding module (00 to FF)
NN Represents the diagnostic results of all the analog input channels (00 to FF), where bit 0 corresponds to channel 0, bit 1 corresponds to channel 1, etc. When the bit is 1 it denotes that the channel is enabled and it is in either overrange, under-range or wire opening condition. If the bit is 0 it denotes that the channel is disabled or normal.

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

### Examples:

Command: \$01B Response: !0101 Diagnoses the analog inputs of module 01. The module returns a valid response denoting that channel 0 is in either over-range, under-range or wire opening condition.

### Notes:

This command is only applicable to the I-7015/15P and M-7015/15P.

# 2.20 \$AAF

## **Description:**

Reads the firmware version of a module.

# Syntax:

### \$AAF[CHKSUM](CR)

| \$ | Delimiter character                         |
|----|---|
| AA | Address of the module to be read (00 to FF) |
| F  | Command to read the firmware version        |

## **Response:**

| Valid cor  | nmand: <b>!AA(Data)[CHKSUM](CR)</b>         |
|------------|---|
| Invalid co | ommand: <b>?AA[CHKSUM](CR</b> )             |
| !          | Delimiter character for a valid command     |
| ?          | Delimiter character for an invalid command  |
| AA         | Address of the responding module (00 to FF) |
| (Data)     | Firmware version string of the module       |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

# Examples:

| Command: \$01F           | Response: !01A2.0            |
|--------------------------|------------------------------|
| Reads the firmware vers  | sion of module 01, and shows |
| that it is version A2.0. |                              |
| Command: \$02F           | Response: !02B1.1            |
| Reads the firmware vers  | sion of module 02, and shows |
| that it is version B1.1. |                              |
|                          |                              |

# 2.21 \$AAI

# **Description:**

Reads the INIT terminal status of a module.

## Syntax:

| \$AAI[CHKSUM](CR) |   |  |
|-------------------|---|--|
| \$                | Delimiter character                         |  |
| AA                | Address of the module to be read (00 to FF) |  |
| Ι                 | Command to read the module INIT status      |  |

## **Response:**

| Valid con | nmand: <b>!AAS[CHKSUM](CR)</b>               |
|-----------|--|
| Invalid c | ommand: ?AA[CHKSUM](CR)                      |
| !         | Delimiter character for a valid command      |
| ?         | Delimiter character for an invalid command   |
| AA        | Address of the responding module (00 to FF)  |
| S         | INIT terminal status of the module           |
|           | 0: The INIT terminal is connected to the GND |
|           | terminal                                     |
|           | 1: The INIT terminal is not connected to the |
|           | GND terminal                                 |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

### Examples:

Command: \$01I Response: !010 Reads the INIT status of module 01. The response shows that the INIT terminal is connected to the GND terminal.

# 2.22 \$AAM

# **Description:**

Reads the name of a module.

## Syntax:

| \$AAM[CHKSUM](CR) |   |  |
|-------------------|---|--|
| \$                | Delimiter character                         |  |
| AA                | Address of the module to be read (00 to FF) |  |
| Μ                 | Command to read the module name             |  |

## **Response:**

| Valid cor  | nmand: <b>!AA(Data)[CHKSUM](CR)</b>         |
|------------|---|
| Invalid co | ommand: <b>?AA[CHKSUM](CR)</b>              |
| !          | Delimiter character for a valid command     |
| ?          | Delimiter character for an invalid command  |
| AA         | Address of the responding module (00 to FF) |
| (Name)     | Name string of the module                   |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

# Examples:

Command: \$01M Response: !017013 Reads the module name of module 01 and returns the name "7013".

# **Related Commands:**

Section 2.31 ~AAO(Name)

# 2.23 \$AAP

### **Description:**

Reads the communication protocol information.

### Syntax:

| \$AAP[CHKSUM](CR) |   |  |  |  |  |
|-------------------|---|--|--|--|--|
| \$                | Delimiter character                         |  |  |  |  |
| AA                | Address of the module to be read (00 to FF) |  |  |  |  |
| Р                 | Command to read the communication protocol  |  |  |  |  |

### **Response:**

| Valid Resp  | nse: !AASC[CHKSUM](CR)                       |
|-------------|--|
| Invalid Res | oonse: ?AA[CHKSUM](CR)                       |
| ! [         | elimiter character for a valid response      |
| ? [         | elimiter character for an invalid response   |
| AA A        | ddress of the responding module (00 to FF)   |
| S T         | e protocols supported by the module          |
| 0           | only DCON protocol is supported              |
| 1           | both the DCON and Modbus RTU protocols       |
|             | are supported                                |
| C C         | arrent protocol saved in EEPROM that will be |
| u           | ed at the next power on reset                |
| 0           | the protocol set in EEPROM is DCON           |
| 1           | the protocol set in EEPROM is Modbus RTU     |
|             |  |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

## Examples:

Command: \$01P Response: !0110 Reads the communication protocol of module 01 and returns a response of 10 meaning that it supports both the DCON and Modbus RTU protocols and the protocol that will be used at the next power on reset is DCON.

## **Related Commands:**

Section 2.24 \$AAPN

### Note:

This command is only applicable to the M-7015, M-7015P, M-7033 and M-7033D.

# 2.24 \$AAPN

### **Description:**

Sets the communication protocol.

### Syntax:

| \$AAPN[ | CHKSUM](CR)                                      |
|---------|--|
| \$      | Delimiter character                              |
| AA      | Address of the module to be read (00 to FF)      |
| Р       | Command to set the communication protocol        |
| Ν       | 0: DCON protocol                                 |
|         | 1: Modbus RTU protocol                           |
|         | Before using this command, the rear slide switch |
|         | must be in the INIT position for M-7015/15P, or  |
|         | the INIT * terminal should be connected to the   |
|         | GND terminal for M-7033/33D, see Section A.1     |
|         | for details. The new protocol is saved in the    |
|         | EEPROM and will be effective after the next      |
|         | power on reset.                                  |
|         |  |

### **Response:**

| Valid Response:   | !AA[CHKSUM](CR)                      |
|-------------------|--------------------------------------|
| Invalid Response: | ?AA[CHKSUM](CR)                      |
| ! Delimite        | er character for a valid response    |
| ? Delimite        | er character for an invalid response |
| AA Address        | of the responding module (00 to FF)  |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

## Examples:

Command: \$01P1 Response: ?01 Sets the communication protocol of module 01 to Modbus RTU and returns an invalid response because the module is not in INIT mode. Command: \$01P1 Response: !01 Sets the communication protocol of module 01 to Modbus RTU and returns a valid response.

### **Related Commands:**

Section 2.23 \$AAP

### **Related Topics:**

Section A.1 INIT Mode

### Note:

This command is only applicable to the M-7015, M-7015P, M-7033 and M-7033D.

# 2.25 \$AAS0

### **Description:**

Performs an internal calibration on a module.

## Syntax:

### \$AAS0[CHKSUM](CR)

- \$ Delimiter character
- AA Address of the module to be calibrated (00 to FF)
- S0 Command to perform the internal calibration

### Response:

| Valid co | ommand:    | !AA[CHKSUM](CR)                     |
|----------|------------|-------------------------------------|
| Invalid  | command:   | ?AA[CHKSUM](CR)                     |
| !        | Delimiter  | character for a valid command       |
| ?        | Delimiter  | character for an invalid command    |
| AA       | Address of | of the responding module (00 to FF) |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

# Examples:

Command: \$01S0 Response: !01 Sends the command to perform an internal calibration on module 01 and returns a valid response.

### **Related Commands:**

Section 2.26 \$AAS1

### Notes:

This command is only applicable to the I-7015, I-7015P, M-7015 and M-7015P.

# 2.26 \$AAS1

### **Description:**

Reloads the factory default calibration parameters, including the internal calibration parameters.

# Syntax:

### \$AAS1[CHKSUM](CR)

| \$ Delimiter character |
|------------------------|
|------------------------|

- AA Address of the module to have the default parameters reloaded (00 to FF)
- S1 Command to reload the factory default calibration parameters

### Response:

| Valid command:   | !AA[CHKSUM](CR)             |
|------------------|-----------------------------|
| Invalid command: | ?AA[CHKSUM](CR)             |
| 1 Delimiter      | r abaratar for a valid agen |

| ! | Delimiter character for a valid command |
|---|---|
| 0 |   |

? Delimiter character for an invalid command

AA Address of the responding module (00 to FF)

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

# Examples:

Command: \$01S1 Response: !01 Sends the command to reload the factory default calibration parameters for module 01 and returns a valid response.

#### I-7015, I-7015P, M-7015, M-7015P

### **Related Commands:**

Section 2.25 \$AAS0

### **Related Topics:**

Section 1.9 Calibration

### Notes:

This command is only applicable to the I-7015, I-7015P, M-7015 and M-7015P.

# 2.27 ~AAD

## **Description:**

Reads the miscellaneous settings of a module.

# Syntax:

## ~AAD[CHKSUM](CR)

- Delimiter characterAA Address of the module to be r
- AA Address of the module to be read (00 to FF)
- D Command to read the miscellaneous settings

## Response:

- Valid Command: **!AAT[CHKSUM](CR)** Invalid Command: **?AA[CHKSUM](CR)**
- ! Delimiter character for a valid command
- ? Delimiter character for an invalid command
- AA Address of the responding module (00 to FF)
- VV Two hexadecimal digits that represent the miscellaneous settings as follows:

| 7        | 6 | 5 | 4 | 3  | 2  | 1    | 0     |
|----------|---|---|---|----|----|------|-------|
| Reserved |   |   |   | SU | SR | Rese | erved |

| Key | Description                                     |             |         |         |  |  |  |  |
|-----|---|-------------|---------|---------|--|--|--|--|
| SR  | Setting for over range/under range reading (for |             |         |         |  |  |  |  |
|     | 7013/33)  |             |         |         |  |  |  |  |
|     | Setting Data Format Over Range Under Range      |             |         |         |  |  |  |  |
|     |   | Engineering | +9999   | -0000   |  |  |  |  |
|     | 0   | % of FSR    | +9999   | -0000   |  |  |  |  |
|     |   | Hex         | 7FFF    | 8000    |  |  |  |  |
|     |   | Engineering | +9999.9 | -9999.9 |  |  |  |  |
|     | 1   | % of FSR    | +999.99 | -999.99 |  |  |  |  |
|     |   | Hex         | 7FFF    | 8000    |  |  |  |  |

#### I-7013, I-7013D, I-7033, I-7033D, I-7015, I-7015P M-7033, M-7033D, M-7015, M-7015P

| SU | Setting for under range reading (for 7015/15P) |                                     |  |  |  |  |
|----|--|-------------------------------------|--|--|--|--|
|    | 0  | The reading of under range is as    |  |  |  |  |
|    |  | usual                               |  |  |  |  |
|    | 1  | Force the reading of under range to |  |  |  |  |
|    |  | be the same as over range           |  |  |  |  |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

## Examples:

Command: ~01D Response: !0104 Reads the miscellaneous settings of module 01 and returns 04.

## **Related Commands:**

Section 2.28 ~AADVV

### Notes:

This command is only applicable to the I-7013 and I-7033/33D firmware B1.3 and later, I-7015 and M-7015 firmware B2.1 and later, I-7015P, M-7015P and M-7033/33D.

# 2.28 ~AADVV

## **Description:**

Sets the miscellaneous settings of a module.

# Syntax:

# ~AADVV[CHKSUM](CR)

- ~ Delimiter character
- AA Address of the module to be set (00 to FF)
- D Command to set the miscellaneous settings
- VV Two hexadecimal digits that represent the miscellaneous settings as follows:

| 7        | 6 | 5 | 4 | 3  | 2  | 1    | 0     |
|----------|---|---|---|----|----|------|-------|
| Reserved |   |   |   | SU | SR | Rese | erved |

| Key | Description                                     | on            |             |              |
|-----|---|---------------|-------------|--------------|
| SR  | Setting for over range/under range reading (for |               |             |              |
|     | 7013/33)  | _             | -           |              |
|     | Setting   | Data Format   | Over Range  | Under Range  |
|     |   | Engineering   | +9999       | -0000        |
|     | 0   | % of FSR      | +9999       | -0000        |
|     |   | Hex           | 7FFF        | 8000         |
|     |   | Engineering   | +9999.9     | -9999.9      |
|     | 1   | % of FSR      | +999.99     | -999.99      |
|     |   | Hex           | 7FFF        | 8000         |
| SU  | Setting for under range reading (for 7015/15P)  |               |             |              |
|     | 0   | The reading   | of under ra | nge is as    |
|     |   | usual         |             |              |
|     | 1   | Force the rea | ading of un | der range to |
|     |   | be the same   | as over ran | ge           |

#### I-7013, I-7013D, I-7033, I-7033D, I-7015, I-7015P M-7033, M-7033D, M-7015, M-7015P

## **Response:**

| Valid Co  | mmand:       | <b>!AA[CHKSUM](CR)</b>             |
|-----------|--------------|------------------------------------|
| Invalid C | Command:     | <b>?AA[CHKSUM](CR)</b>             |
| !         | Delimiter of | character for a valid command      |
| ?         | Delimiter of | character for an invalid command   |
| AA        | Address of   | f the responding module (00 to FF) |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

## Examples:

Command: ~01D04 Response: !01 Sets the miscellaneous settings of module 01 to 04, and returns a valid response.

# **Related Commands:**

Section 2.27 ~AAD

## Notes:

This command is only applicable to the I-7013 and I-7033/33D firmware B1.3 and later, I-7015 and M-7015 firmware B2.1 and later, I-7015P, M-7015P and M-7033/33D.

# 2.29 ~AAEV

## **Description:**

Enables/Disables the module calibration.

# Syntax:

# ~AAEV[CHKSUM](CR)

- ~ Delimiter character
- AA Address of the module to be enabled/disabled (00 to FF)
- E Command to enable/disable calibration
- V 1: enable calibration
  - 0: disable calibration

# Response:

### Valid Command: **!AA[CHKSUM](CR)** Invalid Command: **?AA[CHKSUM](CR)**

! Delimiter character for a valid command
? Delimiter character for an invalid command
AA Address of the responding module (00 to FF)

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

#### I-7013, I-7013D, I-7033, I-7033D, I-7015, I-7015P M-7033, M-7033D, M-7015, M-7015P

## Examples:

Command: \$010 Response: ?01
Sends the command to perform a span calibration on module 01. An invalid response is returned because the "enable calibration" command has not yet been sent.
Command: ~01E1 Response: !01
Enables calibration on module 01 and returns a valid response.

Command: \$010 Response: !01 Sends the command to perform a span calibration on module 01 and returns a valid response.

### **Related Commands:**

Section 2.5 \$AA0, Section 2.6 \$AA1, Section 2.7 \$AA0Ci, Section 2.8 \$AA1Ci

## **Related Topics:**

Section 1.9 Calibration

# 2.30 ~AAI (Soft INIT command)

### **Description:**

The Soft INIT command is used to enable modification of the Baud Rate and checksum settings using software only.

# Syntax:

### ~AAI[CHKSUM](CR)

| $\sim$ | Delimiter character                        |
|--------|--|
| AA     | Address of the module to be set (00 to FF) |
| Ι      | Command to set the Soft INIT               |

## **Response:**

| Valid cor  | nmand: <b>!AA[CHKSUM](CR)</b>                  |
|------------|--|
| Invalid co | ommand: <b>?AA[CHKSUM](CR)</b>                 |
| !          | Delimiter character for a valid command        |
| ?          | Delimiter character for an invalid command     |
| AA         | Address of the responding module (00 to $FF$ ) |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

# Examples:

Command: ~01I Response: !01 Sets the soft INIT of module 01 and returns a valid response.

# **Related Commands:**

Section 2.1 %AANNTTCCFF, Section 2.32 ~AATnn

### **Related Topics:**

Section A.1 INIT\* Pin Operation

### Notes:

- 1. This command is only applicable to the I-7015, I-7015P, M-7015 and M-7015P.
- 2. The ~AATnn command should be sent prior to sending this command, see Section 2.32 for details.

# 2.31 ~AAO(Name)

### **Description:**

Sets the name of a module.

### Syntax:

### ~AAO(Name)[CHKSUM](CR)

- Delimiter character
- AA Address of the module to be set (00 to FF)
- O Command to set the module name
- (Name) New name of the module (max. 6 characters).

## **Response:**

| Valid co  | mmand:                         | !AA[CHKSUM](CR)                    |
|-----------|--------------------------------|------------------------------------|
| Invalid c | ommand:                        | ?AA[CHKSUM](CR)                    |
| !         | Delimiter                      | character for a valid command      |
| ?         | Delimiter                      | r character for an invalid command |
|           | <b>A</b> . <b>1</b> . <b>1</b> | $-f_{4}$                           |

AA Address of the responding module (00 to FF)

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

#### I-7013, I-7013D, I-7033, I-7033D, I-7015, I-7015P M-7033, M-7033D, M-7015, M-7015P

### Examples:

Command: ~01O7013N Response: !01 Sets the name of module 01 to be "7013N" and returns a valid response.

Command: \$01M Response: !017013N Reads the name of module 01 and returns the name "7013N".

## **Related Commands:**

Section 2.22 \$AAM

103

# 2.32 ~AATnn

### **Description:**

Sets the soft INIT timeout value.

### Syntax:

104

### ~AATnn[CHKSUM](CR)

- Delimiter character
   AA Address of the module to be set (00 to FF)
   T Command to set the soft INIT timeout
   nn Two hexadecimal digits representing the timeout
- value in seconds. The maximum timeout value is 60 seconds. When changing the Baud Rate or checksum settings without altering the INIT\* pin, the ~AAI and %AANNTTCCFF commands should be sent consecutively and the time interval between the two commands should be less than the soft INIT timeout. If the soft INIT timeout is 0, then the Baud Rate and checksum settings cannot be changed using software only. The power-on reset value of the soft INIT timeout is 0.

### **Response:**

Valid command: !AA[CHKSUM](CR)
Invalid command: ?AA[CHKSUM](CR)
! Delimiter character for a valid command
? Delimiter character for an invalid command
AA Address of the responding module (00 to FF)

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

# Examples:

| Command: ~01I                 | Response: !01                        |
|-------------------------------|--------------------------------------|
| Sets the soft INIT timeout v  | alue of module 01 and                |
| returns a valid response.     |                                      |
| Command: %0101000700          | Response: ?01                        |
| Attempts to change the Bau    | d Rate of module 01 to               |
| 19200 without first altering  | the INIT * pin. The                  |
| module returns an invalid re  | esponse because the soft             |
| INIT timeout value is 0.      |                                      |
| Command: ~01T10               | Response: !01                        |
| Sets the soft INIT timeout v  | alue of module 01 to 16              |
| seconds and returns a valid   | response.                            |
| Command: ~01I                 | Response: !01                        |
| Sets the soft INIT of modul   | e 01 and returns a valid             |
| response.                     |                                      |
| Command: %0101000700          | Response: !01                        |
| Changes the Baud Rate of r    | nodule 01 to 19200                   |
| without first altering INIT * | <sup>*</sup> pin. The module returns |
| a valid response.             |                                      |
|                               |                                      |

### **Related Commands:**

Section 2.1 %AANNTTCCFF, Section 2.30 ~AAI

### **Related Topics:**

Section A.1 INIT\* Pin Operation

### Notes:

- 1. This command is only applicable to the I-7015, I-7015P, M-7015 and M-7015P.
- 2. It is recommended that the soft INIT timeout value is reset to 0 once any changes to the Baud Rate and checksum settings have been completed.

# 2.33 ~\*\*

## **Description:**

Informs all modules that the host is OK.

## Syntax:

~\*\*[CHKSUM](CR)
~ Delimiter character
\*\* Host OK command

## **Response:**

No response.

## Examples:

Command: ~\*\* No response Sends a "Host OK" command to all modules.

## **Related Commands:**

Section 2.34 ~AA0, Section 2.35 ~AA1, Section 2.36 ~AA2, Section 2.37 ~AA3EVV

### **Related Topics:**

Section A.2 Dual Watchdog Operation

107

# 2.34 ~AA0

### **Description:**

Reads the host watchdog status of a module.

## Syntax:

### ~AA0[CHKSUM](CR)

| $\sim$ | Delimiter character                         |
|--------|---|
| AA     | Address of the module to be read (00 to FF) |
| 0      | Command to read the module status           |

### **Response:**

| Valid con | mmand: <b>!AASS[CHKSUM](CR)</b>                  |
|-----------|--|
| Invalid c | ommand: <b>?AA[CHKSUM](CR)</b>                   |
| !         | Delimiter character for a valid command          |
| ?         | Delimiter character for an invalid command       |
| AA        | Address of the responding module (00 to FF)      |
| SS        | Two hexadecimal digits that represent the host   |
|           | watchdog status, where:                          |
|           | Bit 7: 0 indicates that the host watchdog is     |
|           | disabled, and 1 indicates that the host watchdog |
|           | is enabled,                                      |
|           | Bit 2: 1 indicates that a host watchdog timeout  |
|           | has occurred, and 0 indicates that no host       |
|           | watchdog timeout has occurred.                   |
|           | The host watchdog status is stored in EEPROM     |
|           | and can only be reset by using the $\sim AA1$    |
|           | command.   |
|           |  |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

## Examples:

Command: ~010 Response: !0100 Reads the host watchdog status of module 01 and returns 00, meaning that the host watchdog is disabled and no host watchdog timeout has occurred. Command: ~020 Response: !0204 Reads the host watchdog status of module 02 and returns 04, meaning that a host watchdog timeout has occurred.

## **Related Commands:**

Section 2.33 ~\*\*, Section 2.35 ~AA1, Section 2.36 ~AA2, Sec 2.37 ~AA3EVV

## **Related Topics:**

Section A.2 Dual Watchdog Operation

# 2.35 ~AA1

## **Description:**

Resets the host watchdog timeout status of a module.

## Syntax:

### ~AA1[CHKSUM](CR)

| ~  | Delimiter character                          |
|----|--|
| AA | Address of the module to be reset (00 to FF) |
| 1  | Command to reset the host watchdog timeout   |

status

### **Response:**

| Valid con | nmand:    | !AA[CHKSUM](CR)                     |
|-----------|-----------|-------------------------------------|
| Invalid c | ommand:   | ?AA[CHKSUM](CR)                     |
| !         | Delimiter | character for a valid command       |
| ?         | Delimiter | character for an invalid command    |
| AA        | Address o | of the responding module (00 to FF) |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

#### I-7013, I-7013D, I-7033, I-7033D, I-7015, I-7015P M-7033, M-7033D, M-7015, M-7015P

## Examples:

Command: ~010 Response: !0104 Reads the host watchdog status of module 01 and shows that a host watchdog timeout has occurred. Command: ~011 Response: !01 Resets the host watchdog timeout status of module 01 and returns a valid response. Command: ~010 Response: !0100 Reads the host watchdog status of module 01 and

shows that no host watchdog timeout has occurred.

## **Related Commands:**

Section 2.33 ~\*\*, Section 2.34 ~AA0, Section 2.36~AA2, Section 2.37~AA3EVV

## **Related Topics:**

Section A.2 Dual Watchdog Operation

111

# 2.36 ~AA2

## **Description:**

Reads the host watchdog timeout value of a module.

# Syntax:

## ~AA2[CHKSUM](CR)

- AA Address of the module to be read (00 to FF)
- 2 Command to read the host watchdog timeout value

# **Response:**

## Valid command : **!AAEVV[CHKSUM](CR)** Invalid command: **?AA[CHKSUM](CR)**

- ! Delimiter character for a valid command
- ? Delimiter character for an invalid command
- AA Address of the responding module (00 to FF)
- E 1: the host watchdog is enabled 0: the host watchdog is disabled
- VV Two hexadecimal digits to represent the timeout value in tenths of a second, for example, 01 denotes 0.1 seconds and FF denotes 25.5 seconds.

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

# Examples:

Command: ~012 Response: !011FF Reads the host watchdog timeout value of module 01 and returns FF, which denotes that the host watchdog is enabled and the host watchdog timeout value is 25.5 seconds.

### **Related Commands:**

Section 2.33 ~\*\*, Section 2.34 ~AA0, Section 2.35 ~AA1, Section 2.37 ~AA3EVV

## **Related Topics:**

Section A.2 Dual Watchdog Operation

113

# 2.37 ~AA3EVV

## **Description:**

Enables/disables the host watchdog and sets the host watchdog timeout value of a module.

# Syntax:

## ~AA3EVV[CHKSUM](CR)

| $\sim$ | Delimiter character                             |
|--------|---|
| AA     | Address of the module to be set (00 to FF)      |
| 3      | Command to set the host watchdog                |
| E      | 1: enable the host watchdog                     |
|        | 0: disable the host watchdog                    |
| VV     | Two hexadecimal digits to represent the timeout |
|        | value in tenths of a second, for example, 01    |
|        | denotes 0.1 seconds and FF denotes 25.5         |
|        | seconds.  |
|        |   |

## **Response:**

| Valid cor  | nmand: <b>!AA[CHKSUM](CR)</b>               |
|------------|---|
| Invalid co | mmand: <b>?AA[CHKSUM](CR)</b>               |
| !          | Delimiter character for a valid command     |
| ?          | Delimiter character for an invalid command  |
| AA         | Address of the responding module (00 to FF) |

There will be no response if the command syntax is incorrect, there is a communication error, or there is no module with the specified address.

# Examples:

Command: ~013164 Response: !01 Enables the host watchdog of module 01 and sets the host watchdog timeout value to 10.0 seconds. The module returns a valid response. Command: ~012 Response: !01164 Reads the host watchdog timeout value of module 01. The module returns 164, which denotes that the host watchdog is enabled and the host watchdog timeout value is 10.0 seconds.

# **Related Commands:**

Section 2.33 ~\*\*, Section 2.34 ~AA0, Section 2.35 ~AA1, Section 2.36 ~AA2

# **Related Topics:**

Section A.2 Dual Watchdog Operation

## Notes:

When a host watchdog timeout occurs, the host watchdog is disabled. The  $\sim$ AA3EVV command should be sent again to re-enable the host watchdog.

# 3. Modbus RTU Protocol

The Modbus protocol is developed by Modicon Inc., originally developed for Modicon controllers. Detailed information can be found at <u>http://www.modicon.com/techpubs/toc7.html</u>. You can also visit <u>http://www.modbus.org</u> to find more valuable information.

M-7000 series modules support the Modbus RTU protocol. The communication Baud Rates range from 1200bps to 115200bps. The number of data bits is fixed to 8. For M-7015/15P firmware version B202 and later, the parity can be none, even or odd. For M-7015/15P other versions and M-7033/33D, the parity and stop bits are fixed as no parity and 1 stop bit. The following Modbus functions are supported.

| <b>Function Code</b> | Description                | Section |
|----------------------|----------------------------|---------|
| 02 (0x02)            | Read input status          | 3.1     |
| 04 (0x04)            | Read input channels        | 3.2     |
| 70 (0x46)            | Read/write module settings | 3.3     |

**Note**: Function 02 is used to read the RTD wire opening status and is only supported by the M-7015/15P.

If the function specified in the message is not supported, then the module responds as follows.

#### **Error Response**

| 00 | Address        | 1 Byte | 1 to 247             |
|----|----------------|--------|----------------------|
| 01 | Function code  | 1 Byte | Function code   0x80 |
| 02 | Exception code | 1 Byte | 01                   |

If a CRC mismatch occurs, the module will not respond.

# 3.1 02 (0x02) Read Input Status

This function code is used to read the RTD wire opening status of a module.

#### Request

| 00      | Address                  | 1 Byte  | 1 to 247  |
|---------|--------------------------|---------|---|
| 01      | Function code            | 1 Byte  | 0x02  |
| 02 ~ 03 | Starting channel         | 2 Bytes | 0x80 to 0x85, where 0x80<br>corresponds to channel 0, 0x81<br>corresponds to channel 1, etc |
| 04 ~ 05 | Number of input channels | 2 Bytes | N, 1 to 6; (Starting channel + N)<br>should be less than or equal to<br>0x86                |

Note: This function is only available to the M-7015/15P.

#### Response

| 00 | Address                   | 1 Byte | 1 to 247  |
|----|---------------------------|--------|---|
| 01 | Function code             | 1 Byte | 0x02  |
| 02 | Byte count                | 1 Byte | 1   |
| 03 | Data of input<br>channels | 1 Byte | A bit corresponds to a channel.<br>When the bit is 1 it denotes that<br>the channel is enabled and is either<br>over-range, under-range or wire<br>opening. If the bit is 0 it denotes<br>that the channel is disabled or |
|    |                           |        | normal.   |

| 00 | Address        | 1 Byte | 1 to 247   |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0x82   |
| 02 | Exception code | 1 Byte | 02: starting channel out of range<br>03: (starting channel + number of<br>input channels) out of range,<br>incorrect number of bytes<br>received |

# 3.2 04 (0x04) Read Input Channels

This function code is used to read from contiguous analog input channels.

#### Request

|         | -                |         |   |
|---------|------------------|---------|---|
| 00      | Address          | 1 Byte  | 1 to 247                                  |
| 01      | Function code    | 1 Byte  | 0x04                                      |
| 02 ~ 03 | Starting channel | 2 Bytes | 0 to 2 for M-7033/33D                     |
|         |                  |         | 0 to 5 for M-7015                         |
| 04 ~ 05 | Number of input  | 2 Bytes | 1 to 3; (Starting channel $+$ N) $\leq 3$ |
|         | channels (N)     |         | for M-7033/33D.                           |
|         |                  |         | 1 to 6; (Starting channel $+$ N) $\leq 6$ |
|         |                  |         | for M-7015/15P.                           |

#### Response

| 00   | Address       | 1 Byte | 1 to 247                   |
|------|---------------|--------|----------------------------|
| 01   | Function code | 1 Byte | 0x04                       |
| 02   | Byte count    | 1 Byte | 2 x N                      |
| 03 ~ | Data of input | 2 x N  | Data in 2's complement hex |
|      | channels      | Bytes  | format.                    |

| 00 | Address        | 1 Byte | 1 to 247   |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0x84   |
| 02 | Exception code | 1 Byte | 02: starting channel out of range<br>03: (starting channel + number of<br>input channels) out of range,<br>incorrect number of bytes<br>received |

# 3.3 70 (0x46) Read/Write Module Settings

This function code is used to read the settings of the module or change the settings of the module. The following sub-function codes are supported.

| <b>Sub-function Code</b> | Description                      | Section |
|--------------------------|----------------------------------|---------|
| 00 (0x00)                | Read the module name             | 3.3.1   |
| 04 (0x04)                | Set the module address           | 3.3.2   |
| 05 (0x05)                | Read the communication settings  | 3.3.3   |
| 06 (0x06)                | Set the communication settings   | 3.3.4   |
| 07 (0x07)                | Read the type code               | 3.3.5   |
| 08 (0x08)                | Set the type code                | 3.3.6   |
| 32 (0x20)                | Read the firmware version        | 3.3.7   |
| 37 (0x25)                | Read the channel enable/disable  | 3.3.8   |
|                          | status                           |         |
| 38 (0x26)                | Set the channel enable/disable   | 3.3.9   |
| 41 (0x29)                | Read the miscellaneous settings  | 3.3.10  |
| 42 (0x2A)                | Write the miscellaneous settings | 3.3.11  |
| 49 (0x31)                | Read the LED configuration       | 3.3.12  |
| 50 (0x32)                | Write the LED configuration      | 3.3.13  |

If the module does not support the sub-function code specified in the message, then it responds as follows.

| 00 | Address        | 1 Byte | 1 to 247                      |
|----|----------------|--------|-------------------------------|
| 01 | Function code  | 1 Byte | 0xC6                          |
| 02 | Exception code | 1 Byte | 02: invalid sub-function code |

## 3.3.1 Sub-function 00 (0x00) Read module name

This sub-function code is used to read the name of a module.

| 00 | Address           | 1 Byte | 1 to 247 |
|----|-------------------|--------|----------|
| 01 | Function code     | 1 Byte | 0x46     |
| 02 | Sub function code | 1 Byte | 0x00     |

#### Response

| 00      | Address           | 1 Byte  | 1 to 247                       |
|---------|-------------------|---------|--------------------------------|
| 01      | Function code     | 1 Byte  | 0x46                           |
| 02      | Sub function code | 1 Byte  | 0x00                           |
| 03 ~ 06 | Module name       | 4 Bytes | 0x00 0x70 0x15 0x00 for M-7015 |
|         |                   |         | 0x00 0x70 0x15 0x20 for        |
|         |                   |         | M-7015P                        |
|         |                   |         | 0x00 0x70 0x33 0x00 for M-7033 |
|         |                   |         | 0x00 0x70 0x33 0x14 for        |
|         |                   |         | M-7033D                        |

| 00 | Address        | 1 Byte | 1 to 247                               |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0xC6                                   |
| 02 | Exception code | 1 Byte | 03: incorrect number of bytes received |

## 3.3.2 Sub-function 04 (0x04) Set module address

This sub-function code is used to set the address of a module.

| Request | Request           |         |                |  |  |
|---------|-------------------|---------|----------------|--|--|
| 00      | Address           | 1 Byte  | 1 to 247       |  |  |
| 01      | Function code     | 1 Byte  | 0x46           |  |  |
|         | Sub function code | 1 Byte  | 0x04           |  |  |
| 03      | New address       | 1 Byte  | 1 to 247       |  |  |
| 04 ~ 06 | Reserved          | 3 Bytes | 0x00 0x00 0x00 |  |  |

#### Response

| 00      | Address            | 1 Byte  | 1 to 247       |
|---------|--------------------|---------|----------------|
| 01      | Function code      | 1 Byte  | 0x46           |
|         | Sub function code  | 1 Byte  | 0x04           |
| 03      | Set address result | 1 Byte  | 0: OK,         |
|         |                    |         | others: error  |
| 04 ~ 06 | Reserved           | 3 Bytes | 0x00 0x00 0x00 |

| 00 | Address        | 1 Byte | 1 to 247   |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0xC6   |
| 02 | Exception code | 1 Byte | 03: new address out of range,<br>reserved bytes should be filled<br>with zero, incorrect number of<br>bytes received |

# 3.3.3 Sub-function 05 (0x05) Read communication settings

This sub-function code is used to read the communication protocol settings of a module.

#### Request

| 00 | Address           | 1 Byte | 1 to 247 |
|----|-------------------|--------|----------|
| 01 | Function code     | 1 Byte | 0x46     |
| 02 | Sub function code | 1 Byte | 0x05     |
| 03 | Reserved          | 1 Byte | 0x00     |

#### Response

122

| Address           | 1 Byte   | 1 to 247   |
|-------------------|--|--|
| Function code     | 1 Byte   | 0x46   |
| Sub function code | 1 Byte   | 0x05   |
| Reserved          | 1 Byte   | 0x00   |
| Baud Rate         | 1 Byte   | $0x03 \sim 0x0A$ , Baud Rate code, see   |
|                   |  | Section 1.10 for details.  |
| Reserved          | 1 Byte   | 0x00   |
| Parity            | 1 Byte   | For M-7015/15P firmware version  |
|                   | -  | B2.2 and later   |
|                   |  | 0x00: no parity, 1 stop bit  |
|                   |  | 0x01: no parity, 2 stop bits   |
|                   |  | 0x02: even parity, 1 stop bit  |
|                   |  | 0x03: odd parity, 1 stop bit   |
|                   |  | Reserved for other modules or  |
|                   |  | firmware version and should be   |
|                   |  | zero   |
| Reserved          | 1 Byte   | 0x00   |
| Mode              | 1 Byte   | 0: DCON protocol   |
|                   |  | 1: Modubs RTU protocol   |
| Reserved          | 2 Bytes  | 0x00 0x00  |
|                   | Address<br>Function code<br>Sub function code<br>Reserved<br>Baud Rate<br>Reserved<br>Parity<br>Reserved<br>Reserved<br>Mode | Address1 ByteFunction code1 ByteSub function code1 ByteReserved1 ByteBaud Rate1 ByteReserved1 ByteParity1 ByteReserved1 ByteReserved1 ByteI Byte1 ByteI Byte1 ByteI Byte1 ByteI Byte1 ByteI Byte1 Byte |

**Note**: This information is the data saved in the EEPROM and will be used for the next power-on reset. It is not the currently used settings.

#### M-7015/15P, M-7033/33D

| 00 | Address        | 1 Byte | 1 to 247   |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0xC6   |
| 02 | Exception code | 1 Byte | 03: reserved byte should be filled<br>with zero, incorrect number of<br>bytes received |

# 3.3.4 Sub-function 06 (0x06) Set communication settings

This sub-function code is used to set the communication protocol of a module.

| reques  | L Contraction of the second |         |  |
|---------|---|---------|--|
| 00      | Address   | 1 Byte  | 1 to 247                               |
| 01      | Function code   | 1 Byte  | 0x46                                   |
| 02      | Sub function code   | 1 Byte  | 0x06                                   |
| 03      | Reserved  | 1 Byte  | 0x00                                   |
| 04      | Baud Rate   | 1 Byte  | $0x03 \sim 0x0A$ , Baud Rate code, see |
|         |   |         | Section 1.10 for details.              |
| 05      | Reserved  | 1 Byte  | 0x00                                   |
| 06      | Parity  | 1 Byte  | For M-7015/15P firmware version        |
|         |   |         | B2.2 and later                         |
|         |   |         | 0x00: no parity, 1 stop bit            |
|         |   |         | 0x01: no parity, 2 stop bits           |
|         |   |         | 0x02: even parity, 1 stop bit          |
|         |   |         | 0x03: odd parity, 1 stop bit           |
|         |   |         | Reserved for other modules or          |
|         |   |         | firmware version and should be         |
|         |   |         | zero                                   |
| 07      | Reserved  | 1 Byte  | 0x00                                   |
| 08      | Mode  | 1 Byte  | 0: DCON protocol                       |
|         |   |         | 1: Modubs RTU protocol                 |
| 09 ~ 10 | Reserved  | 2 Bytes | 0x00 0x00                              |
|         |   |         |  |

#### Request

124

#### M-7015/15P, M-7033/33D

#### Response

| 00      | Address           | 1 Byte  | 1 to 247             |  |  |
|---------|-------------------|---------|----------------------|--|--|
| 01      | Function code     | 1 Byte  | 0x46                 |  |  |
| 02      | Sub function code | 1 Byte  | 0x06                 |  |  |
| 03      | Reserved          | 1 Byte  | 0x00                 |  |  |
| 04      | Baud Rate         | 1 Byte  | 0: OK, others: error |  |  |
| 05      | Reserved          | 1 Byte  | 0x00                 |  |  |
| 06      | Parity            | 1 Byte  | 0: OK, others: error |  |  |
| 07      | Reserved          | 1 Byte  | 0x00                 |  |  |
| 08      | Mode              | 1 Byte  | 0: OK, others: error |  |  |
| 09 ~ 10 | Reserved          | 2 Bytes | 0x00 0x00            |  |  |

**Note**: The new Baud Rate and protocol will be effective after the next power-on reset.

| 00 | Address        | 1 Byte | 1 to 247   |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0xC6   |
| 02 | Exception code | 1 Byte | 03: Baud Rate or mode out of<br>range, reserved bytes should<br>be filled with zero, incorrect<br>number of bytes received |

## 3.3.5 Sub-function 07 (0x07) Read type code

This sub-function code is used to read the type code information of a module.

#### Request

| 00 | Address           | 1 Byte  | 1 to 247                   |
|----|-------------------|---------|----------------------------|
| 01 | Function code     | 1 Byte  | 0x46                       |
| 02 | Sub function code | 1 Byte  | 0x07                       |
| 03 | Reserved          | 1 Bytes | 0x00                       |
| 04 | Channel           | 1 Byte  | 0x00 ~ 0x05 for M-7015/15P |
|    |                   |         | 0x00 for M-7033/33D        |

#### Response

| 00 | Address           | 1 Byte | 1 to 247                                 |
|----|-------------------|--------|--|
| 01 | Function code     | 1 Byte | 0x46                                     |
| 02 | Sub function code | 1 Byte | 0x07                                     |
| 03 | Type code         | •      | Type code, see Section 1.10 for details. |

|    | <b>_</b>       |        |  |
|----|----------------|--------|--|
| 00 | Address        | 1 Byte | 1 to 247   |
| 01 | Function code  | 1 Byte | 0xC6   |
| 02 | Exception code | 1 Byte | 03: reserved bytes should be filled<br>with zero, channel out of<br>range for M-7015/15P,<br>incorrect number of bytes<br>received |

## 3.3.6 Sub-function 08 (0x08) Set type code

This sub-function code is used to set the type code of a module.

| Reques | Request           |        |                                 |  |  |
|--------|-------------------|--------|---------------------------------|--|--|
| 00     | Address           | 1 Byte | 1 to 247                        |  |  |
| 01     | Function code     | 1 Byte | 0x46                            |  |  |
| 02     | Sub function code | 1 Byte | 0x08                            |  |  |
| 03     | Reserved          | 1 Byte | 0x00                            |  |  |
| 04     | Channel           | 1 Byte | $0x00 \sim 0x05$ for M-7015/15P |  |  |
|        |                   |        | 0x00 for M-7033/33D             |  |  |
| 05     | Type code         | 1 Byte | Type code, see Section 1.10 for |  |  |
|        |                   |        | details.                        |  |  |

#### Response

| 00 | Address           | 1 Byte | 1 to 247      |
|----|-------------------|--------|---------------|
| 01 | Function code     | 1 Byte | 0x46          |
| 02 | Sub function code | 1 Byte | 0x08          |
| 03 | Type code         | 1 Byte | 0: OK         |
|    |                   |        | others: error |

| -  |                |        |  |
|----|----------------|--------|--|
| 00 | Address        | 1 Byte | 1 to 247   |
| 01 | Function code  | 1 Byte | 0xC6   |
| 02 | Exception code | 1 Byte | 03: type code out of range, channel<br>out of range for M-7015/15P,<br>reserved bytes should be filled<br>with zero, incorrect number of<br>bytes received |

# 3.3.7 Sub-function 32 (0x20) Read firmware version

This sub-function code is used to read the firmware version information of a module.

#### Request

| 00 | Address           | 1 Byte | 1 to 247 |
|----|-------------------|--------|----------|
| 01 | Function code     | 1 Byte | 0x46     |
| 02 | Sub function code | 1 Byte | 0x20     |

#### Response

| 00 | Address           | 1 Byte | 1 to 247         |
|----|-------------------|--------|------------------|
| 01 | Function code     | 1 Byte | 0x46             |
| 02 | Sub function code | 1 Byte | 0x20             |
| 03 | Major version     | 1 Byte | $0x00 \sim 0xFF$ |
| 04 | Minor version     | 1 Byte | $0x00 \sim 0xFF$ |
| 05 | Build version     | 1 Byte | $0x00 \sim 0xFF$ |

| 00 | Address        | 1 Byte | 1 to 247                               |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0xC6                                   |
| 02 | Exception code | 1 Byte | 03: incorrect number of bytes received |

# 3.3.8 Sub-function 37 (0x25) Read channel enabled/disabled status

This sub-function code is used to read the enabled/disabled status of each channel in a module.

#### Request

| 00 | Address           | 1 Byte | 1 to 247 |
|----|-------------------|--------|----------|
| 01 | Function code     | 1 Byte | 0x46     |
| 02 | Sub function code | 1 Byte | 0x25     |

Note: This sub-function is only applicable to the M-7015/15P.

#### Response

| respon |                            |        |  |
|--------|----------------------------|--------|--|
| 00     | Address                    | 1 Byte | 1 to 247   |
| 01     | Function code              | 1 Byte | 0x46   |
| 02     | Sub function code          | 1 Byte | 0x25   |
| 03     | Enabled/disabled<br>status | 1 Byte | $0x00 \sim 0x3F$ , enabled/disabled<br>status of each channel, where bit 0<br>corresponds to channel 0, bit 1<br>corresponds to channel 1, etc.<br>When the bit is 1 it denotes that<br>the channel is enabled and 0<br>denotes that the channel is<br>disabled. |

| 01 Function code 1 Byte 0xC6                           |              |
|--|--------------|
|  |              |
| 02 Exception code 1 Byte 03: incorrect number received | per of bytes |

# 3.3.9 Sub-function 38 (0x26) Set channel enable/disable

This sub-function code is used to specify the channels to be enabled in a module.

#### Request

| 00 | Address                   | 1 Byte | 1 to 247  |
|----|---------------------------|--------|---|
| 01 | Function code             | 1 Byte | 0x46  |
| 02 | Sub function code         | 1 Byte | 0x26  |
| 03 | Enable/disable<br>setting | 1 Byte | $0x00 \sim 0x3F$ , enable/disable<br>setting of each channel, where bit<br>0 corresponds to channel 0, bit 1<br>corresponds to channel 1, etc.<br>When the bit is 1 it denotes that<br>the channel is enabled and 0 |
|    |                           |        | denotes that the channel is disabled.   |

**Note:** This sub-function is only applicable to the M-7015/15P.

#### Response

| 00 | Address           | 1 Byte | 1 to 247       |
|----|-------------------|--------|----------------|
| 01 | Function code     | 1 Byte | 0x46           |
| 02 | Sub function code | 1 Byte | 0x26           |
| 03 | Enable/disable    | 1 Byte | 0: OK          |
|    | setting           |        | others: error. |

#### **Error Response**

130

| 00 | Address        | 1 Byte | 1 to 247                          |
|----|----------------|--------|-----------------------------------|
| 01 | Function code  | 1 Byte | 0xC6                              |
| 02 | Exception code | 1 Byte | 03: enable/disable setting out of |
|    |                |        | range, incorrect number of        |
|    |                |        | bytes received                    |

# 3.3.10 Sub-function 41 (0x29) Read miscellaneous settings

This sub-function code is used to read the miscellaneous settings of a module.

#### Request

| 00 | Address           | 1 Byte | 1 to 247 |
|----|-------------------|--------|----------|
| 01 | Function code     | 1 Byte | 0x46     |
| 02 | Sub function code | 1 Byte | 0x29     |

#### Response

| 00 | Address                   | 1 Byte | 1 to 247   |
|----|---------------------------|--------|--|
| 01 | Function code             | 1 Byte | 0x46   |
| 02 | Sub function code         | 1 Byte | 0x29   |
| 03 | Miscellaneous<br>settings |        | Bit 7: filter setting, reserved for<br>M-7015 firmware version<br>A2.9 and before<br>0: 60Hz rejection<br>1: 50Hz rejection<br>Bit 6~0: reserved |

Note: The reserved fields are filled with zeros.

| 00 | Address        | 1 Byte | 1 to 247                               |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0xC6                                   |
| 02 | Exception code | 1 Byte | 03: incorrect number of bytes received |

# 3.3.11 Sub-function 42 (0x2A) Write miscellaneous settings

This sub-function code is used to set the miscellaneous settings of a module.

#### Request

| 00 | Address                   | 1 Byte | 1 to 247  |
|----|---------------------------|--------|---|
| 01 | Function code             | 1 Byte | 0x46  |
| 02 | Sub function code         | 1 Byte | 0x2A  |
| 03 | Miscellaneous<br>settings | 1 Byte | Bit 7: filter setting, reserved for<br>M-7015 firmware version<br>A2.9 and before<br>0: 60Hz rejection<br>1: 50Hz rejection |
|    |                           |        | Bit 6~0: reserved   |

Note: The reserved fields are filled with zeros.

#### Response

| 00 | Address           | 1 Byte | 1 to 247      |
|----|-------------------|--------|---------------|
| 01 | Function code     | 1 Byte | 0x46          |
| 02 | Sub function code | 1 Byte | 0x2A          |
| 03 | Miscellaneous     | 1 Byte | 0: OK         |
|    | settings          |        | others: error |

| 00 | Address        | 1 Byte | 1 to 247   |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0xC6   |
| 02 | Exception code | 1 Byte | 03: reserved bits should be filled<br>with zero, incorrect number of<br>bytes received |

# 3.3.12 Sub-function 49 (0x31) Read LED configuration

This sub-function code is used to read the LED configuration setting of a module.

#### Request

| 00 | Address           | 1 Byte | 1 to 247 |
|----|-------------------|--------|----------|
| 01 | Function code     | 1 Byte | 0x46     |
| 02 | Sub function code | 1 Byte | 0x31     |

Note: This sub-function is only applicable to the M-7033D.

#### Response

| P  | 0 <b></b> N <b>0</b> |        |  |
|----|----------------------|--------|--|
| 00 | Address              | 1 Byte | 1 to 247                                 |
| 01 | Function code        | 1 Byte | 0x46                                     |
| 02 | Sub function code    | 1 Byte | 0x31                                     |
| 03 | Channel              | 1 Byte | $0x00 \sim 0x02$ , the channel for which |
|    |                      |        | the data is shown on the LED             |
|    |                      |        | display                                  |
| 04 | Data format          | 1 Byte | The data format to show the data         |
|    |                      |        | on the LED display                       |
|    |                      |        | 0x00: Engineering unit                   |
|    |                      |        | 0x01: % of FSR                           |
|    |                      |        | 0x02: 2's complement                     |
|    |                      |        | hexadecimal                              |
|    |                      |        | 0x03: Ohms                               |

| Function code  | 1 Byte | 0xC6                                   |
|----------------|--------|--|
| Exception code | 1 Byte | 03: incorrect number of bytes received |
|                |        |  |

# 3.3.13 Sub-function 50 (0x32) Write LED configuration

This sub-function code is used to set the LED configuration setting of a module.

#### Request

| Itequ |                   |        |  |
|-------|-------------------|--------|--|
| 00    | Address           | 1 Byte | 1 to 247                                 |
| 01    | Function code     | 1 Byte | 0x46                                     |
| 02    | Sub function code | 1 Byte | 0x32                                     |
| 03    | Channel           | 1 Byte | $0x00 \sim 0x02$ , the channel for which |
|       |                   |        | the data is shown on the LED             |
|       |                   |        | display                                  |
| 04    | Data format       | 1 Byte | The data format to show the data         |
|       |                   |        | on the LED display                       |
|       |                   |        | 0x00: Engineering unit                   |
|       |                   |        | 0x01: % of FSR                           |
|       |                   |        | 0x02: 2's complement                     |
|       |                   |        | hexadecimal                              |
|       |                   |        | 0x03: Ohms                               |

**Note:** This sub-function is only applicable to the M-7033D.

#### Response

| 00 | Address           | 1 Byte | 1 to 247      |
|----|-------------------|--------|---------------|
| 01 | Function code     | 1 Byte | 0x46          |
| 02 | Sub function code | 1 Byte | 0x32          |
| 03 | Miscellaneous     | 1 Byte | 0: OK         |
|    | settings          |        | others: error |

#### **Error Response**

134

| 00 | Address        | 1 Byte | 1 to 247   |
|----|----------------|--------|--|
| 01 | Function code  | 1 Byte | 0xC6   |
| 02 | Exception code | 1 Byte | 03: channel out of range, incorrect<br>data format, incorrect number |
|    |                |        | of bytes received  |

# 3.4 M-7015/15P Address Mappings

For M-7015/15P firmware version B202 and later, the address mappings are as follows.

| Address | Descri                       | ption                               |               |          |         | Attribute |  |
|---------|------------------------------|-------------------------------------|---------------|----------|---------|-----------|--|
| 10129 ~ | Over/u                       | nder rar                            | nge statu     | s of cha | annel 0 | R         |  |
| 10134   | to 5                         |                                     |               |          |         |           |  |
| 00129 ~ |                              |                                     |               |          |         |           |  |
| 00134   |                              |                                     |               |          |         |           |  |
| 30001 ~ | Analog                       | ; input v                           | alue of       | channel  | 0 to 5  | R         |  |
| 30006   |                              | -                                   |               |          |         |           |  |
| 40001 ~ |                              |                                     |               |          |         |           |  |
| 40006   |                              |                                     |               |          |         |           |  |
| 40257~  | Type c                       | ode of c                            | hannel        | 0 to 5   |         | R/W       |  |
| 40262   | • •                          |                                     |               |          |         |           |  |
| 40289 ~ | Temper                       | rature o                            | ffset of      | channel  | 0 to 5  | R/W       |  |
| 40294   | in 0.1°                      | C, valid                            | range: -      | -128 ~ 1 | 27      |           |  |
| 40385 ~ | Resista                      | nce offs                            | set of ch     | annel 0  | to 5 in | R/W       |  |
| 40390   | 0.1 ohr                      | 0.1 ohms, valid range: $0 \sim 255$ |               |          |         |           |  |
| 40481   | Firmwa                       | Firmware version (low word)         |               |          |         |           |  |
| 40482   | Firmware version (high word) |                                     |               |          |         | R         |  |
| 40483   | Module                       | Module name (low word)              |               |          |         |           |  |
| 40484   | Module                       | e name (                            | (high wo      | ord)     |         | R         |  |
| 40485   | Module                       | e addres                            | s, valid      | range:   | 1 ~ 247 | R/W       |  |
| 40486   | Bits 5:0                     | )                                   |               |          |         | R/W       |  |
|         | Bauc                         | l rate, 0                           | $x03 \sim 02$ | x0A      |         |           |  |
|         | Code                         | 0x03                                | 0x04          | 0x05     | 0x06    |           |  |
|         | Baud                         | 1200                                | 2400          | 4800     | 9600    |           |  |
|         | Code                         | 0x07                                | 0x08          | 0x09     | 0x0A    |           |  |
|         | Baud                         | 19200                               | 38400         | 57600    | 115200  |           |  |
|         | Bits 7:6                     |                                     | 1 4           | 1 .      |         |           |  |
|         |                              | - ·                                 | 1, 1 stop     |          |         |           |  |
|         |                              |                                     | 1, 2  stop    |          |         |           |  |
|         |                              | -                                   | ity, 1 st     | -        |         |           |  |
|         | 11:0                         | odd pari                            | ty, 1 sto     | p bit    |         |           |  |

| Address | Description                                 | Attribute |
|---------|---|-----------|
| 40488   | Modbus response delay time in ms,           | R/W       |
|         | valid range: $0 \sim 30$                    |           |
| 40489   | Host watchdog timeout value, $0 \sim 255$ , | R/W       |
|         | in 0.1s                                     |           |
| 40490   | Channel enable/disable                      | R/W       |
| 40492   | Host watchdog timeout count, write 0        | R/W       |
|         | to clear                                    |           |
| 00257   | Protocol, 0: DCON, 1: Modbus RTU            | R/W       |
| 00259   | Filter setting, 0: 60Hz rejection, 1:       | R/W       |
|         | 50Hz rejection                              |           |
| 00260   | Modbus host watchdog mode                   | R/W       |
|         | 0: same as I-7000                           |           |
|         | 1: can use AO and DO command to             |           |
|         | clear host watchdog timeout status          |           |
| 00261   | 1: enable, 0: disable host watchdog         | R/W       |
| 00269   | Modbus data format, 0: hex, 1:              | R/W       |
|         | engineering                                 |           |
| 00270   | Host watch dog timeout status, write 1      | R/W       |
|         | to clear host watch dog timeout status      |           |
| 00272   | Write 1 to load factory calibration         | W         |
|         | parameters                                  |           |
| 00273   | Reset status, 1: first read after           | R         |
|         | powered on, 0: not the first read after     |           |
|         | powered on                                  |           |
| 00275   | 1: force to return 32767 for wire           | R/W       |
|         | opening                                     |           |

Notes:

- 1. The max number of analog output registers written in a command is 11.
- 2. The command of loading factory calibration parameters takes about 3 seconds. The next command should be sent after 3 seconds.

# 3.5 M-7015/15P Engineering Data Format Table

For M-7015/15P firmware version B202 and later, the engineering data format for Modbus protocol is supported and the table is as follows.

| Type Code | RTD Type                    | -F.S.  | + <b>F.S.</b> |
|-----------|-----------------------------|--------|---------------|
| 20        | Pt 100, $\alpha = 0.00385$  | -10000 | 10000         |
| 21        | Pt 100, $\alpha = 0.00385$  | 0      | 10000         |
| 22        | Pt 100, $\alpha = 0.00385$  | 0      | 20000         |
| 23        | Pt 100, $\alpha = 0.00385$  | 0      | 6000          |
| 24        | Pt 100, $\alpha = 0.003916$ | -10000 | 10000         |
| 25        | Pt 100, $\alpha = 0.003916$ | 0      | 10000         |
| 26        | Pt 100, $\alpha = 0.003916$ | 0      | 20000         |
| 27        | Pt 100, $\alpha = 0.003916$ | 0      | 6000          |
| 28        | Ni 120                      | -8000  | 10000         |
| 29        | Ni 120                      | 0      | 10000         |
| 2A        | Pt 1000, $\alpha = 0.00385$ | -2000  | 6000          |
| 2B        | Cu 100, $\alpha = 0.00421$  | -2000  | 15000         |
| 2C        | Cu 100, $\alpha = 0.00427$  | 0      | 20000         |
| 2D        | Cu 1000, $\alpha = 0.00421$ | -2000  | 15000         |
| 2E        | Pt 100, $\alpha = 0.00385$  | -20000 | 20000         |
| 2F        | Pt 100, $\alpha = 0.003916$ | -20000 | 20000         |
| 80        | Pt 100, $\alpha = 0.00385$  | -2000  | 6000          |
| 81        | Pt 100, $\alpha = 0.003916$ | -2000  | 6000          |
| 82        | Cu 50                       | -5000  | 15000         |
| 83        | Ni 100                      | -6000  | 18000         |

The under range value is -32768 and the over range value is +32767. For the hex data format, please refer to Section 1.10.

# 4. Troubleshooting

If you are having difficulty using the I-7000 or M-7000 module, here are some suggestions that may help. If you cannot find the answers you need in these guides, contact ICP DAS Product Support. Contact information is located in Section 1.13.

# 4.1 Communicating with the module

If you attempt to communicate with the module and receive no response, first check the following:

- Ensure that the supplied power is within the range of +10 to +30 V DC. If the supplied power is OK, then the power LED should be on.
- When the module receives a command, the power LED is set to "off". The power LED is shown as "on" after the module responds. This method can be used to check whether the module has received a command sent from the host.
- If possible, use another device to check whether the host can communicate with the device through the same RS-485 network.
- If the host is a PC installed with a Windows operating system, then execute the DCON Utility to determine whether the module can be found. The DCON Utility can be downloaded from the ICP DAS website <u>http://www.icpdas.com</u>. The DCON Utility documentation can be found in the "Getting Started For I-7000 Series Modules" manual.
- Set the module to "INIT mode" and communicate with the module using the following settings: address 00, Baud Rate 9600bps, no checksum and DCON protocol. See Section A.1 for details.

# 4.2 Reading Data

If the data read from the input channel is not correct, first check the following:

- Ensure that the type code and data format settings are correct. For the I-7013/13D, I-7033/33D and M-7033/33D, the type code is set by using the %AANNTTCCFF command, see Section 2.1 for details. For the I-7015/15P and M-7015/15P, the type code is set by using the \$AA7CiRrr command, see Section 2.14 for details. The data format is set by using the %AANNTTCCFF command. For the Modbus RTU protocol, the type code is set by using sub-function 08h of the function 46h.
- Connect a resistor, instead of the RTD sensor, using the 2-wire RTD connection as shown in Section 1.6. The resistance of the resistor should be within the range shown in the RTD Type and Data Format Table in Section 1.10. For example, if the type code is set to 20, then the resistance should be larger than 60.6 ohms and less than 138.5 ohms. Change the data format to ohms, see Sections 1.10 and 2.1, and check whether the data reading is correct. For M-7015/15P and M-7033/33D, this should be performed with DCON protocol.
- If the resistance read by the module is still incorrect, then it may be because the calibration parameters stored in the non-volatile memory are corrupted, which means that the module should be recalibrated. Be sure to read Section 1.9 in detail before performing the calibration. For the I-7015/15P and M-7015/15P, you can send the \$AAS1 DCON command, see Section 2.26 for details, to reload the factory calibration parameters.

# A. Appendix

# A.1 INIT Mode

Each I-7000 and M-7000 module has a built-in EEPROM to store configuration information such as module address, type code, Baud Rate, etc. Occasionally, the configuration of a module may be forgotten and there are no visual indications of the configuration of the module. It is difficult to communicate with the module when the configuration of the module is unknown. To help avoid this problem, the I-7000 and M-7000 series has a special mode called **"INIT mode"**. When the module is powered on in **"INIT mode"** the configuration of the module is reset as follows, allowing it to be operated as normal.


- 1. Address: 00
- 2. Baud Rate: 9600 bps
- 3. No checksum
- 4. Protocol: DCON

The configuration information stored in the EEPROM is not changed and can be read by sending the \$002(CR) command at 9600bps.

There are commands that require the module to be in INIT mode. They are:

- 1. %AANNTTCCFF when changing Baud Rate and checksum settings. See Section 2.1 for details.
- 2. \$AAPN, see Section 2.24 for details.

Originally, the INIT mode is accessed by connecting the INIT\* terminal to the GND terminal. New I-7000 and M-7000 modules have the INIT switch located on the rear side of the module allow easier access to the INIT mode. For these modules, INIT mode is accessed by sliding the INIT switch to the Init position as shown below.

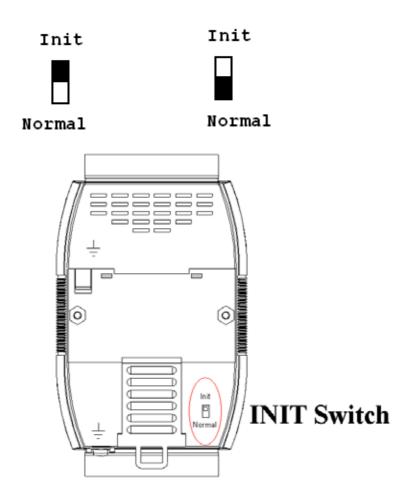

# A.2 Dual Watchdog Operation

## **Dual Watchdog = Module Watchdog + Host Watchdog**

The Module Watchdog is a hardware reset circuit that monitors the operating status of the module. While working in harsh or noisy environments, the module may be shut down by external signals. The circuit allows the module to work continuously without disruption.

The Host Watchdog is a software function that monitors the operating status of the host. Its purpose is to prevent problems due to network/communication errors or host malfunctions. When a host watchdog timeout occurs, the module will reset all outputs to a safe state in order to prevent any erroneous operations of the controlled target.

I-7000 and M-7000 series modules include an internal Dual Watchdog, making the control system more reliable and stable.


For more information regarding the Dual Watchdog, please refer to Chapter 5 of the "**Getting Started For I-7000 Series Modules**" manual that can be downloaded from the ICP DAS website <u>http://www.icpdas.com</u>.

# A.3 Frame Ground

Electronic circuits are constantly vulnerable to Electro-Static Discharge (ESD), which become worse in a continental climate area. Some I-7000 and M-7000 modules feature a new design for the frame ground, which provides a path for bypassing ESD, allowing enhanced static protection (ESD) capability and ensures that the module is more reliable.


Either of the following options will provide a better protection for the module:

- 1. If the module is DIN rail mounted, connect the DIN rail to the earth ground because the DIN rail is in contact with the upper frame ground as shown in the figure below.
- 2. Alternatively, connect the lower frame ground terminal to a wire and connect the wire to the earth ground, as shown in the figure below.

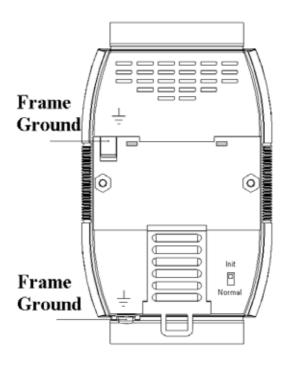

144


New DIN rail models are available that can easily be connected to the earth ground. Each is made of stainless steel, which is stronger than those made of aluminum. There is a screw at one end and a ring terminal is included as shown in the figure below. Refer to Section 1.12.1 for more information about the new DIN rail models.

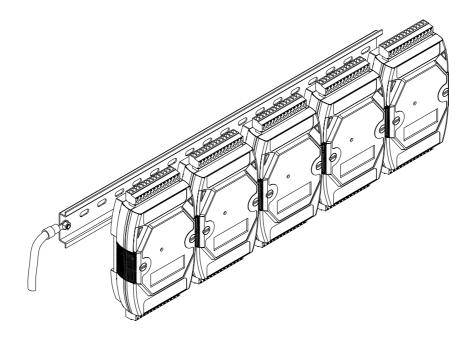

145

# A.4 Node Information Area

Each I-7000 and M-7000 module has a built-in EEPROM to store configuration information such as module address, type code, Baud Rate, etc. One minor drawback is that there are no visual indications of the configuration of the module. New I-7000 and M-7000 modules include node information areas that are protected by a cover, as shown below, and can be used to make a written record of the node information, such as module address, Baud Rate, etc. To access the node information areas, first slide the covers outward, as shown in the figure below.

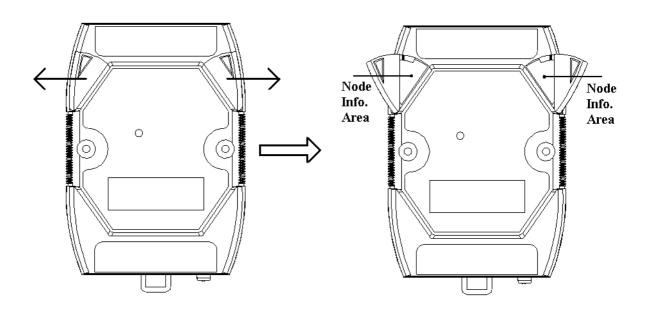

# A.5 RTD

An Resistance Temperature Detector (RTD) is a temperature detector that senses temperature by measuring the resistance of a material. For RTDs, the resistance increases as the temperature rises and the relationship can be expressed as:

$$R = R_0 [1 + \alpha_1 (T - T_0) + \alpha_2 (T - T_0)^2 + ... + \alpha_n (T - T_0)^n]$$

where  $R_0$  is the resistance at the reference temperature  $T_0$ . Materials used for RTDs can be gold, silver, copper or platinum. The principal advantages of RTDs are their high sensitivity, high repeatability, long-term stability and accuracy for platinum and the low cost for copper and nickel. Nickel offers a higher sensitivity but has smaller linear range than platinum and tends to drift with time. Copper has a broad linear range, but it oxidizes at moderate temperature. Platinum, with a nearly linear temperature versus resistance relationship, offers the best performance and has become the most-used metal for RTDs. The 100-ohm probe, designated as Pt100, is an industry standard. RTDs are recommended for applications where accuracy over a wide temperature range is the most important factor.

147

# A.6 Resistance Measurement

The I-7013/13D, I-7015/15P, I-7033/33D, M-7015/15P and M-7033/33D modules can be used for resistance measurement. To measure the resistance, connect the resistor using the 2-wire RTD connection, as shown in Section 1.6, and set the data format to ohms. To set the data format, send the %AANNTTCCFF command to the module, see Section 2.1 for details, or use the DCON utility, refer to Chapter 2 of the "**Getting Started For I-7000 Series Modules**" manual that can be downloaded from the ICP DAS website <u>http://www.icpdas.com</u>. For M-7015/15P and M-7033/33D, it has to be switched to DCON protocol for resistance measurement.

The maximum resistances that can be measured are as follows:

| Type Code  | Maximum Resistance                                      |  |  |
|--|---|--|--|
| 82*  | 200 ohms  |  |  |
| 20 to 29 375 ohms                                      |   |  |  |
| 2A** 3200 ohms   |   |  |  |
| *: only available with firmware version B1.5 and later |   |  |  |
| **: only availab                                       | **: only available with firmware version B1.3 and later |  |  |

For I-7013/13D:

148

For I-7033/33D and M-7033/33D:

| Type Code  | Maximum Resistance |  |  |
|--|--------------------|--|--|
| 82*  | 200 ohms           |  |  |
| 20 to 29   | 375 ohms           |  |  |
| 2A   | 3200 ohms          |  |  |
| *: only available with firmware version B1.5 and later |                    |  |  |

## For I-7015/15P and M-7015/15P:

For firmware version A2.9 and before:

| Type Code | Maximum Resistance |
|-----------|--------------------|
| 2B, 2C    | 160 ohms           |
| 20 to 29  | 320 ohms           |
| 2A, 2D    | 3000 ohms          |

#### For firmware version B1.9 and later:

| Type Code | Maximum Resistance |
|-----------|--------------------|
| 2B, 2C    | 200 ohms           |
| 20 to 29  | 375 ohms           |
| 2A, 2D    | 3200 ohms          |